


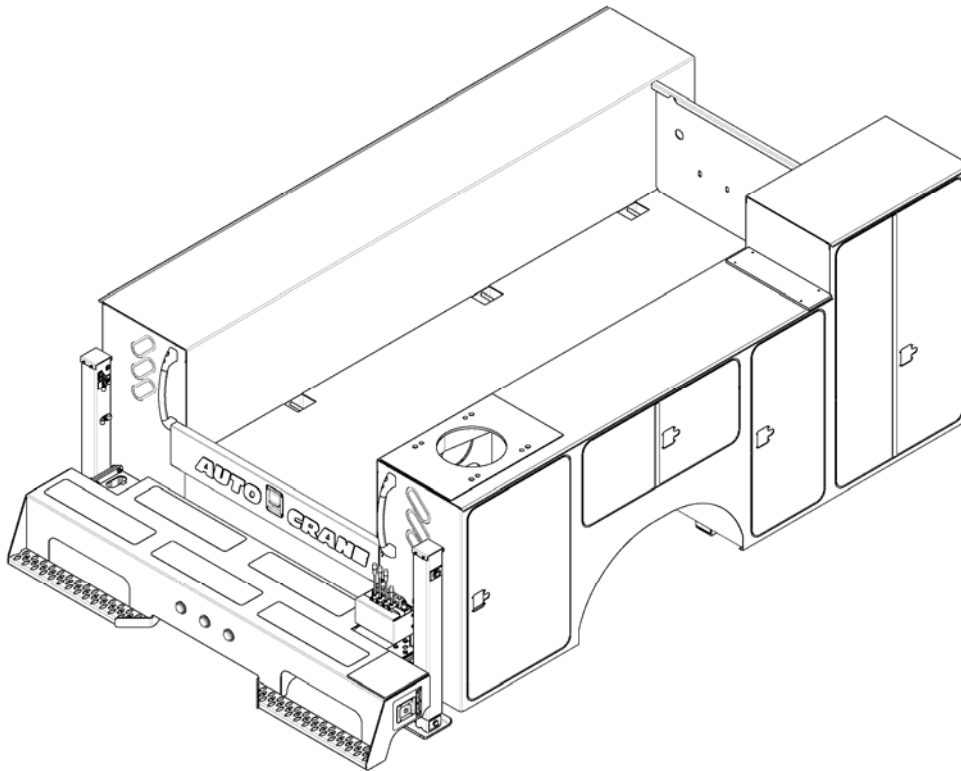

TITAN™ 38

OWNERS MANUAL



Serial No. _____

Mailing Address:
P.O. Box 580697
Tulsa, OK 74158-0697
Physical Address:
4707 N. Mingo Rd.
Tulsa, OK 74117-5904

Phone 1-800-777-2760
Fax 1-888-848-5445
<http://www.autocrane.com>



Auto Crane Warranty Registration

Fax Transmission

To: Warranty Department Fax: 1-888-848-5445
 From: _____ Date: _____
 Re: Product Registration Pages: _____

End User Information: (Required for Warranty Activation)

Name: _____ Phone: _____
 Address: _____
 City: _____ State: _____ Zip: _____
 Contact: _____ E-mail Address: _____

Distributor Information: (Required for Warranty Activation)

Name: _____
 Address: _____
 City: _____ State: _____ Zip: _____
 Contact: _____ E-mail Address: _____

Product Information: (Required for Warranty Activation)

Model No.: _____ Serial No.: _____
 Date Product Delivered: _____ Date Processed: * _____
 VIN # _____ * For Auto Crane use only

ONE REGISTRATION FORM PER UNIT (CRANE OR BODY)

Registration form must be mailed or faxed within 15 days of customer installation.

Mail to:
 Warranty Department
 Auto Crane Company
 P.O. Box 581510
 Tulsa, OK 74158-0697

TITAN 38 OWNER'S MANUAL REVISION RECORD

Revision Date	Section(s) Or Page(s)	Description of Change
3/18/2012	All	New Manual
8/03/2012	8-6	Added items to ToolBox Service Part Numbers BOM
1/22/13	1-4	Revised General Dimensions on Rear View

Notes:

1. The information contained in this manual is in effect at the time of this printing. It does not cover all instructions, configurations, accessories, etc. If you require additional information, please contact **Auto Crane Company**.
2. **Auto Crane Company** reserves the right to update this material without notice or obligation.

NOTES

WARNINGS

WARNING! Federal law (49 CFR 571) requires that the Final Stage Manufacturer of a vehicle certify that the vehicle complies with all applicable federal regulations. Any modifications performed on the vehicle prior to the final state are also considered intermediate stage manufacturing and must be certified as to compliance. The installer of this crane and body is considered one of the manufacturers of the vehicle. As such a manufacturer, the installer is responsible for compliance with all applicable federal and state regulations, and is required to certify that the vehicle is in compliance.

WARNING! It is the further responsibility of the installer to comply with the OSHA Truck Crane Stability Requirements as specified by 29 CFR 1910.180 (C) (1).

WARNING! NEVER OPERATE THE CRANE NEAR ELECTRICAL POWER LINES!

Death or serious injury will result from boom, line, or load contacting electric lines. Do not use crane within 10 feet (3.05m) of electric power lines carrying up to 50,000 volts. One-foot additional clearance is required for every additional 30,000 volts or less. **SEE DANGER DECAL (P/N 040529)** in this Owner's Manual.

WARNING! Failure to correctly plumb and wire crane can cause inadvertent operation and damage to crane and/or personnel!

WARNING! Vehicle must meet Federal law (49 CFR 393) which states the required parts and accessories necessary for safe operation. This includes lighting, reflectors, etc...

WARNING! Federal law (49 CFR 568) requires each final-stage manufacturer to complete the vehicle in such a manner that it conforms to the standards in effect on the date of manufacture of the incomplete vehicle, the date of final completion, or a date between those two dates. This requirement shall, however, be superseded by any conflicting provisions of a standard that applies by its terms to vehicles manufactured in two or more stage. Each final-stage manufacturer shall affix a label to the completed vehicle in accordance with 49 CFR 567.5.

READ THIS PAGE

TABLE OF CONTENTS

TITAN 38 BODY

TITAN BODY INTRODUCTION	1-1.0
GENERAL DIMENSIONS	1-2.0
MOUNTING AND INSTALLATION	2-1.0
VEHICLE OPERATION AND PREPARATIONS	3-1.0
TITAN 38 DOOR	4-1.0
TITAN 38 TAILGATE	4-2.0
OUTRIGGER, FULLY MANUAL, RIGHT SIDE DIMENSIONAL	5-1.0
OUTRIGGER, FULLY MANUAL, LEFT SIDE DIMENSIONAL	5-2.0
OUTRIGGER, FULLY HYDRAULIC, RIGHT SIDE DIMENSIONAL	5-3.0
OUTRIGGER, FULLY HYDRAULIC, LEFT SIDE DIMENSIONAL	5-4.0
OUTRIGGER SHIP KIT	5-5.0
OUTRIGGER INSTALLATION	5-6.0
OUTRIGGER ASSY, FULLY MANUAL	5-7.0
OUTRIGGER ASSY, FULLY HYDRAULIC	5-9.0
OUTRIGGER HYDRAULIC LEG ASSEMBLY	5-15.0
RECEIVER HITCH INSTALLATION	6-1.0
BUMPER INSTALLATION	6-4.0
BUMPER ASSEMBLY 12"	6-6.0
BUMPER ASSEMBLY 24"	6-8.0
MASTER LOCK SYSTEM	7-1.0
SHELF LOCATION	8-1.0
SLIDE OUT TRAY	8-3.0
TOOL BOX	8-5.0
OXY/ACET ASSY	9-1.0
OXY DIVIDER/SHELVING PACKAGE	9-2.0
DROP WELL	9-3.0
PARTS WASHER	9-4.0
ROPE LIGHT KIT	10-1.0
COMPARTMENT LIGHT KIT	10-4.0
FLOOD LIGHT KIT	11-1.0
BOOM SUPPORT	12-1.0
BULKHEAD RESERVOIR	13-1.0
AIR RECEIVER TANK 30 GALLON	13-2.0
FIRE EXTINGUISHER	14-1.0
BACK UP ALARM	15-1.0
BODY PREVENTIVE MAINTENANCE	16-1.0

TITAN BODY INTRODUCTION

Auto Crane products are designed to provide many years of safe, trouble-free, dependable service when properly used and maintained.

To assist you in obtaining the best service from your crane and to avoid untimely crane and/or vehicle failure, this manual provides the following operating and service instructions. It is specifically recommended that all operating and service personnel consider this manual as mandatory material for reading and study before operating or servicing Auto Crane products. It is highly recommended that crane owners, equipment managers, and supervisors also read this manual.

For your convenience the overall dimensions of the Titan are included on the General Dimension Drawing. Center of gravity and door openings are also shown.

Remember, the body adds weight to the vehicle. Adding weight may change the driving and riding characteristics of the vehicle unless the appropriate overload spring(s) are installed on the truck. The payload of the vehicle is reduced by the weight of the body. The operator should exercise care when loading the vehicle. Distributing the payload on the vehicle evenly will greatly improve the driving and riding characteristics of the vehicle.

Auto Crane Company issues a limited warranty certificate with each unit sold. See last page for warranty.

It has always been Auto Crane Company policy to handle all warranty claims we receive as promptly as possible. If a warranty claim involves discrepant material or workmanship, Auto Crane will take immediate corrective action. It is understandable that Auto Crane Company cannot assume responsibility of liability when it is obvious that our products have been abused, misused, overloaded or otherwise damaged by inexperienced persons trying to operate the equipment without reading the manual.

Auto Crane will not assume responsibility or liability for any modifications or changes made to unit, or installation of component parts without authorization.

Auto Crane maintains a strong distributor network and a knowledgeable Customer Service Department. In most cases, an equipment problem is solved via phone conversation with our customer service department. The customer service department also has the ability to bring a local distributor, a regional sales manager, or a factory serviceman into the solution of an equipment problem.

If, through no fault of Auto Crane Company, it is necessary to send an experienced factory serviceman on a field service call the rates stated in the Auto Crane Distributor's Flat Rate Manual will apply.

Auto Crane Company's extensive Research and Development Program allow our customers to use the best equipment on the market. Our Engineering Staff and our knowledgeable sales people are always available to our customers in solving crane and winch-type application problems. When in doubt, call the Auto Crane factory.

Note: This manual should remain with the body at all times.


DISTRIBUTOR ASSISTANCE:

Should you require any assistance not given in this manual, we recommend that you consult your nearest Auto Crane Distributor. Our distributors sell authorized parts and have service departments that can solve almost any needed repair. This manual does not cover all maintenance, operating, or repair instructions pertinent to all possible situations. **If you require additional information, please contact the Auto Crane Company.**


The information contained in the manual is in effect at the time of this printing. Auto Crane Company reserves the right to update this material without notice or obligation.

NOTES

TITAN 38 / 60CA GENERAL DIMENSIONS

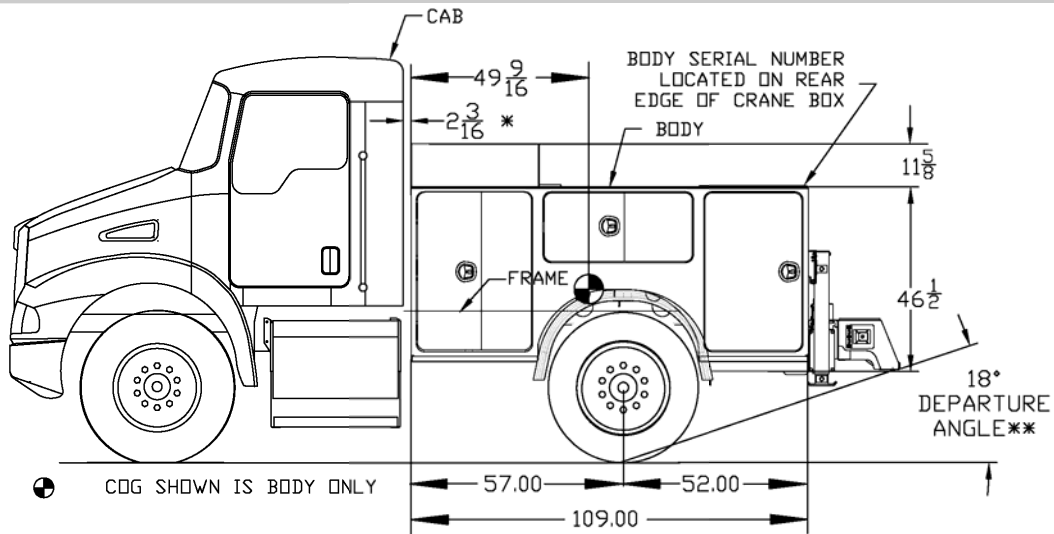

* CHECK CHASSIS BODY BUILDER BOOK FOR REQUIRED GAP BETWEEN BODY & CHASSIS
 **DEPARTURE ANGLE SHOWN FOR REFERENCE ONLY. ANGLE WILL VARY DEPENDING ON CHASSIS.

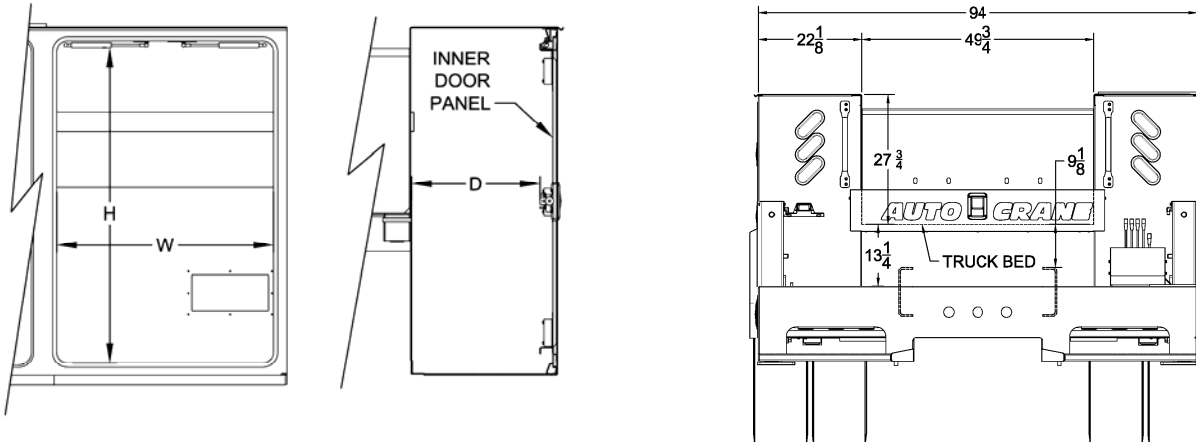


TYPICAL ALL COMPARTMENTS


TITAN 38 60CA				
DOOR OPENING	WIDTH (W)	HEIGHT (H)	DEPTH (D)	VOL. CU. FT. [^]
SIZES/DEPTH				
FRONT STD.	34 ⁵ / ₈	46	21 ⁷ / ₈	20.16
FRONT TALL	34 ⁵ / ₈	57 ³ / ₄	21 ⁷ / ₈	25.31
HORIZONTAL	44	21 ¹ / ₂	21 ⁷ / ₈	11.98
REAR***	29 ¹⁵ / ₁₆	46	21 ⁷ / ₈	17.43
INSIDE COMPARTMENT SIZES (STD)			TOTAL BODY CU. FT.	99.14
INSIDE COMPARTMENT SIZES (TALL)			TOTAL BODY CU. FT.	104.29
			WEIGHT	2685 LBS

*** REAR COMPARTMENT DIMENSIONS/VOLUME ARE FOR NON CRANE BOX ONLY
[^] VOLUME IS TAKEN FROM WALL TO WALL DIMENSIONS **NOT DOOR OPENING SIZES**

TITAN 38—84CA GENERAL DIMENSIONS

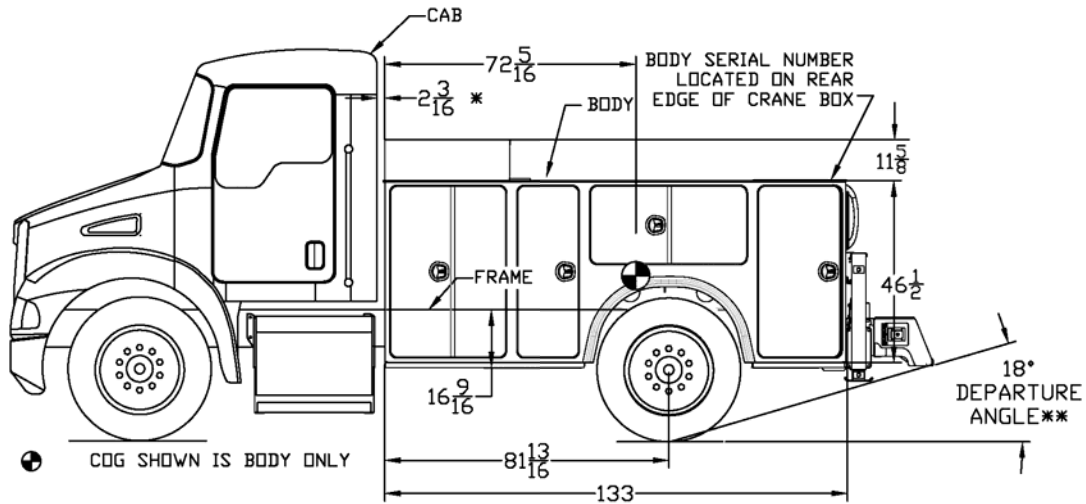

* STANDARD GAP USING 84CA BODY. CHECK CHASSIS BODY BUILDER BOOK FOR REQUIRED GAP BETWEEN BODY & CHASSIS
 **DEPARTURE ANGLE SHOWN FOR REFERENCE ONLY. ANGLE WILL VARY DEPENDING ON CHASSIS.


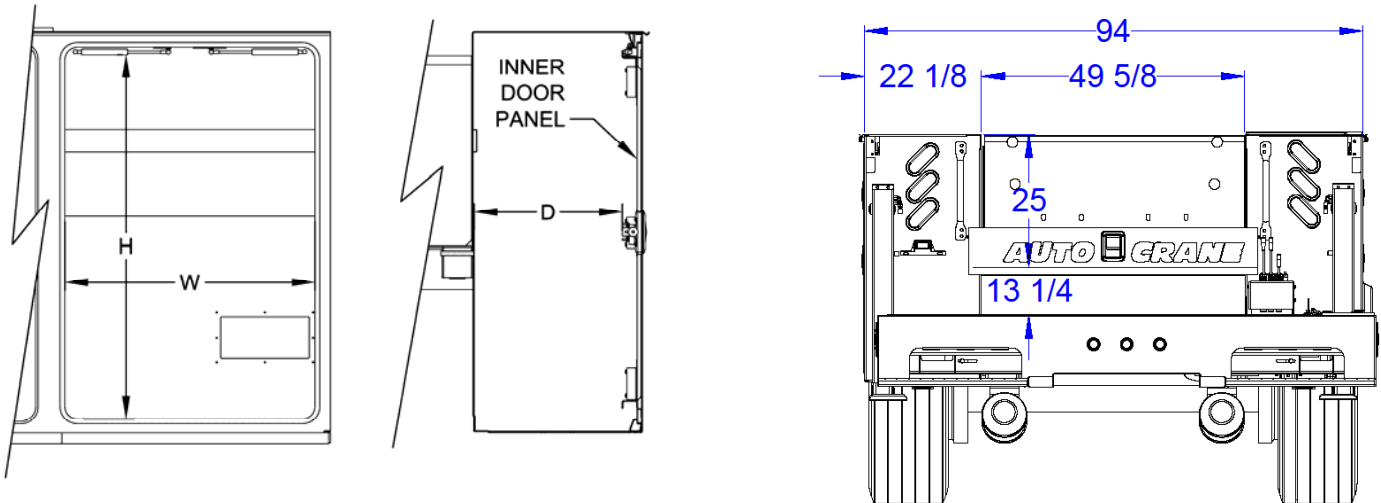


TITAN 38 84CA				
DOOR OPENING SIZES/DEPTH	WIDTH (W)	HEIGHT (H)	DEPTH (D)	VOL. CU. FT. [^]
	FRONT STD.	36 1/4	46	21 7/8
FRONT TALL	36 1/4	57 3/4	21 7/8	26.5
MID	22 1/4	46	21 7/8	12.96
HORIZONTAL	44	21 1/2	21 7/8	11.98
REAR***	29 15/16	46	21 7/8	17.43
INSIDE COMPARTMENT SIZES (STD)			TOTAL BODY CU. FT.	126.95
INSIDE COMPARTMENT SIZES (TALL)			TOTAL BODY CU. FT.	132.34
WEIGHT				3330 LBS

*** REAR COMPARTMENT DIMENSIONS/VOLUME ARE FOR NON CRANE BOX ONLY
[^] VOLUME IS TAKEN FROM WALL TO WALL DIMENSIONS **NOT DOOR OPENING SIZES**


TITAN 38 MOUNTING AND INSTALLATION

Check to make sure the following items are with your Titan body. If components are missing, contact AutoCrane Customer Service Department.

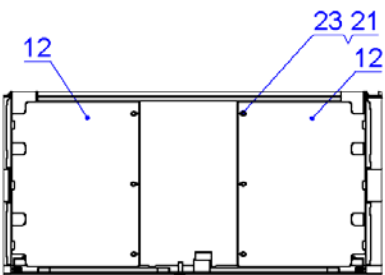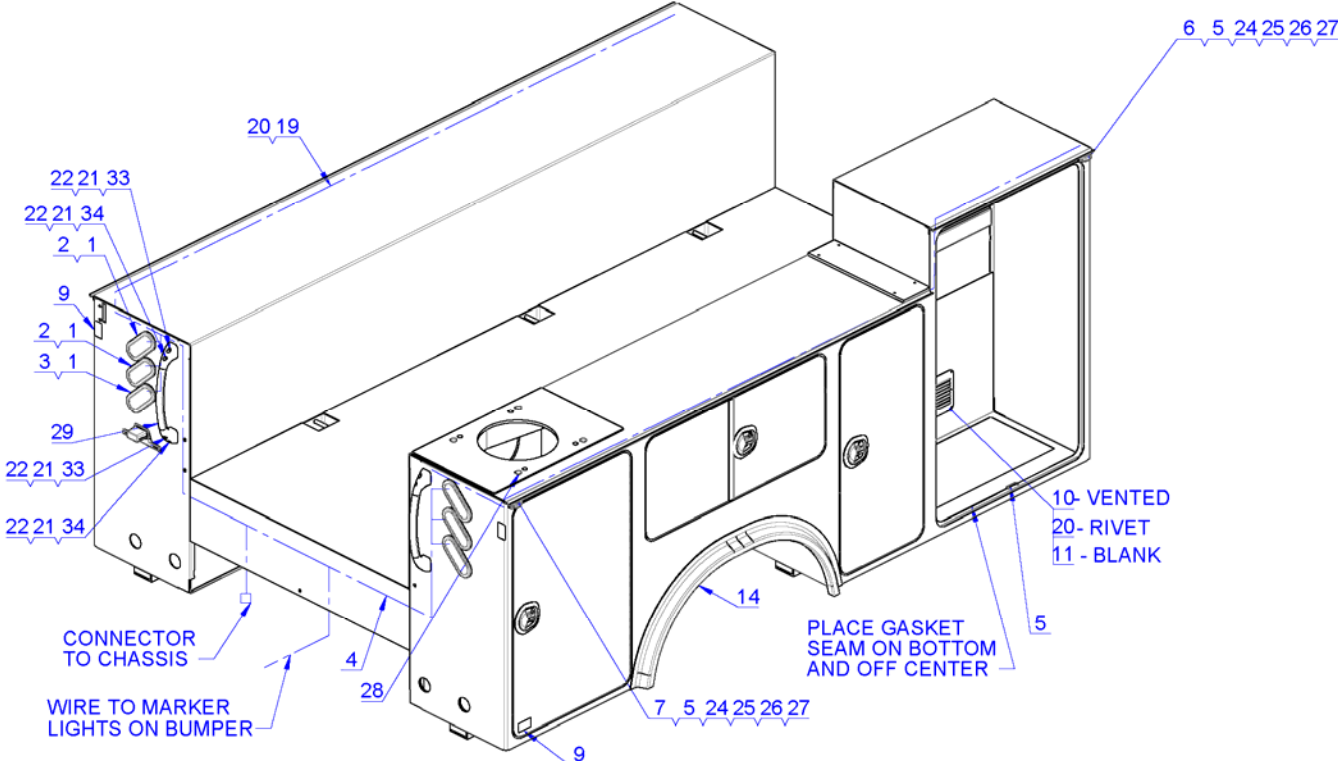


**BOTTOM VIEW
LEFT-SIDE WHEEL WELL**

NOTE: APPLY ATV SEALANT TO ONE END OF DOOR GASKET. PRESS BOTH ENDS TOGETHER AFTER INSTALLING. SMEAR ANY EXCESS SEALANT AROUND THE SEAM WHEN COMPLETE.

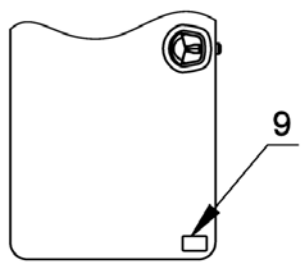

REAR DOOR

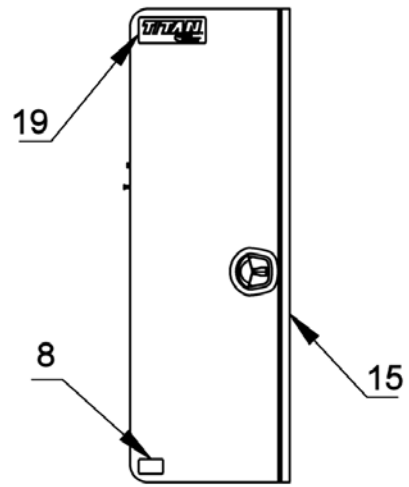

FRONT DOOR

ITEMS LISTED ON THE FOLLOWING PAGE ARE INCLUDED IN THE TITAN 38 BODY SHIP KIT. P/N 739408010

TITAN 38

MOUNTING AND INSTALLATION

ITEM NO.	QTY	PART NUMBER	DESCRIPTION
1	6	739408005	GROMMET, LIGHT OVAL
2	4	739408003	LIGHT, STOP/TURN/TAIL OVAL
3	2	739408004	LIGHT, BACK-UP OVAL
4	1	560106003	HARNESS, BODY WIRING 3-LIGHT
5	4	560449000	BRACKET MOUNTING
6	2	560450000	CLEARANCE MARKER AMBER
7	2	560451000	CLEARANCE MARKER RED
8	2	560452000	REFLECTOR AMBER
9	4	560453000	REFLECTOR RED
10	1	752221000	PANEL LOUVER
11	2	752222000	PANEL BLANK F/ MID VENT OPENING
12	2	738706000	COVER FUEL LINE
13	2	739408002	GUARD, ROCK ALUMINUM TITAN
14	1	738597001	FENDERETTE INSTL KIT TITAN 38
15	168in	750740000	GASKET FL 1in X 1/8
16	12	750737000	TIE WRAP PUSH-IN
17	12	750738000	STICK-ON, CABLE TIE MOUNT
18	32in	750736000	LOOM, CONVOLUTED, 7/16 ID
19	2	560510000	DECAL "TITAN"
20	20	754028000	RIVET POP 3/16 DIA X 1/4 - 3/8 GRIP SS
21	14	020200000	WASHER SP LK 1/4
22	8	015900000	NUT HX 1/4-20UNC SS
23	6	005901000	SCREW HX HD 1/4-20UNC X 1/2 LG
24	8	006020000	SCREW PN HD #6-32UNC X 1LG
25	8	019600000	WASHER SP LK #6
26	8	015400000	NUT HX #6-32UNC
27	4	560540000	GROMMET, NYLON
28	4	739209000	CAPLUG, 1" DIA
29	2	760629000	HANDLE, GRAB PLASTIC BLACK W/GRIP
30	1	750980000	LAMP, LICENCE W/BRACKET
31	1	560114000	GASKET, DOOR 2003
32	8	560525000	T-HANDLE ASSY
33	4	739408008	SCREW, FLAT 1/4-20UNC 1-3/8LG
34	4	739408007	SCREW, FLAT 1/4-20UNC 1-3/4LG

TITAN 38 MOUNTING AND INSTALLATION

!! WARNINGS !!


DO NOT WELD TO TRUCK FRAME. REFER TO BODY-BUILDERS MANUAL FOR FUTURE INFORMATION

INSTALLATION INSTRUCTIONS BELOW ARE COMMON MOUNTING PRACTICES, ALWAYS REFER TO CHASSIS BODY-BUILDERS MANUAL FOR ACCEPTABLE MOUNTING OPTIONS

CUTTING AFTER-FRAME MAY BE REQUIRED. REFER TO CHASSIS BODY-BUILDERS MANUAL FOR PROPER CUTTING PROCEDURE.

MINIMUM CHASSIS REQUIREMENTS

- 11,400 LBS GVWR
- 34" FRAME WIDTH
- HEAVY-DUTY REINFORCED FRAME

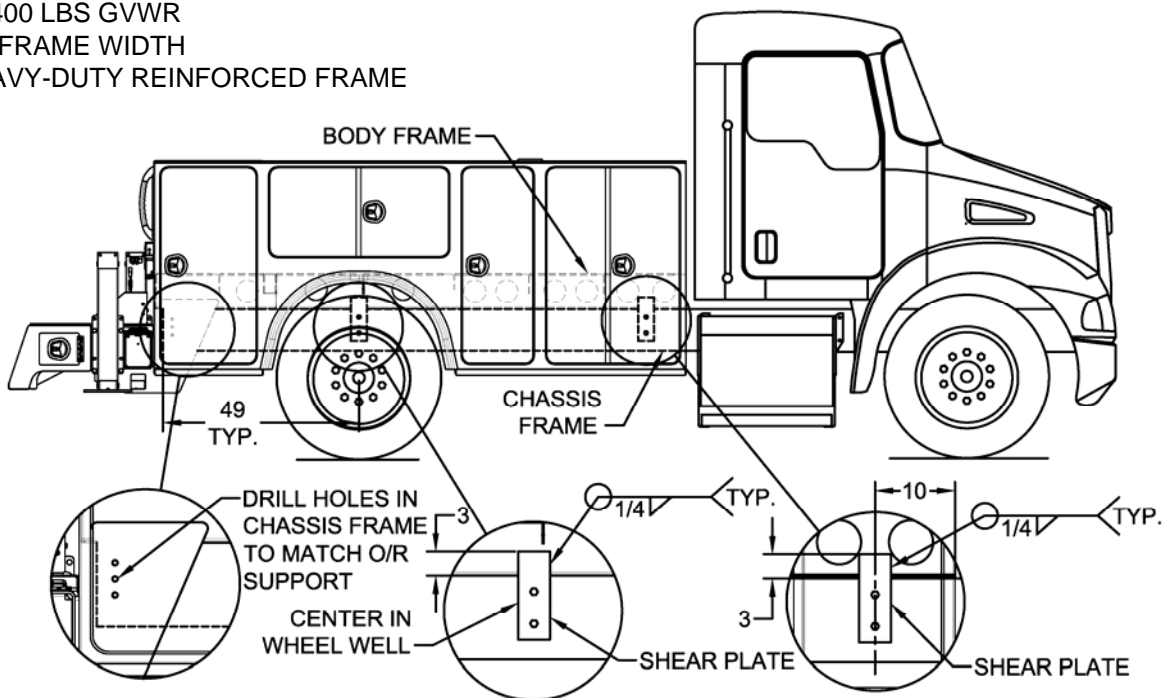

ALL DIMENSIONS SHOWN ARE IN INCHES.

MOUNTING INSTRUCTIONS:

AVAILABLE MOUNTING KIT—560580000 INCLUDES HARDWARE & SHEAR PLATES

1. Pick up body using a 4-point choke chain rated for the body weight shown in Gen. Dimension page. Use the tie down locations in bed for lifting points.
2. Center body along the width of the chassis and center the wheel well with the tires.
NOTE: MAKE SURE YOU HAVE ENOUGH CLEARANCE BETWEEN BODY AND CHASSIS CAB PER THE MANUFACTURERS REQUIREMENTS.
3. Locate the shear plates as shown in the above diagram. Drill (2) $21/32\text{\O}$ holes into each shear plate and chassis frame.

NOTE: LOCATE HOLE FOR BOLT SO THAT THE BOLT, WASHER, AND NUT WILL NOT INTERFERE WITH ANY CHASSIS COMPONENTS. LOCATIONS OF SHEAR PLATES SHOWN ABOVE ARE PREFERRED LOCATIONS. THEY MAY NEED TO BE MOVED TO ACCOMMODATE COMPONENTS ON THE CHASSIS RAILS.

TITAN 38

MOUNTING AND INSTALLATION

- Using the pre-drilled holes in the outrigger support, drill (3)21/32"Ø holes into chassis rail per side.
- Weld shear plates to the body frame.


NOTE: FOLLOW CHASSIS RECOMMENDATIONS WHEN WELDING BODY COMPONENTS.

- Bolt Body to Chassis Frame using 5/8" UNC Grade 8 Hardware (Bolt, Washer, Nut, Etc...) Torque to 180 Ft-Lbs

Note: If you would like to mount the body using another method, please refer to the chassis manufacturer's body builder guide or the NTEA handbook.


- Install Fenderettes (Supplied) to the body: (Reference figure below)
 - Wipe mounting surface with clean cloth to remove any dirt or oils.
 - Locate Fenderette to sidepack, aligning the bottom edges and centering it on fender well opening.
 - Draw lines on fender with oil pencil or other erasable marker to assist with alignment when adhesive is applied.
 - Apply adhesive to fenderette flange per instructions on cartridge. 1/8" bead in center of flange is recommended. The nozzle does not need to be cut to provide 1/8" bead.
 - Use lines from step 3 to locate fenderette to sidepack, aligning the bottom edges and centering it on the fender well opening as before.
 - Using wide surface area clamps, clamp fenderette into place to insure full contact between the fenderette flange and the sidepack.
 - Remove any excess adhesive from outer edges.
 - Allow adhesive to cure 3 to 4 hours before removing clamps. Adhesive will be fully cured in 8 to 24 hours.

(If you would like to paint the fenderette, you must use the following components. Surface must be cleaned with DuPont #3919S Prep-Sol or equivalent, Primed with Polypropylene primer (Ditzler DPX800 or equivalent), and use a flex additive (Ditzler DX369 or equivalent).

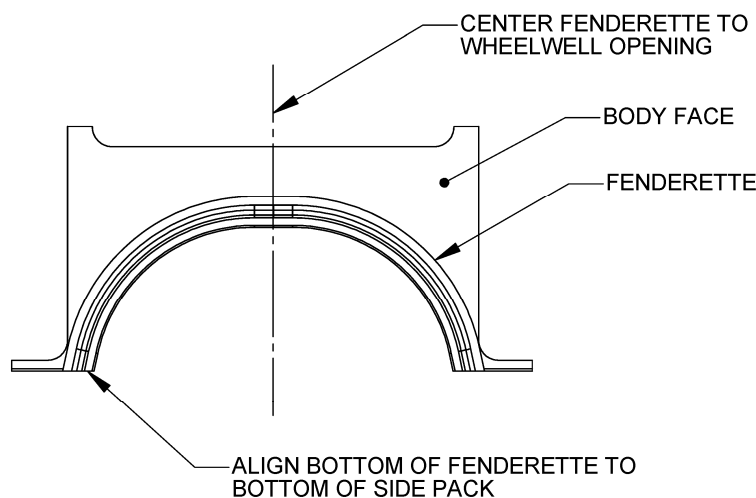

- Install wiring, lights, and reflectors onto body. Reference schematic on following page for wiring detail. Reference view at beginning of Mounting and Installation section for location of remaining components.

TITAN 38 MOUNTING AND INSTALLATION

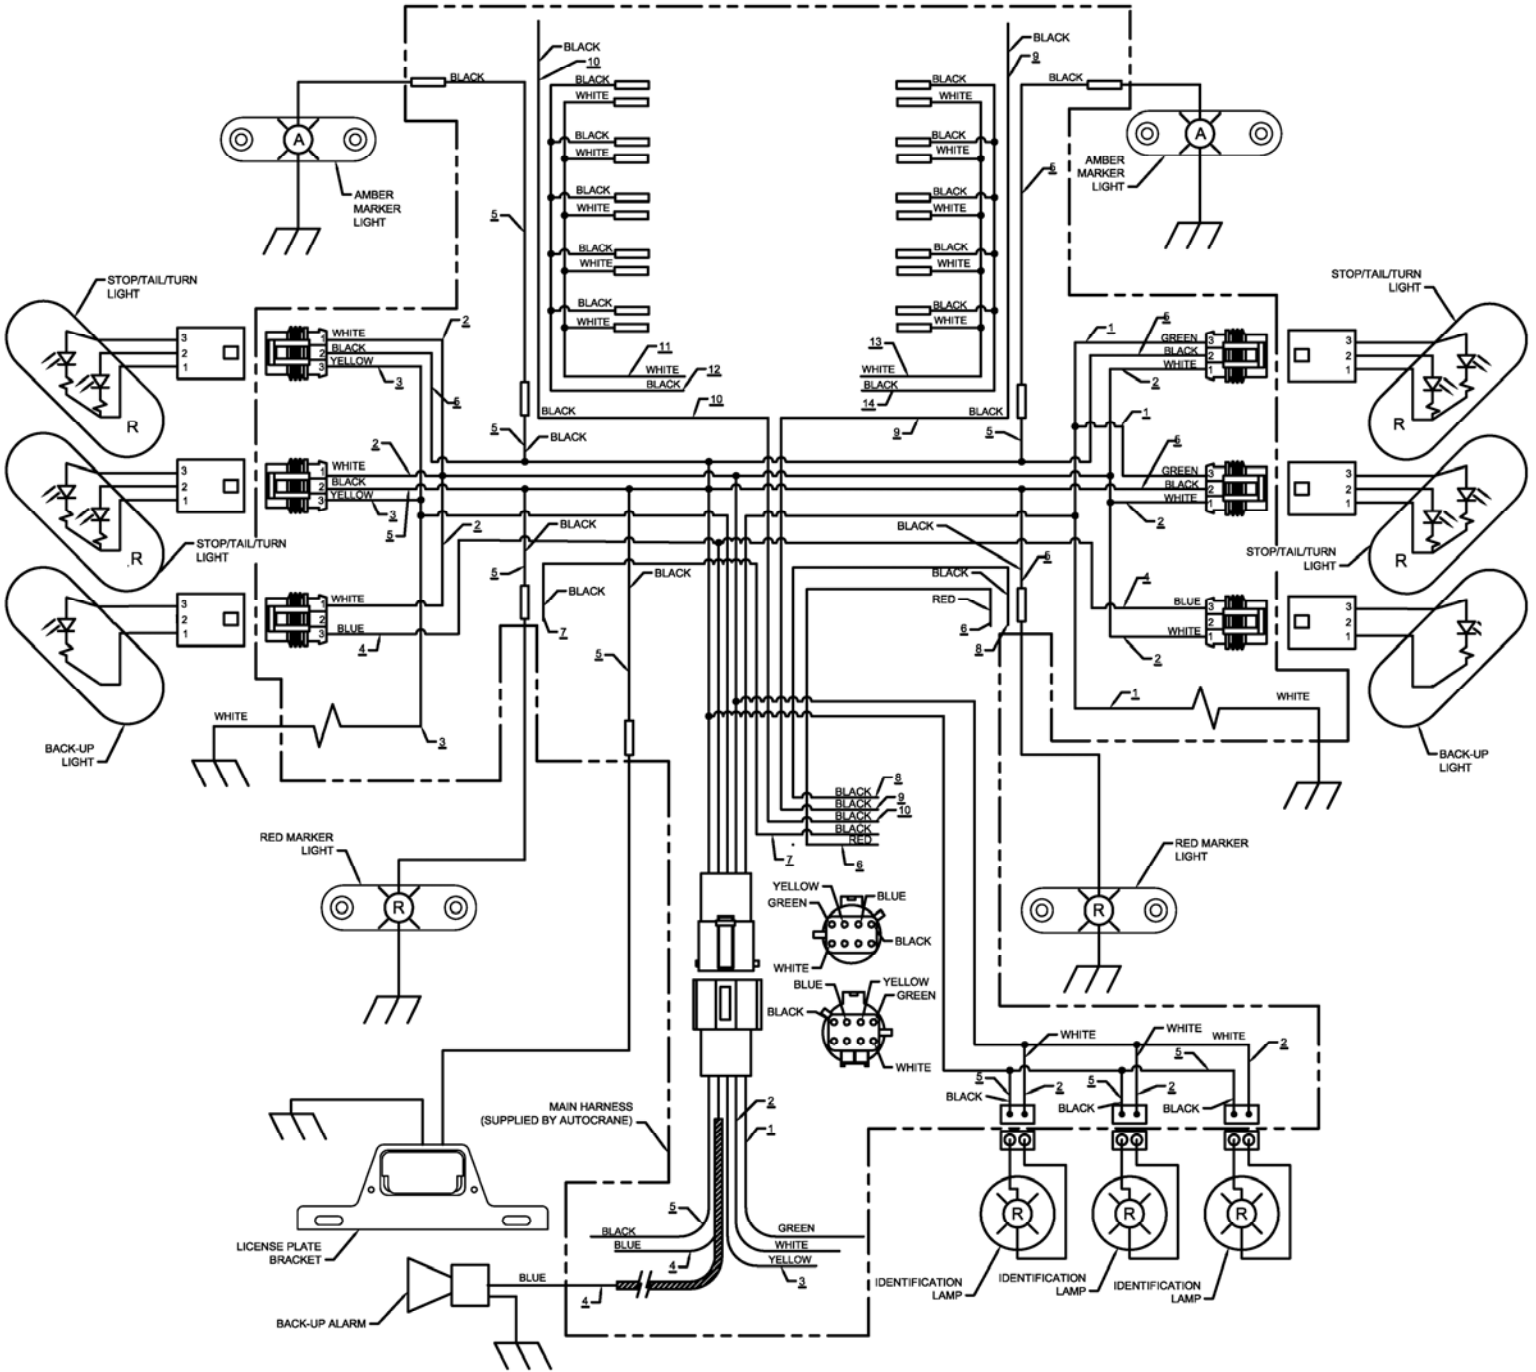

TITAN 38

MOUNTING AND INSTALLATION

WIRE #	COLOR	DESCRIPTION	LABEL
1	GREEN	STOP/TURN SIGNAL RIGHT SIDE	
2	WHITE	GROUND	
3	YELLOW	STOP/TURN SIGNAL LEFT SIDE	
4	BLUE	BACK-UP SIGNAL	
5	BLACK	TAIL LIGHT SIGNAL	
6	RED	OPTIONAL HALOGEN SUPPLY WIRE	HALOGEN
7	BLACK	OPTIONAL REAR WORK LIGHT LEFT SIDE	WRK LT LFT
8	BLACK	OPTIONAL REAR WORK LIGHT RIGHT SIDE	WRK LT RT
9	BLACK	OPTIONAL LIGHTING RIGHT SIDE	OPTIONAL LIGHTING
10	BLACK	OPTIONAL LIGHTING LEFT SIDE	OPTIONAL LIGHTING
11	WHITE	INTERIOR COMPARTMENT LIGHT LEFT SIDE (OPTIONAL)	
12	BLACK	INTERIOR COMPARTMENT LIGHT LEFT SIDE (OPTIONAL)	
13	WHITE	INTERIOR COMPARTMENT LIGHT RIGHT SIDE (OPTIONAL)	
14	BLACK	INTERIOR COMPARTMENT LIGHT RIGHT SIDE (OPTIONAL)	

8. Install all accessories per their installation procedures. If unit has a hydraulic outrigger, you must follow the procedure shown on the following page to set the outrigger relief valve.
9. Verify final truck configuration meets all applicable federal guidelines. Reference 49CFR571.109
10. Read operating section of manual before operating the unit.

TITAN 38

MOUNTING AND INSTALLATION

OUTRIGGER RELIEF VALVE SETTING INSTRUCTIONS

For hydraulic powered outrigger control valves provided by AutoCrane

AutoCrane hydraulic powered outriggers utilize a control valve which contain an integral hydraulic relief valve that is preset at the factory. This preset is NOT the final setting and must be adjusted to account for hydraulic system backpressure once the installation is complete. The adjustment is straight forward and requires basic hand tools, thermometer or means to measure hydraulic oil temperature, and a hydraulic pressure gauge with a minimum rating of 5,000 psi and hydraulic fittings necessary to install the gauge in-line with the incoming pressure line to the outrigger control valve body.

Follow the procedure below to make the final adjustments to this relief valve.

1. The outrigger hydraulic relief valve should be adjusted to 200 psi above the crane hydraulic relief valve. Please consult the appropriate owner's manual for this setting or contact the crane manufacturer for this value.

WARNING!

Under no circumstances should this relief valve setting exceed any of the hydraulic system components ratings or limitations as component damage or personal injury may result.

2. Install the hydraulic pressure gauge in-line with the incoming pressure line to the outrigger control valve body.
3. With all personnel clear of the vehicle, start the engine and engage the vehicle PTO. Let the hydraulic oil warm until it reaches 100°F.
4. While watching the hydraulic pressure gauge, activate a hydraulic outrigger function to deadhead the hydraulic system. Read the gauge value quickly and do not hold the function into the deadhead position.
5. Using the hand hold, back off the lock nut on the hydraulic relief valve and make small rotation adjustments (1/2 turn) to the relief valve stem.
6. Repeat step 4 to check if this adjustment meets the system requirements. If not, then repeat Step 5 and Step 4 until correct.
7. Tighten the lock nut on the hydraulic relief valve.
8. Remove the hydraulic pressure gauge and fittings and re-attach the pressure supply line to the hydraulic valve body.

TITAN 38

VEHICLE OPERATION & PREPARATIONS

IMPORTANT—READ FIRST!!

VEHICLE PREPARATION FOR OUTRIGGER AND CRANE OPERATION

1. Park vehicle within crane operating distance from object that is to be lifted.

Notes:

- Make sure there are no obstructions preventing safe handling of load during crane operation.
 - Verify that no obstructions will prevent the full extension of the outrigger legs on both sides of vehicle.
 - Regardless of load to be lifted the outriggers should always be fully extended to keep vehicle stable.
 - Grade shall not exceed 1° of level. Level truck with blocks if grade exceeds 1° of level.
2. **ALWAYS** set the vehicle emergency brake before beginning crane operations.
 3. Use wheel chocks on the front wheels of vehicle.

INSPECT OUTRIGGERS BEFORE USE

1. Visually inspect outrigger before use making sure the outrigger is in good working order.
2. Replace or repair any worn or damaged parts before outrigger operation.
3. Check for and repair leaks on hydraulic units if they occur.

MANUAL OUTRIGGER OPERATION

1. Un-hook the sling from around the outrigger leg.
2. Extend outrigger slide from stowed position by releasing pull pin and extending the outrigger slides fully.
3. Make sure the slide is fully extended and locked into position with pull pin.
4. Lower both outrigger legs until they contact the ground then extend another inch to insure good ground contact.

Notes:

- Use blocks under pads to increase surface area if required for stability on soft ground.
- **DO NOT LIFT TRUCK WHEELS WITH OUTRIGGERS.** The outriggers are intended for vehicle stability during lifting operations not for complete vehicle support.

MANUAL OUTRIGGER STOWING PROCEDURE

5. Fully retract vertical legs to stowed position.
6. Retract outrigger slide from extended position by releasing pull pin and pushing slides in fully.
7. Make sure the slide is fully retracted and locked into position with pull pin.
8. Make sure the sling is secured in place around the outrigger leg.

TITAN 38

VEHICLE OPERATION & PREPARATIONS

HYDRAULIC OUTRIGGER OPERATION

1. Divert hydraulic flow from control valve to outrigger operations.
2. Use the hydraulic control valve to extend outrigger slide from stowed position to the fully extended position.
3. Make sure the slide is fully extended.
4. Lower both outrigger legs until they contact the ground then extend another inch to insure good ground contact.


Notes:

- Use blocks under pads to increase surface area if required for stability on soft ground
- **DO NOT LIFT TRUCK WHEELS WITH OUTRIGGERS.** The outriggers are intended for vehicle stability during lifting operations not for complete vehicle support.

HYDRAULIC OUTRIGGER STOWING PROCEDURE

5. Fully retract vertical legs in stowed position.
6. Retract outrigger slide from extended to the fully retracted position.
7. Make sure the slide is fully retracted in the stowed position.
8. Make sure the sling is secured in place around the outrigger leg.


TITAN 38 DOOR

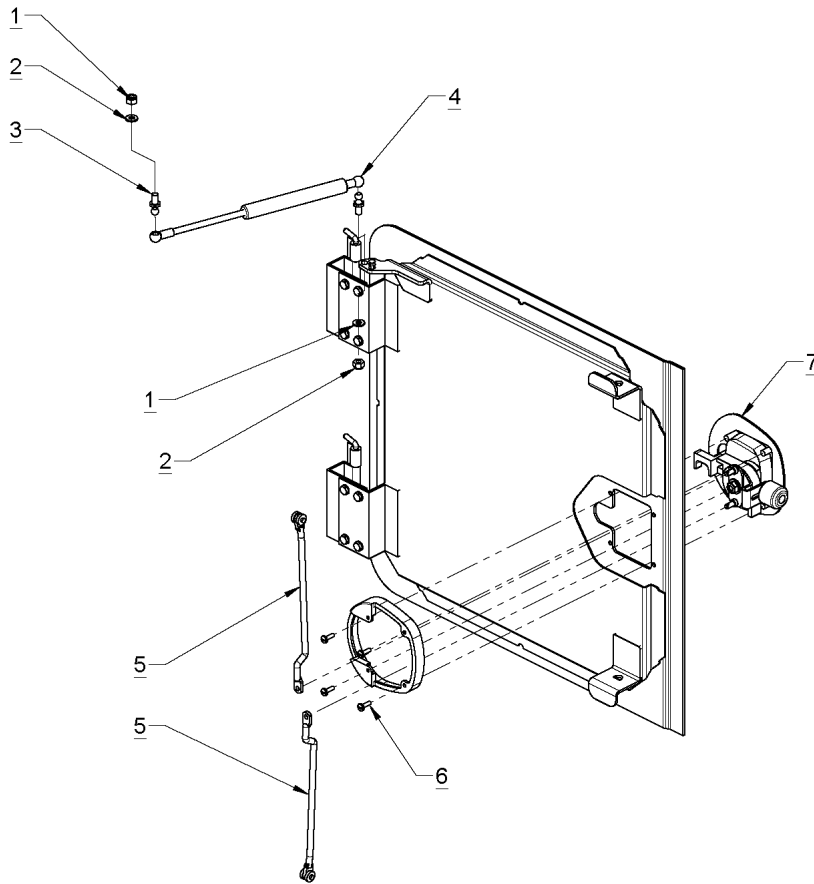

ITEM NO.	QTY	PART NUMBER	DESCRIPTION
1	2	016801000	NUT HX NYLK 5/16-18UNC CP
2	2	020300000	WASHER FL 1/4 CP
3	2	760535002	BALL STUD THREADED 5/16-18
4	1	760535001	DOOR PROP (GAS)
5	2	*SEE CHART	DOOR ROD
6	4	002609000	SCREW RD HD #10UNF X 5/8 CP GR3
7	1	560525000	T-HANDLE

USED ON	PART NUMBER	DESCRIPTION
USED ON ALL 52" COMPARTMENT DOORS, UPPER/LOWER	560415000	DOOR ROD STD
USED ON 58" COMPARTMENT DOORS, UPPER	560417000	DOOR ROD TALL
USED ON HORZ. COMP. UPPER/LOWER	560416000	DOOR ROD HORIZ




TITAN 38 TAILGATE

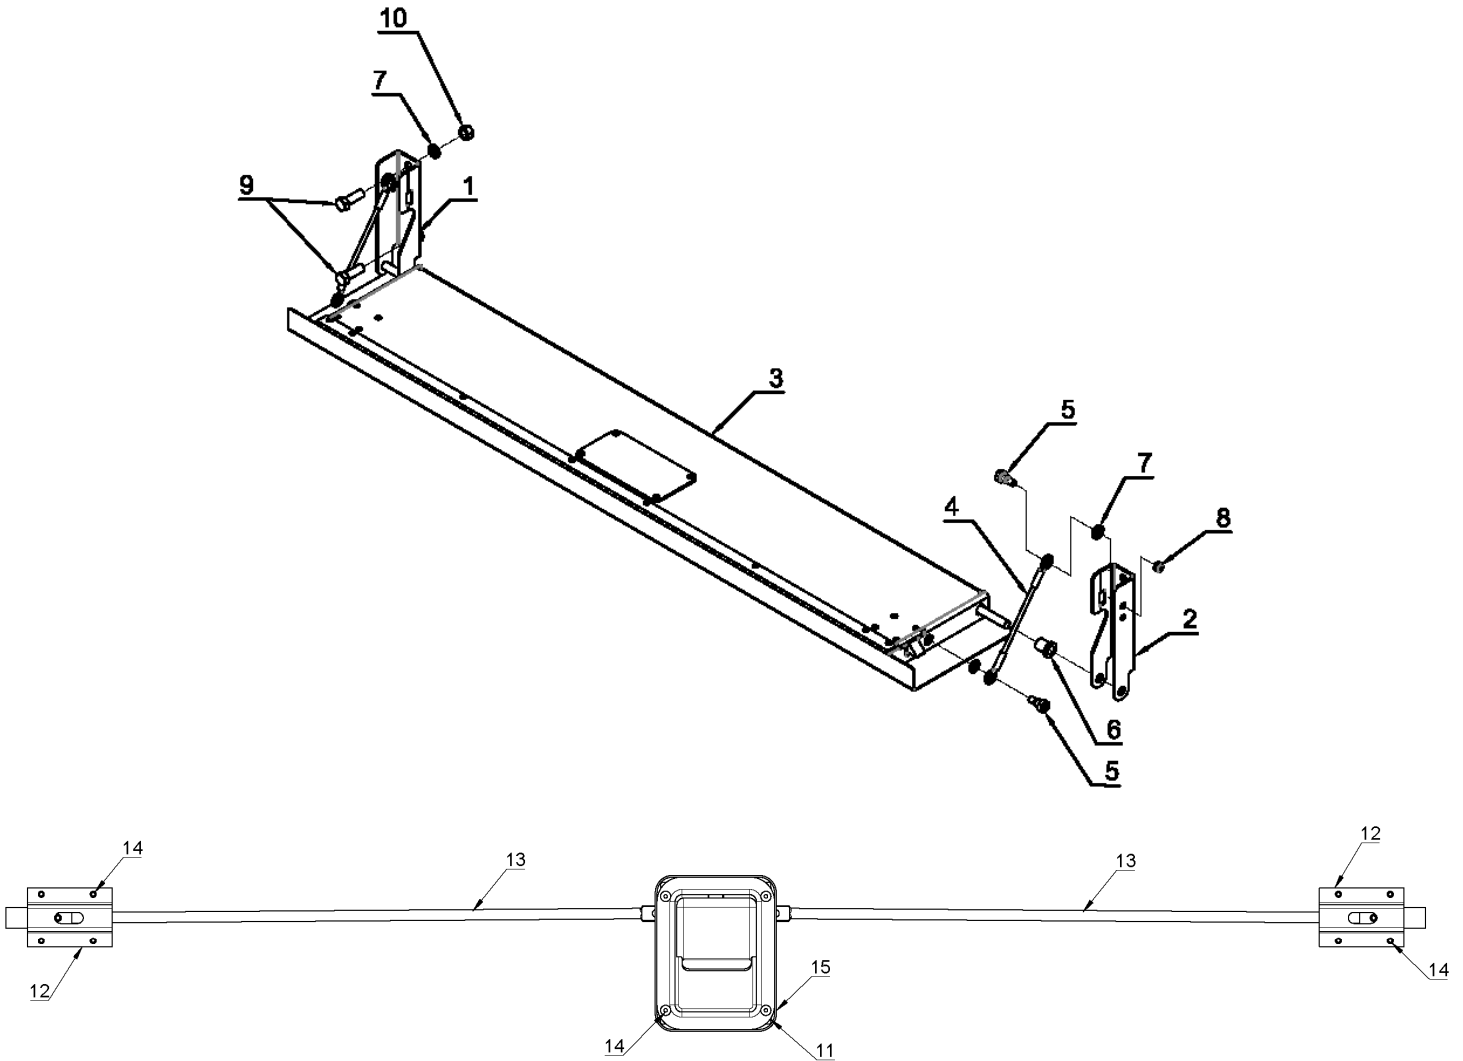





ITEM NO.	QTY	PART NUMBER	DESCRIPTION
1	1	560085000	MTG BRKT WDMT LH
2	1	560088000	MTG BRKT WDMT RH
3	1	560081000	TAILGATE SUB ASSY
4	2	560090000	CABLE ASSY TAILGATE
5	2	560091000	SCREW SHO SET 1/2 X 3/8
6	2	736738000	TAILGATE BUSHING
7	2	021403000	WASHER, FLAT-HARDENED 3/8
8	2	016801000	NUT HX NYLK 5/16-18UNC CP
9	4	010201000	SCREW HX HD 1/2UNC X 1 1/2 GR5
10	4	177010000	NUT HX 1/2 NCCP
11	1	560093000	LATCH ASSY TAILGATE
12	2	560094000	LATCH
13	2	560096000	ROD 3/8
14	12	754028000	RIVET 3/16 POP .251-.375 GRIP SS
15	1	560098000	GASKET

NOTES




OUTRIGGER ASSY, FULLY MANUAL RIGHT SIDE CRANE GENERAL DIMENSIONS

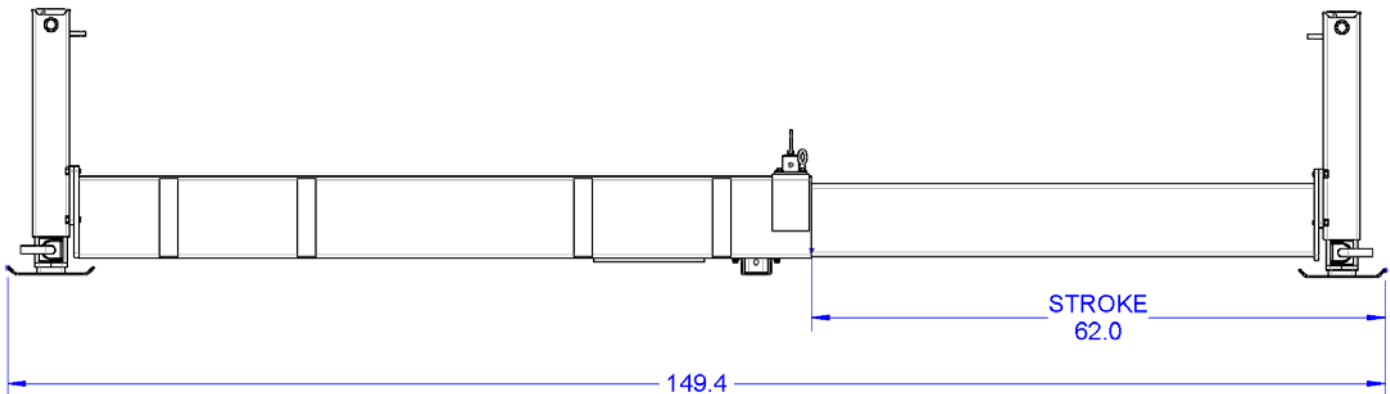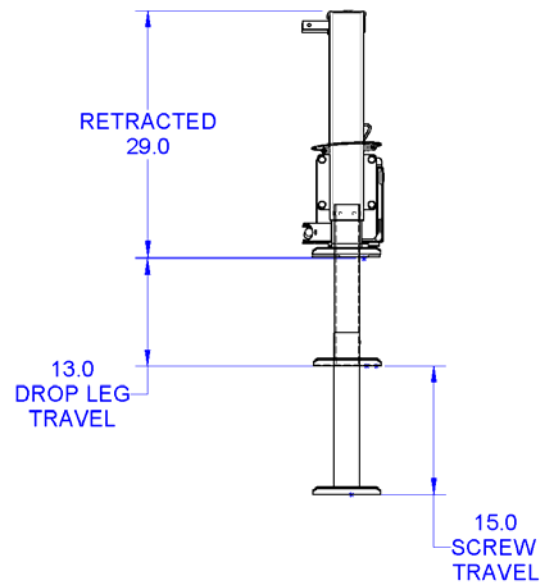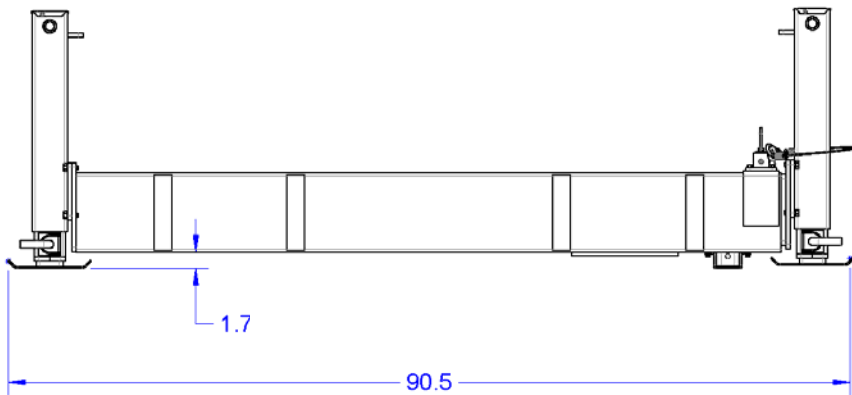

OUTRIGGER ASSY, FULLY MANUAL LEFT SIDE CRANE GENERAL DIMENSIONS

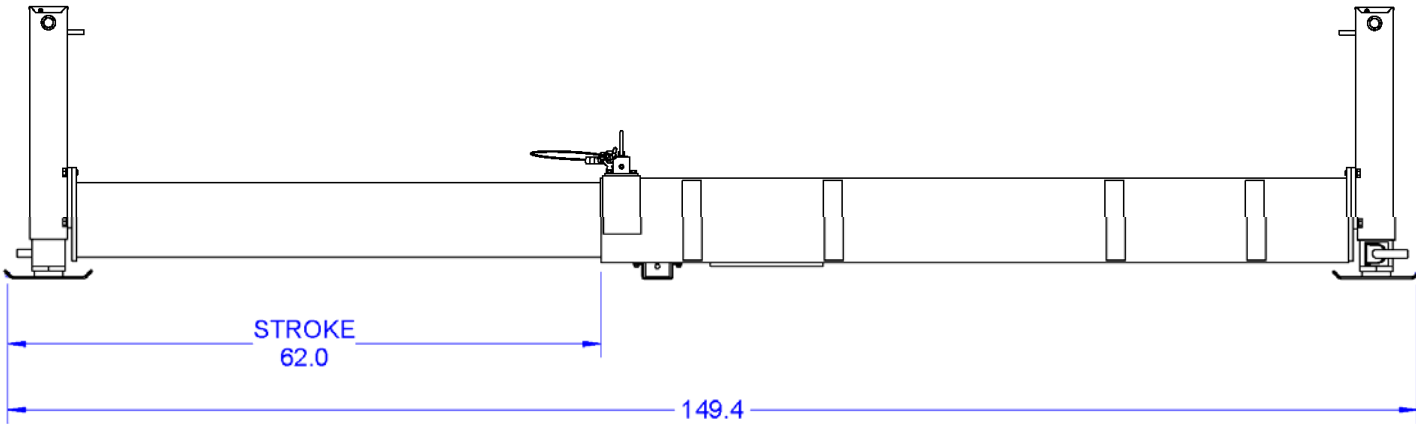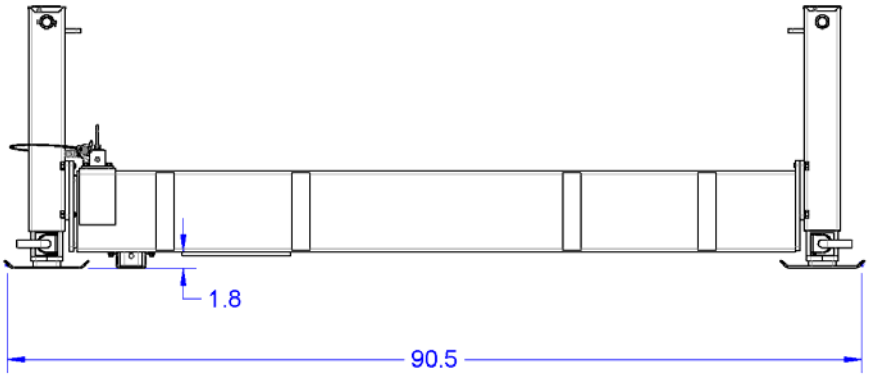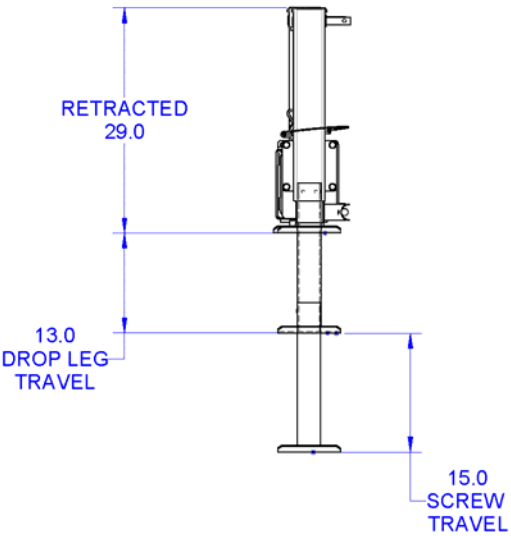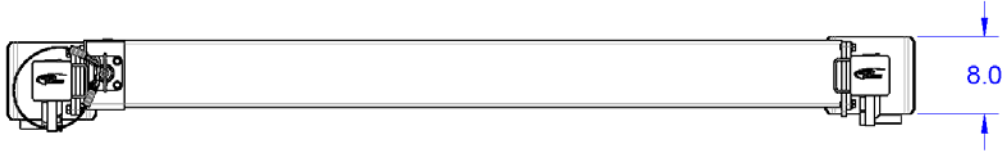


OUTRIGGER ASSY, FULLY HYDRAULIC RIGHT SIDE CRANE GENERAL DIMENSIONS

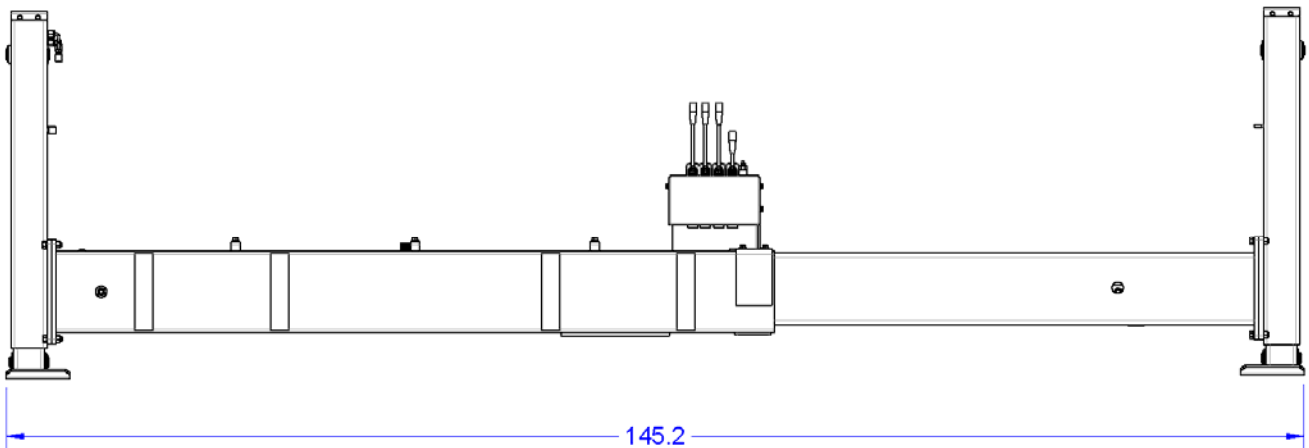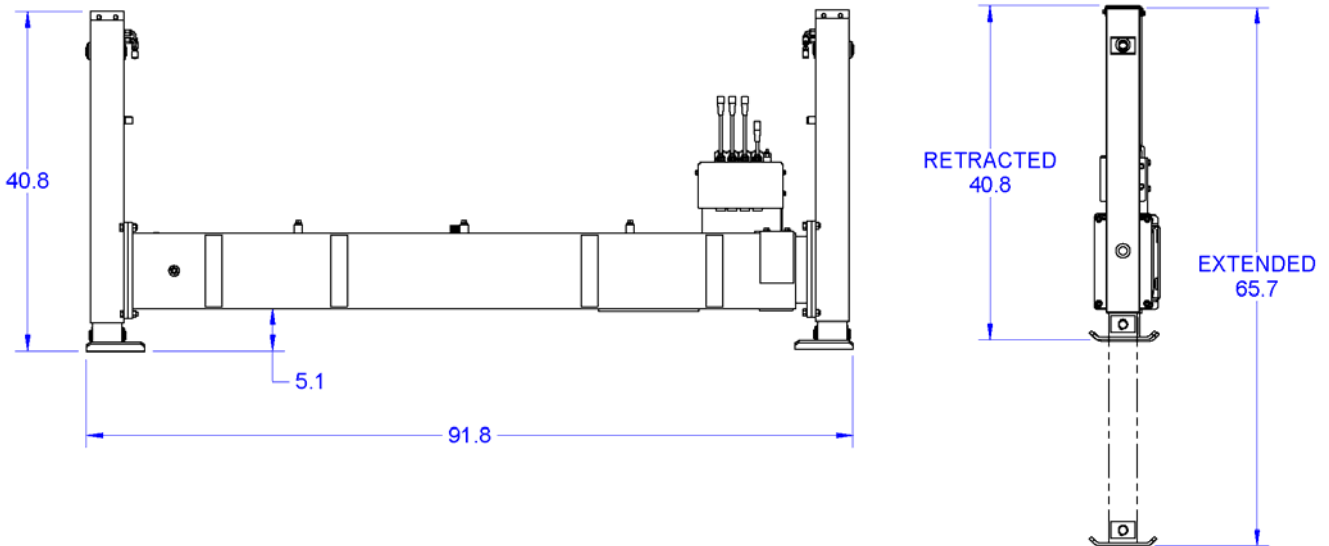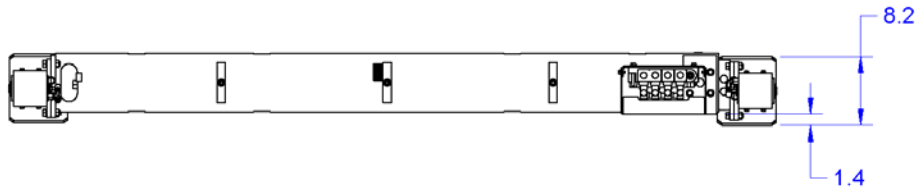

EXTENSION CYLINDER
STROKE = 54.00


OUTRIGGER ASSY, FULLY HYDRAULIC LEFT SIDE CRANE GENERAL DIMENSIONS

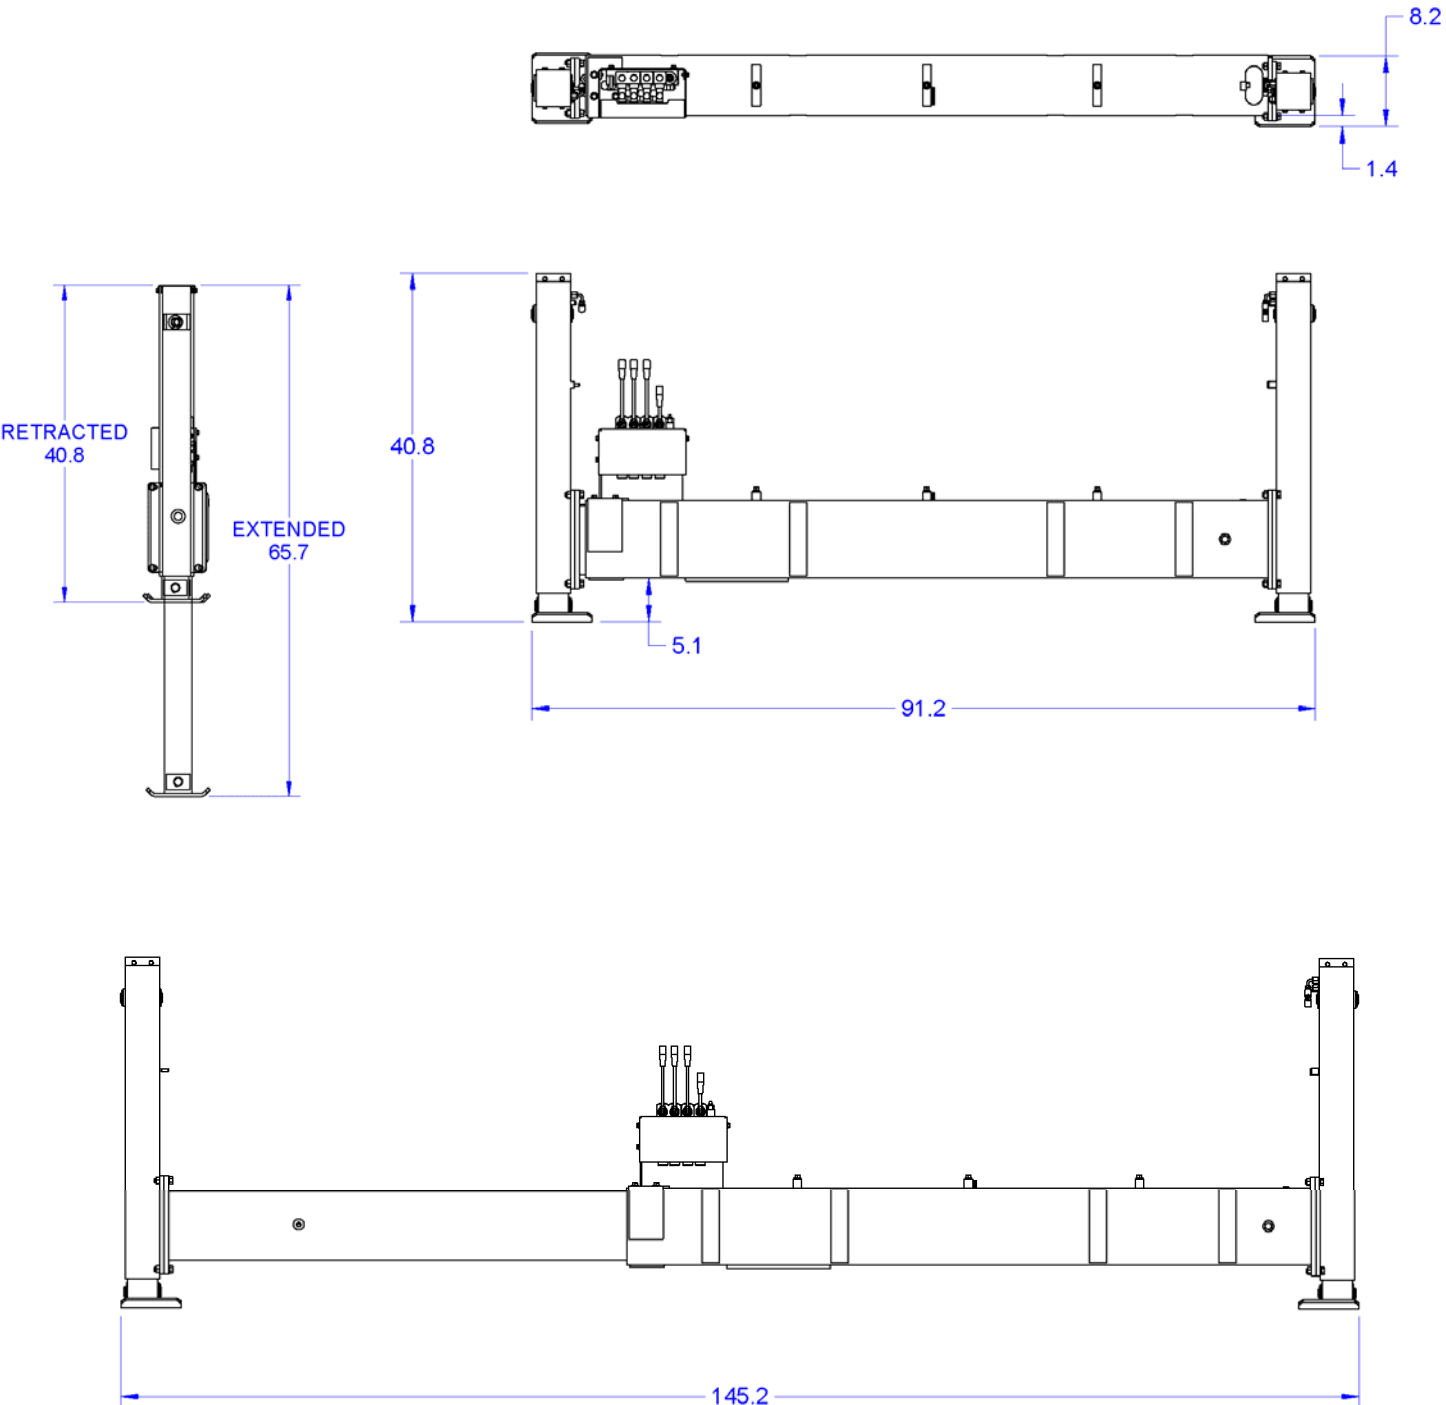

EXTENSION CYLINDER
STROKE = 54.00


TITAN 38 OUTRIGGER SHIP KIT

OUTRIGGER SHIP KIT 738645000

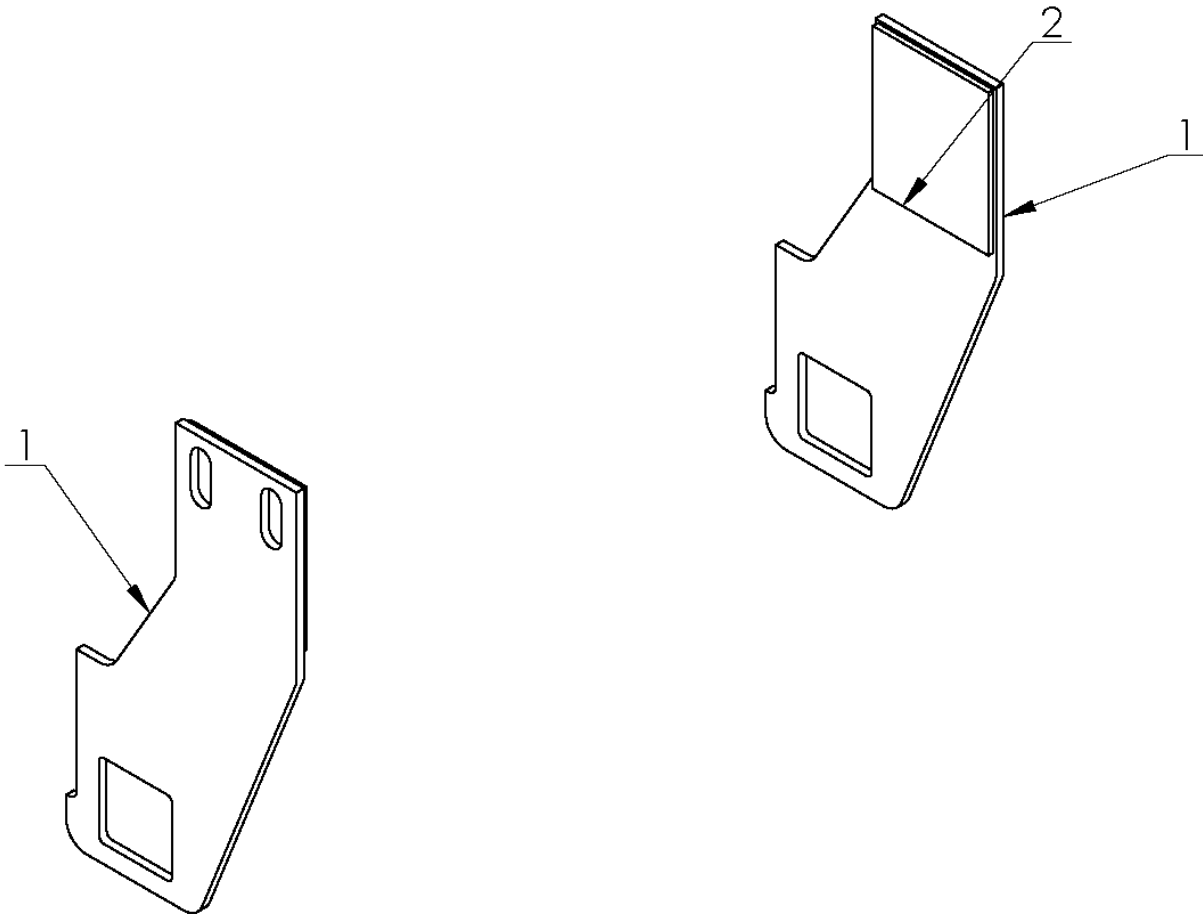


ITEM NO.	QTY	PART NUMBER	DESCRIPTION
1	2	738563001	TITAN 38 BUMPER SUPPORT F/HITCH
2	2	738669000	BAR RT HR 1/4 X 7 X 5.75 LG

TITAN 38 OUTRIGGER INSTALLATION

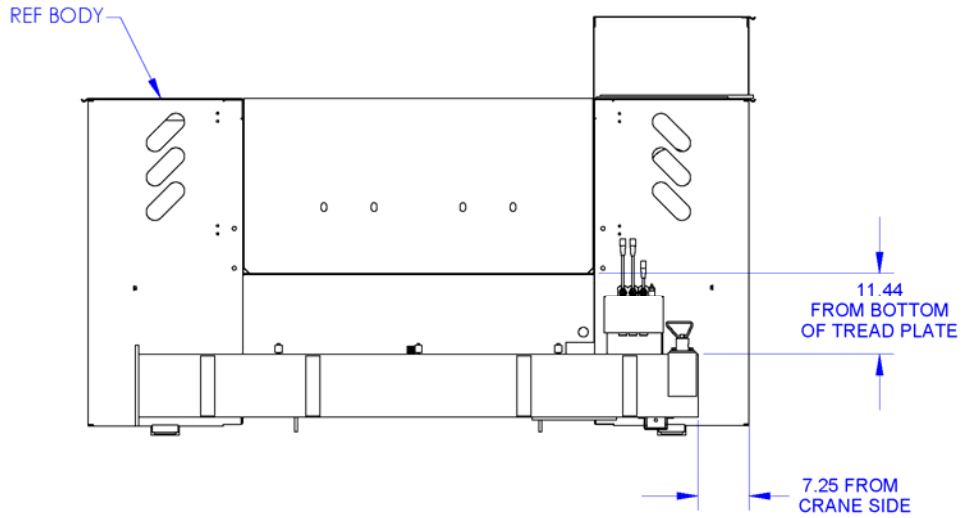


COSS TUBE LOCATION

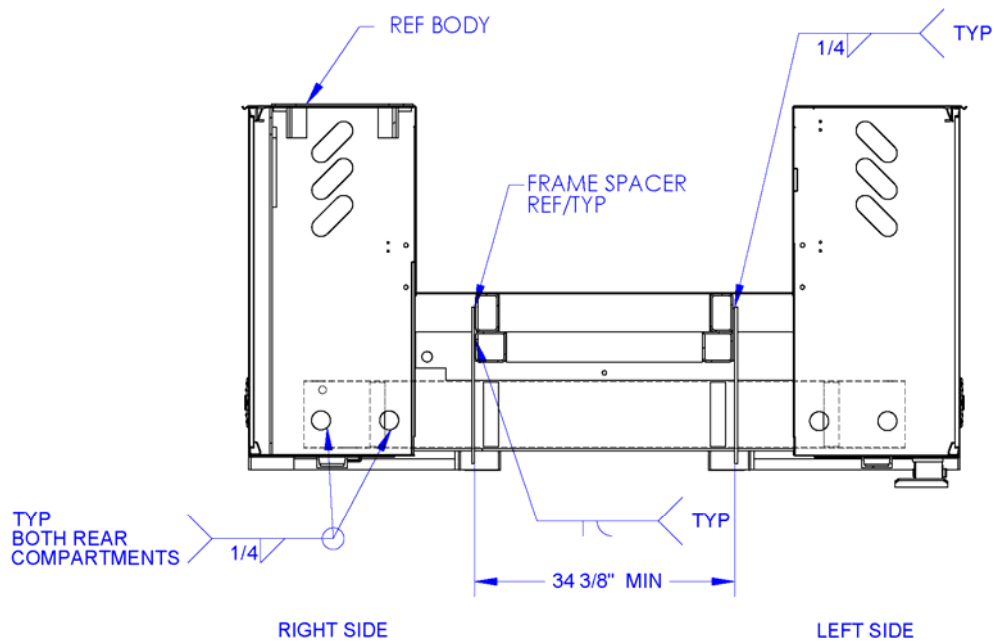

SECTION VIEW FROM INSIDE FENDER WELL
TOWARD BACK OF BODY

- NOTE:
- 1) LEAN SUPPORT OUTRIGGERS OUT 1/4 INCH @ BOTTOM BEFORE WELDING TO BOTTOM SIDE OF FRAME.
 - 2) DIM OF 34 3/8 INCHES PLUS MUST BE MAINTAINED BETWEEN SUPPORT OUTRIGGER PLATES @ BOTTOM OF BODY FRAME.
 - 3) CUT OUTS FOR USE WITH HYDRAULIC OUTRIGGERS ONLY. RIGHT SIDE OUTRIGGER SHOWN. LOCATE CUTOUTS ON OPPOSITE SIDE FOR LEFT SIDE OUTRIGGER.

OUTRIGGER ASSY, FULLY MANUAL
RIGHT SIDE CRANE PN: 738896000
LEFT SIDE CRANE PN: 738897000

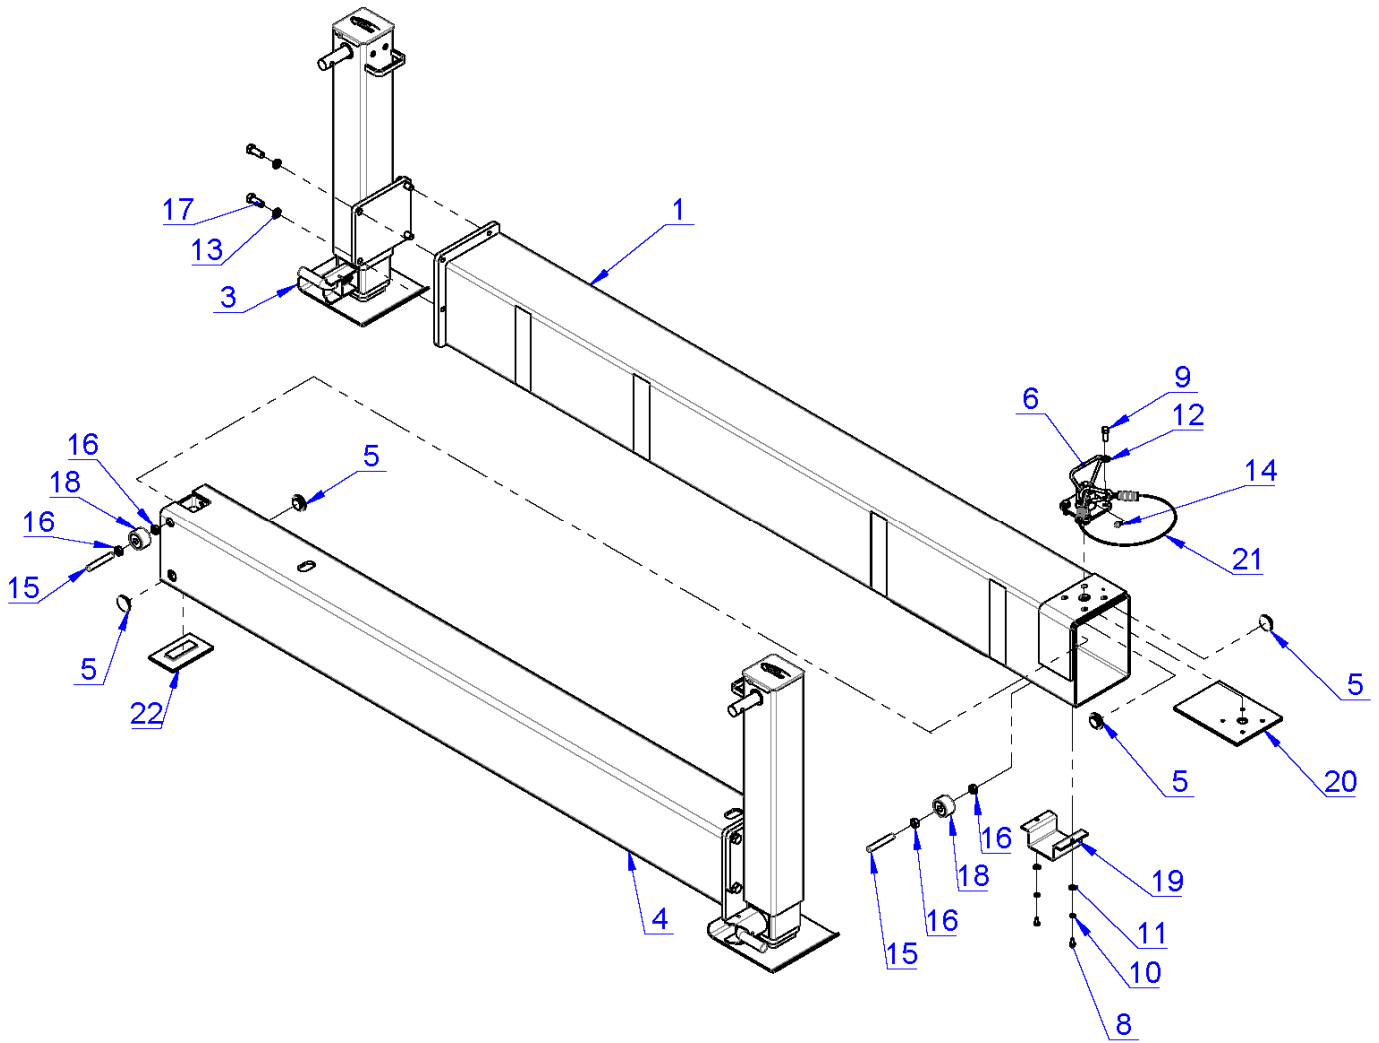


OUTRIGGER ASSY, FULLY MANUAL


ITEM NO.	LS QTY	RS QTY	PART NUMBER	DESCRIPTION
1	0	1	738602000	TITAN 38 OUTRIGGER TUBE WELD
1	1	0	738602001	TITAN 38 OUTRIGGER TUBE WELD
2	1	1	738645000	SHIP KIT TITAN 38 OUTRIGGER
3	1	1	738898000	TITAN 38 MANUAL OUTRIGGER LEG, LS
4	1	1	738888000	TITAN 38 SLIDE ASSY RS MANUAL
5	4	4	407277000	PAD BOOM 1.5 O.D.
6	1	1	760390110	3/4 PULL PIN WELD W/ MTG BRACKET
7	1	1	738606000	DECAL LAYOUT MANUAL
8	2	2	005901000	SCREW HX HD 1/4-20UNC X 1/2 LG
9	3	3	008701000	SCW HX 3/8 UNC X 1 GR5
10	2	2	020200000	WASHER SP LK 1/4
11	2	2	020400000	WASHER FL SAE 1/4
12	4	4	021200000	WASHER FL 3/8
13	4	4	021500000	WASHER, SP LK 1/2
14	1	1	002393000	ZERK, GREASE
15	2	2	372218000	SCREW SET 1/2-13UNC X 3 LG
16	4	4	372219000	NUT, HX JAM 1/2-13UNC
17	4	4	738647000	SCREW HX HD 1/2-13UNC X 1 1/4 LG GR8
18	2	2	240234000	BEARING, NEEDLE
19	1	1	372216000	COVER ROLLER
20	1	1	738682000	DOUBLER PULL PIN
21	1	1	772067000	SLING, OUTRIGGER
22	1	1	460177160	WEAR PAD, 5.13X3X.25, BOSS 1X3

OUTRIGGER ASSY, FULLY HYDRAULIC


PN: 73848XXX

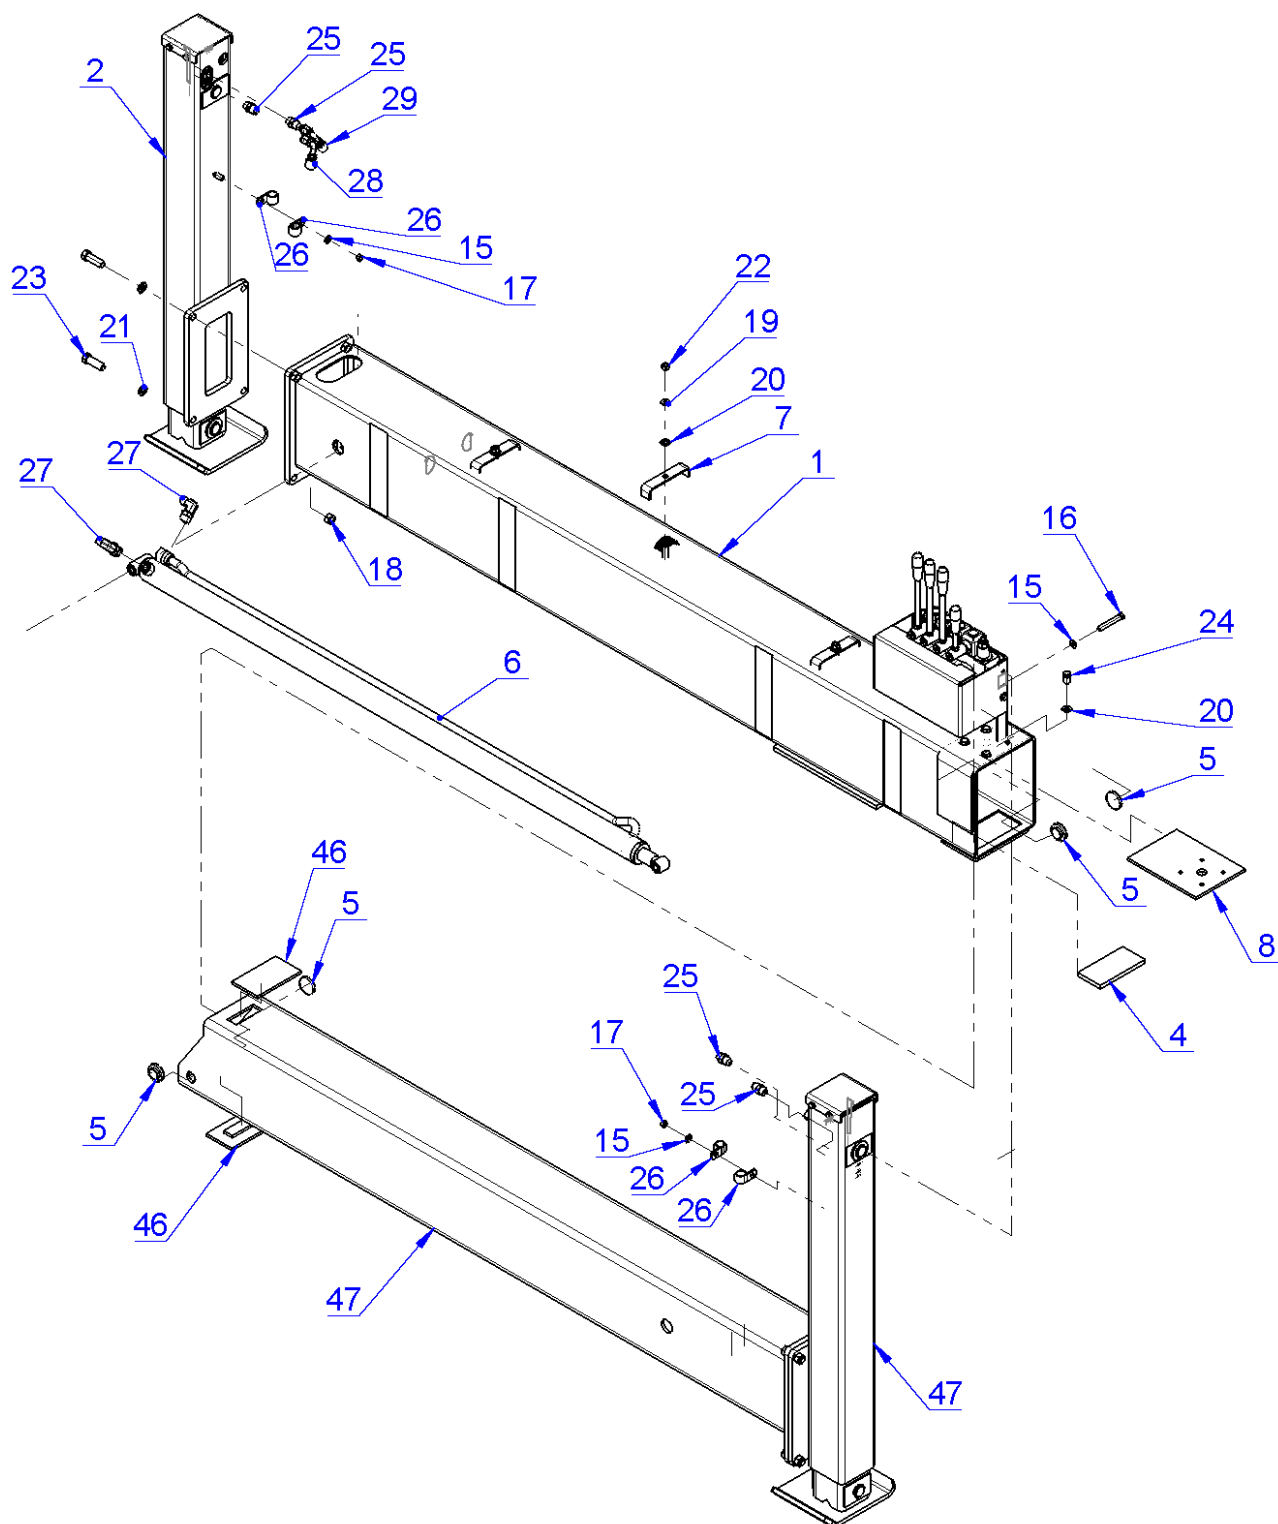


OUTRIGGER ASSY, FULLY HYDRAULIC RIGHT SIDE PN: 738483000

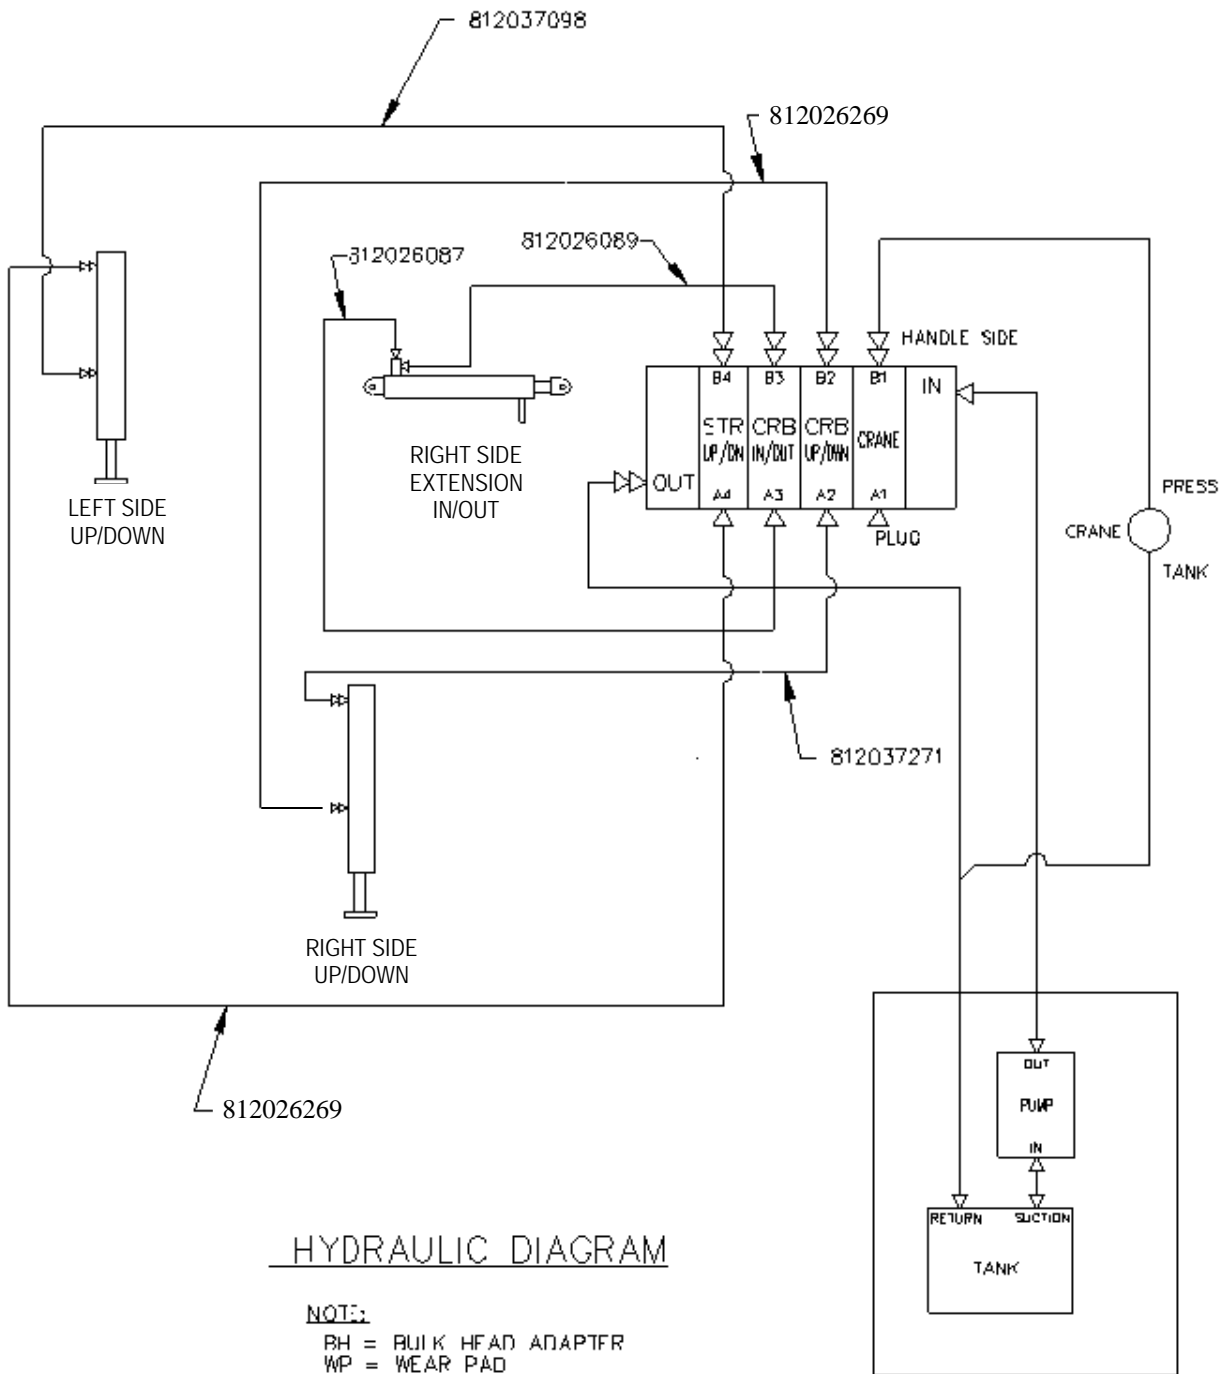


OUTRIGGER ASSY, FULLY HYDRAULIC LEFT SIDE PN: 738484000

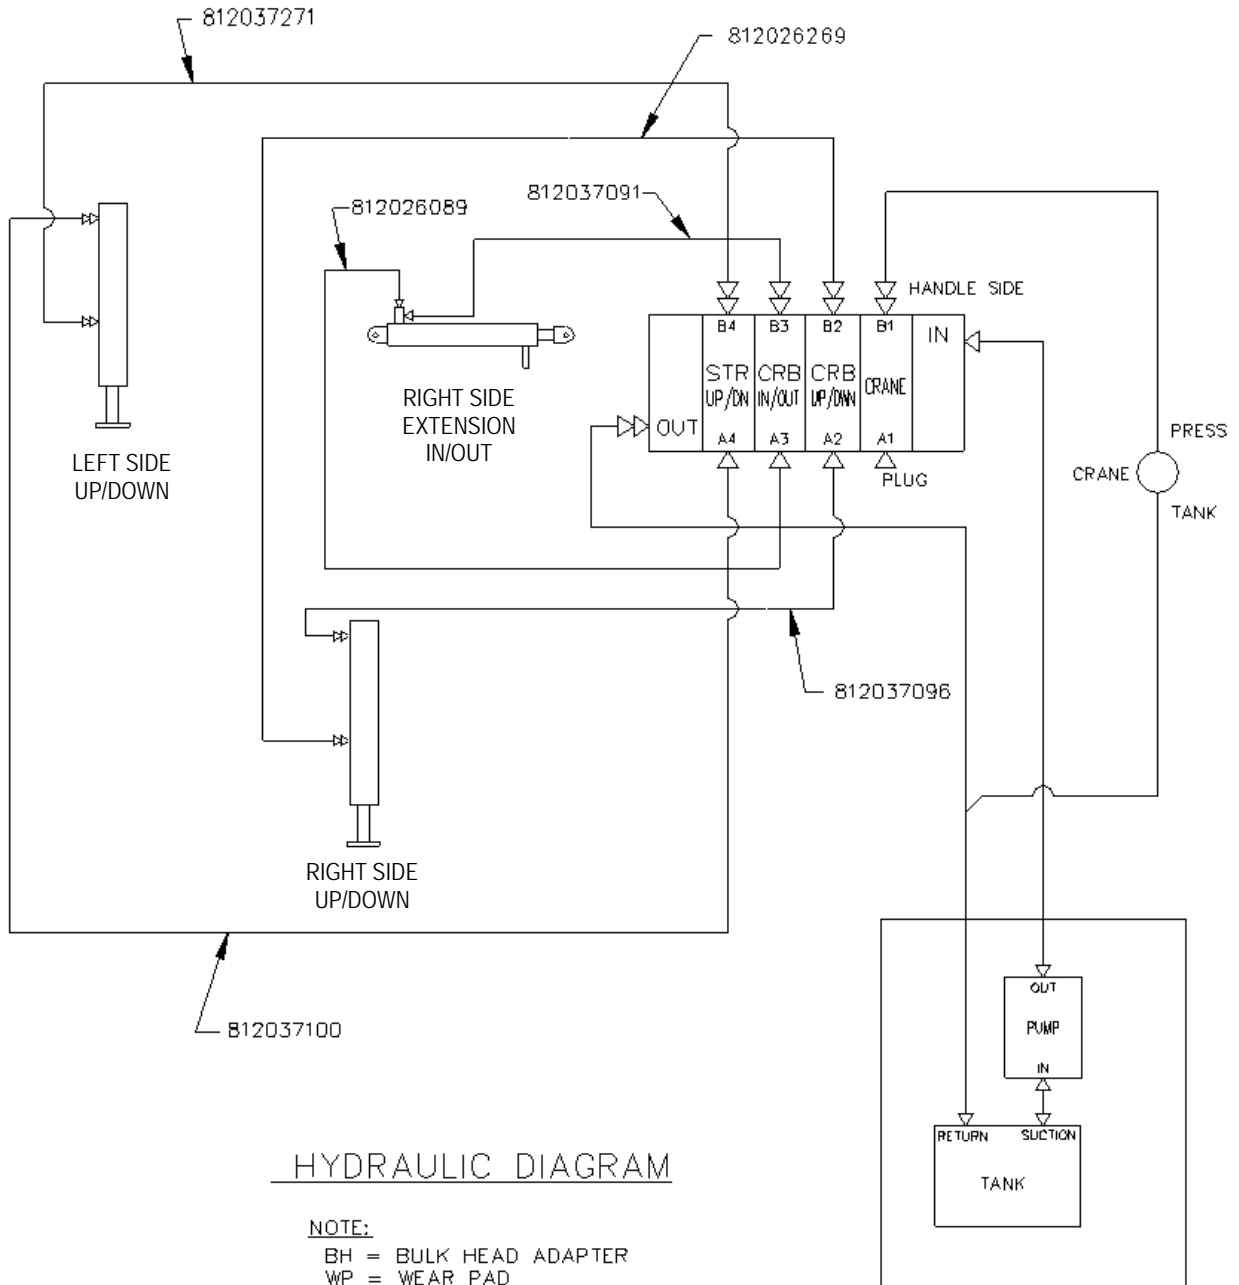

OUTRIGGER ASSY, FULLY HYDRAULIC

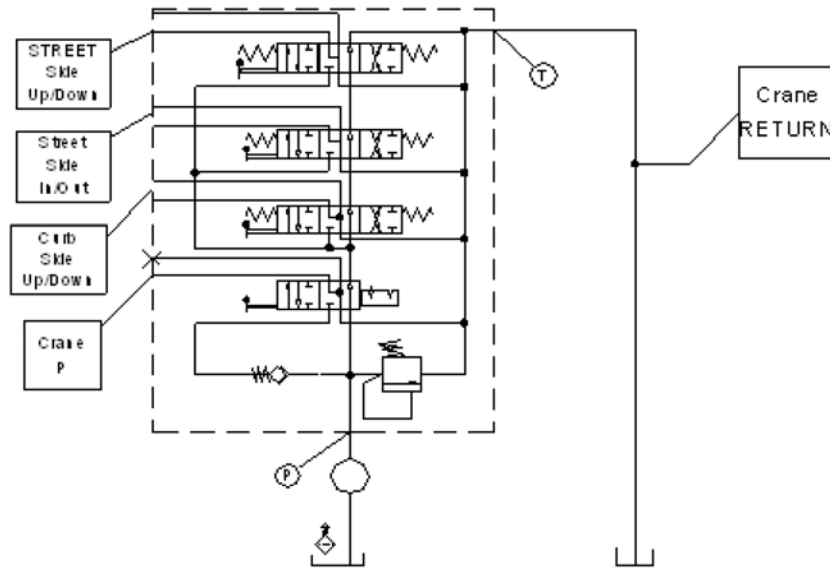

HYDRAULIC SCHEMATIC

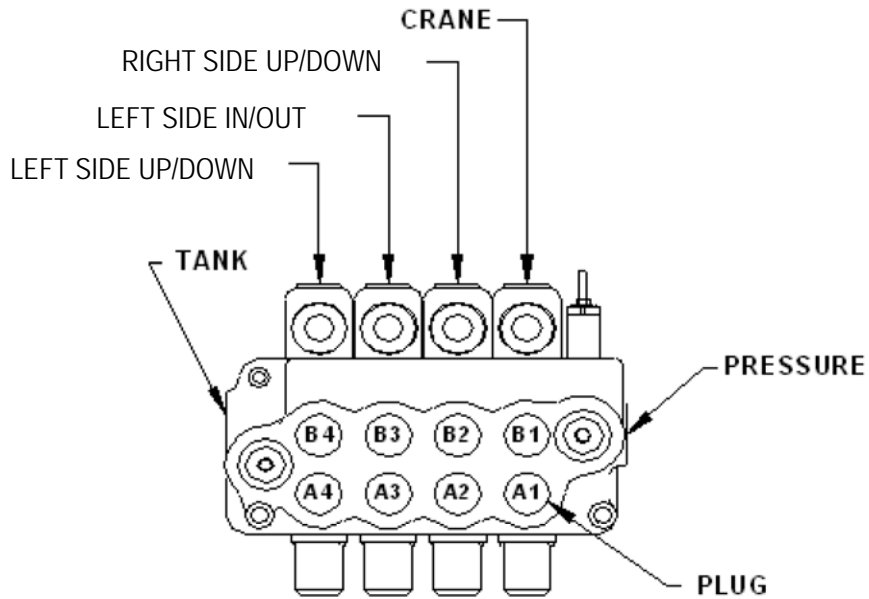

REAR VIEW

DIRECTION CONTROL VALVE

NOTE:

A-PORT BOTTOM

B-PORT HANDLE SIDE

OUTRIGGER ASSY, FULLY HYDRAULIC

BOM PN: 73848XXX


ITEM NO.	LS-4000	RS-3000	PART NUMBER	DESCRIPTION
1	0	1	738483100	TITAN 38 OUTRIGGER TUBE WELD HYD
1	1	0	738484100	TITAN 38 OUTRIGGER TUBE WELD SSC
2	0	1	738483220	TITAN 38 SLIDE ASSY CS HYD
2	1	0	738484220	TITAN 38 SLIDE ASSY SS (HYD)
3	0	1	738837000	TITAN 38 HYD LEG ASSY
4	0	1	560244000	COVER, DIRECTIONAL CTR VALVE
4	1	0	560244001	COVER, DIRECT CTR VALVE S/S
5	1	1	366353000	PAD WEAR 5.25 X 2.63 X .38
6	4	4	407277000	PAD BOOM 1.5 O.D.
7	1	1	738483300	CYL HYD IN/OUT
8	3	3	407216000	HOSE RETAINER, 4.75 WIDE
9	1	1	738682000	DOUBLER PULL PIN
10	0	1	738644000	DECAL LAYOUT HYD
10	1	0	738644001	DECAL LAYOUT SSC (HYD)
11	0	1	738483001	KIT, HYD OUTRIGGER (FULLY HYD)
11	1	0	738484001	KIT, HYD OUTRIGGER SSC (FULLY HYD)
12	18	18	374086000	NYLON HOSE SLEEVE, 1.81" ID
13	3	3	005401000	SCREW HX HD 1/4-20UNC X 5/8 LG CP
14	3	3	020200000	WASHER SP LK 1/4
15	3	3	020400000	WASHER FL SAE 1/4
16	5	5	020901000	WASHER FL 5/16
17	3	3	811029000	SCREW HX HD 5/16-18UNC X 2 1/2 LG
18	2	2	016500000	NUT HX 5/16-18UNC
19	4	4	017701000	NUT HX 1/2-13UNC
20	3	3	021100000	WASHER SP LK 3/8
21	7	7	021200000	WASHER FL 3/8
22	4	4	021500000	WASHER, SP LK 1/2
23	3	3	330372000	NUT HX 3/8-16UNC
24	4	4	738642000	SCREW HX HD 1/2-13UNC X 1 3/4 LG GR8
25	4	4	480024000*	MOUNT PENDANT CABLE RETAINER

OUTRIGGER ASSY, FULLY HYDRAULIC BOM PN 73848XXX

ITEM NO.	LS-4000	RS-3000	PART NUMBER	DESCRIPTION
26	4	4	008400000	SCREW HX HD 3/8-16UNC X 3/4 LG GR 5
27	3	3	330645000*	FITTING 90 6-SAE/6-JIC LONG
28	3	3	241175000*	FITTING 90 6-SAE/6-JIC
29	4	4	200876000*	FITTING 6 SAE/6 JIC STRAIGHT
30	2	2	560203000*	FITTING 90 6-SAE/6-JIC RESTRICTED
31	1	1	812037100*	HOSE ASSY, -6 JICF/ -6 90 DEG ELL, -4 HOSE x 100" LG
32	1	1	812037091*	HOSE ASSY, -6 JICF/ -6 90 DEG ELL, -4 HOSE x 91"
33	1	1	812037269*	HOSE ASSY, -6 JICF/ -6 90 DEG ELL, -4 HOSE x 269"
34	1	1	812037271*	HOSE ASSY, -6 JICF/ -6 90 DEG ELL, -4 HOSE x 271"
35	1	1	812026089*	HOSE ASSY, -6JICF/-6JICF x -4 HOSE
36	1	1	812026096*	HOSE ASSY, -6JIC/-6JICF x -4 HOSE
37	1	1	560145010	CONTROL VALVE SUB-ASSY, 4 SECTION
38	1	1	738058010	WELDMENT-LONG ANCHOR CYLINDER BRACKET
39	1	1	738058020	WELDMENT-SHORT ANCHOR CYLINDER BRACKET
40	1	1	738058006	CAPSCREW-12/-13UNC X 3 GR8
41	1	1	738058007	CAPSCREW-12/-13UNC X 4, GR8
42	2	2	418073000	NUT HX 1/2-13UNC
43	1	1	760229000	TRIM EDGE, 5/16
44	3	3	772046006	SPIRAL HOSE WRAP, 1/2", 6" LONG
45	3	3	772042000	RUBBER STRIP, 1 X 8 X .06
46	6	6	772043000	ZIP TIE STRAP, 12 IN, NYLON, BLACK
47	2	2	460177160	WEAR PAD, 5.13X3X.25, BOSS 1X3
48	1	1	738645000	SHIP KIT TITAN 38 OUTRIGGER

NOTE:
PART NUMBERS WITH AN ASTERISK ARE PART OF A KIT.

OUTRIGGER HYDRAULIC LEG ASSEMBLY P/N 738837000

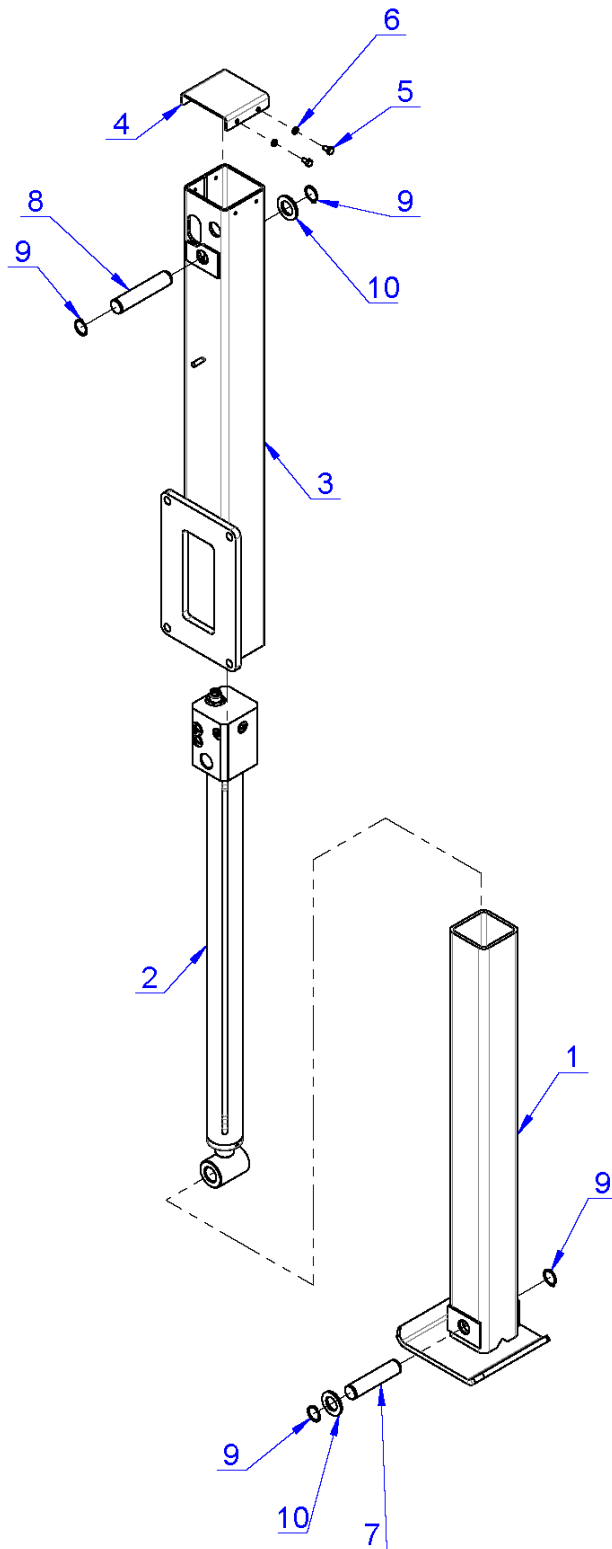


OUTRIGGER HYDRAULIC LEG ASSEMBLY

P/N 738837000

ITEM NO.	QTY	PART NUMBER	DESCRIPTION
1	1	738880000	TUBE INNER (WELD) LS/RS
2	1	738834000	CYL HYD OUTRIGGER UP/DOWN
3	1	738839000	TITAN 38 HYD LEG OUTER TUBE WELD
4	1	725945000	CAP TUBE TOP
5	4	005901000	SCREW HX HD 1/4-20UNC X 1/2 LG
6	4	020200000	WASHER SP LK 1/4
7	1	738732000	PIN 1 ϕ X 4.063 LG
8	1	738731000	PIN 1 ϕ X 4.563 LG
9	4	738734000	RING RETAINING 5100-100
10	2	560562000	WASHER, FL 1.03ID x 1.75OD x .156 THICK ZINC YELL

RECEIVER HITCH INSTALLATION TITAN SERIES

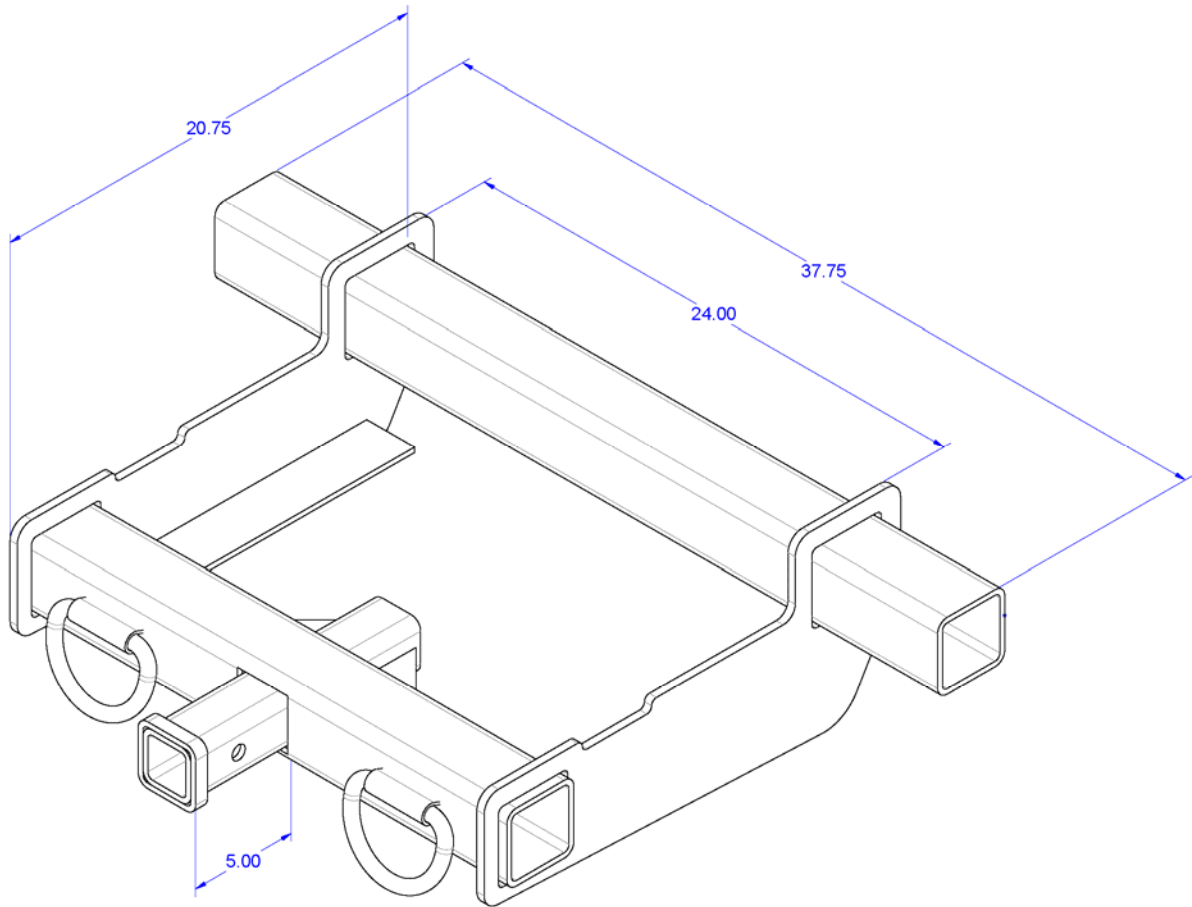


SPECIFICATIONS:

12,000 LBS RATING

2" OPENING

THIS HITCH IS FOR USE WITH A 20" BUMPER.

RECEIVER HITCH INSTALLATION TITAN SERIES

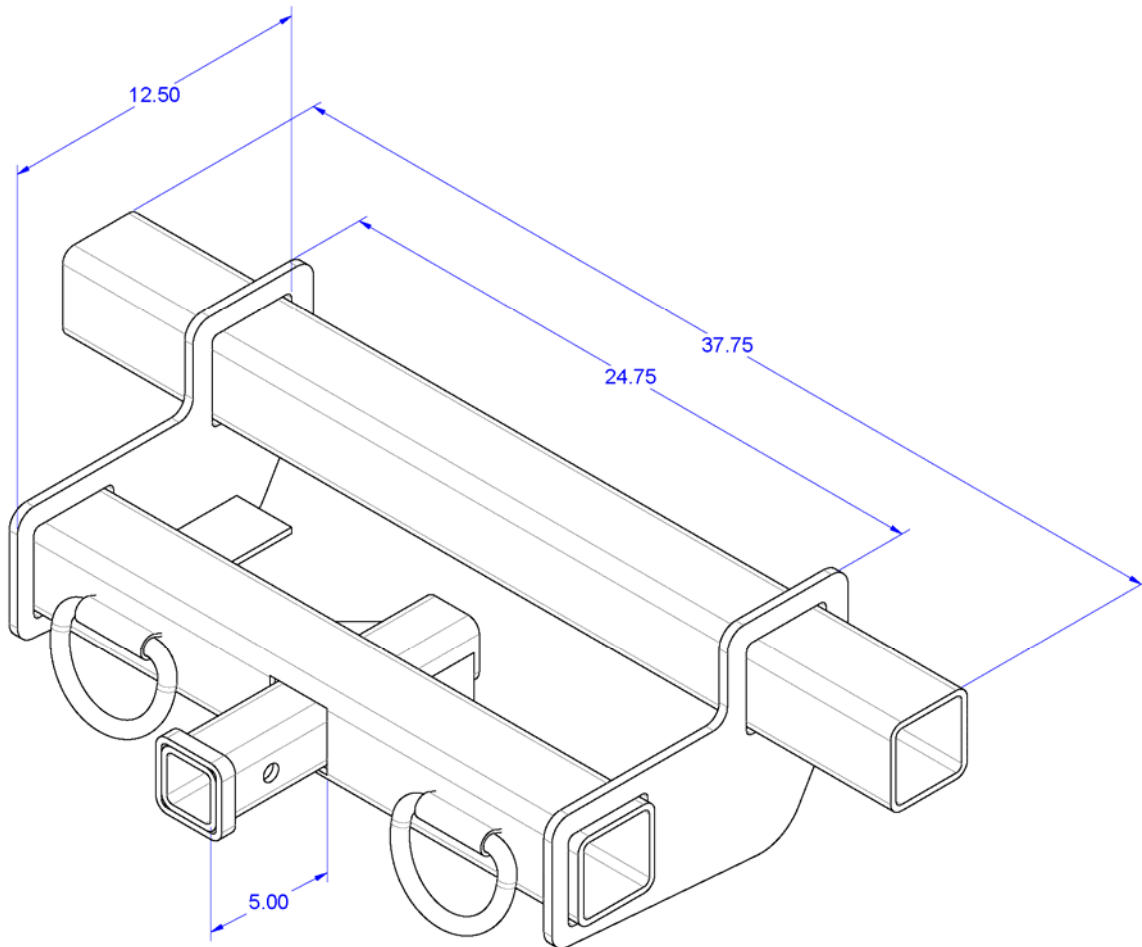



SPECIFICATIONS:

12,000 LBS RATING

2" OPENING

THIS HITCH IS FOR USE WITH A 12" BUMPER.


RECEIVER HITCH INSTALLATION TITAN SERIES

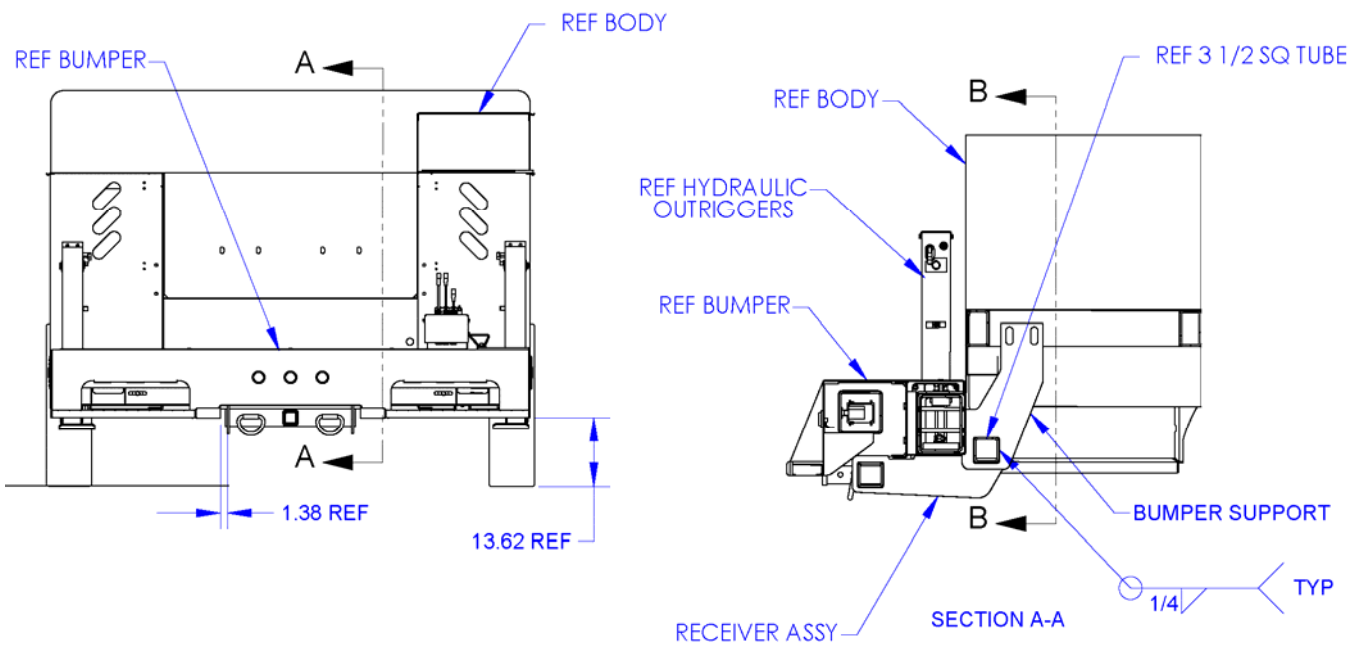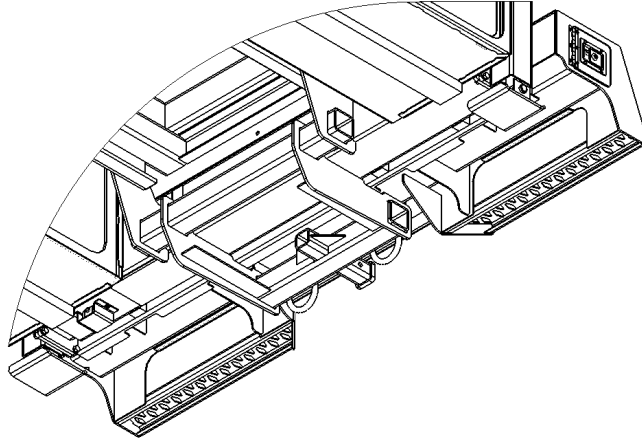



NOTE:

1. INSERT THE END OF THE 3 1/2" TUBE OF THE RECEIVER ASSY IN THE HOLE OF THE BUMPER SUPPORT.
2. CONTINUE TO SLIDE RECEIVER ASSY OVER AND INSERT THE OTHER END OF THE TUBE IN THE OTHER BUMPER SUPPORT.
3. LOCATE THE RECEIVER ASSY AS SHOWN AND WELD INTO PLACE.
4. ALSO WELD THE RECEIVER ASSY TO THE BOTTOM OF THE OUTRIGGER TUBE AS SHOWN.


TITAN 38 BUMPER INSTALLATION

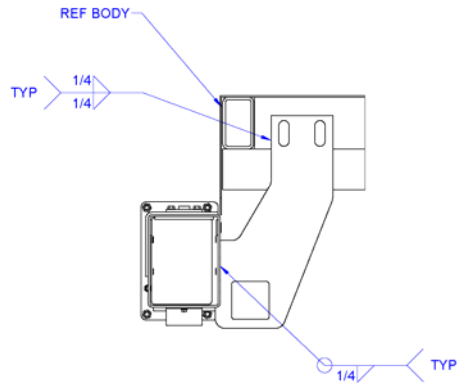

SECTION A-A

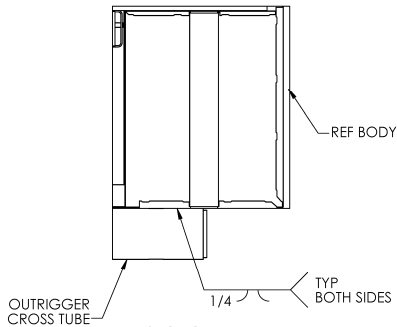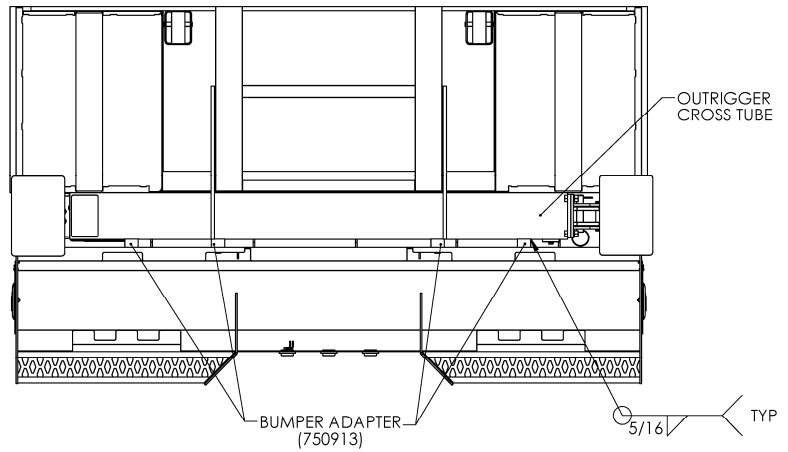


SECTION B-B

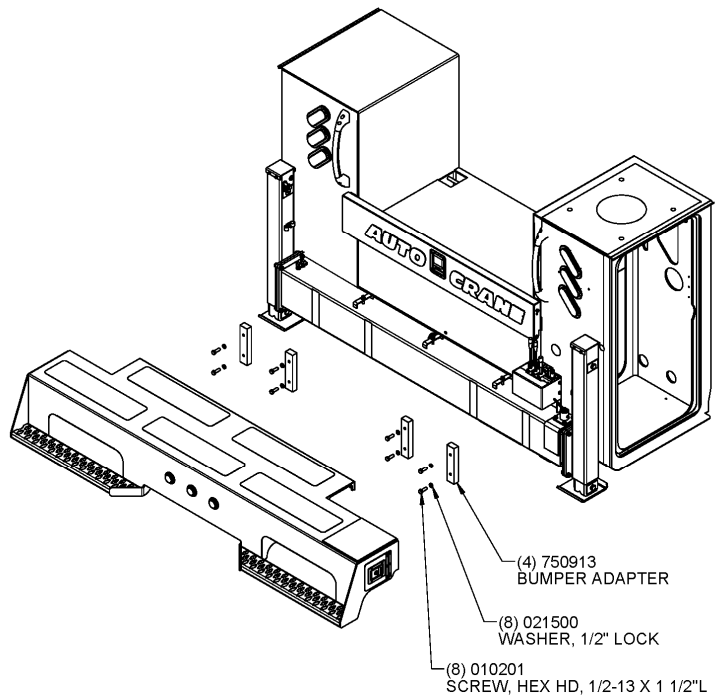

BUMPER INSTALLATION INSTRUCTIONS

- 1) ATTACH THE (4) BUMPER ADAPTERS (750913) WITH 1/2" BOLT (010201) AND 1/2" LOCK WASHER (021500).
- 2) PLACE THE BUMPER IN PLACE WITH THE BUMPER ADAPTERS AGAINST THE OUTRIGGER CROSS TUBE AND THE BUMPER TOP PLATE RESTING ONTOP OF THE CROSS TUBE.
- 3) SQUARE AND CENTER THE BUMPER TO THE REAR OF THE BODY, THEN TACK WELD THE ADAPTERS TO THE CROSS TUBE.
- 4) REMOVE THE BUMPER BY REMOVING THE 1/2" HARDWARE.
- 5) WELD ALL (4) ADAPTERS WITH A 5/16 FILLET WELD ALL AROUND.
- 6) REINSTALL BUMPER WITH 1/2" HARDWARE.


BUMPER ASSEMBLY 12", HYDRAULIC TITAN 38

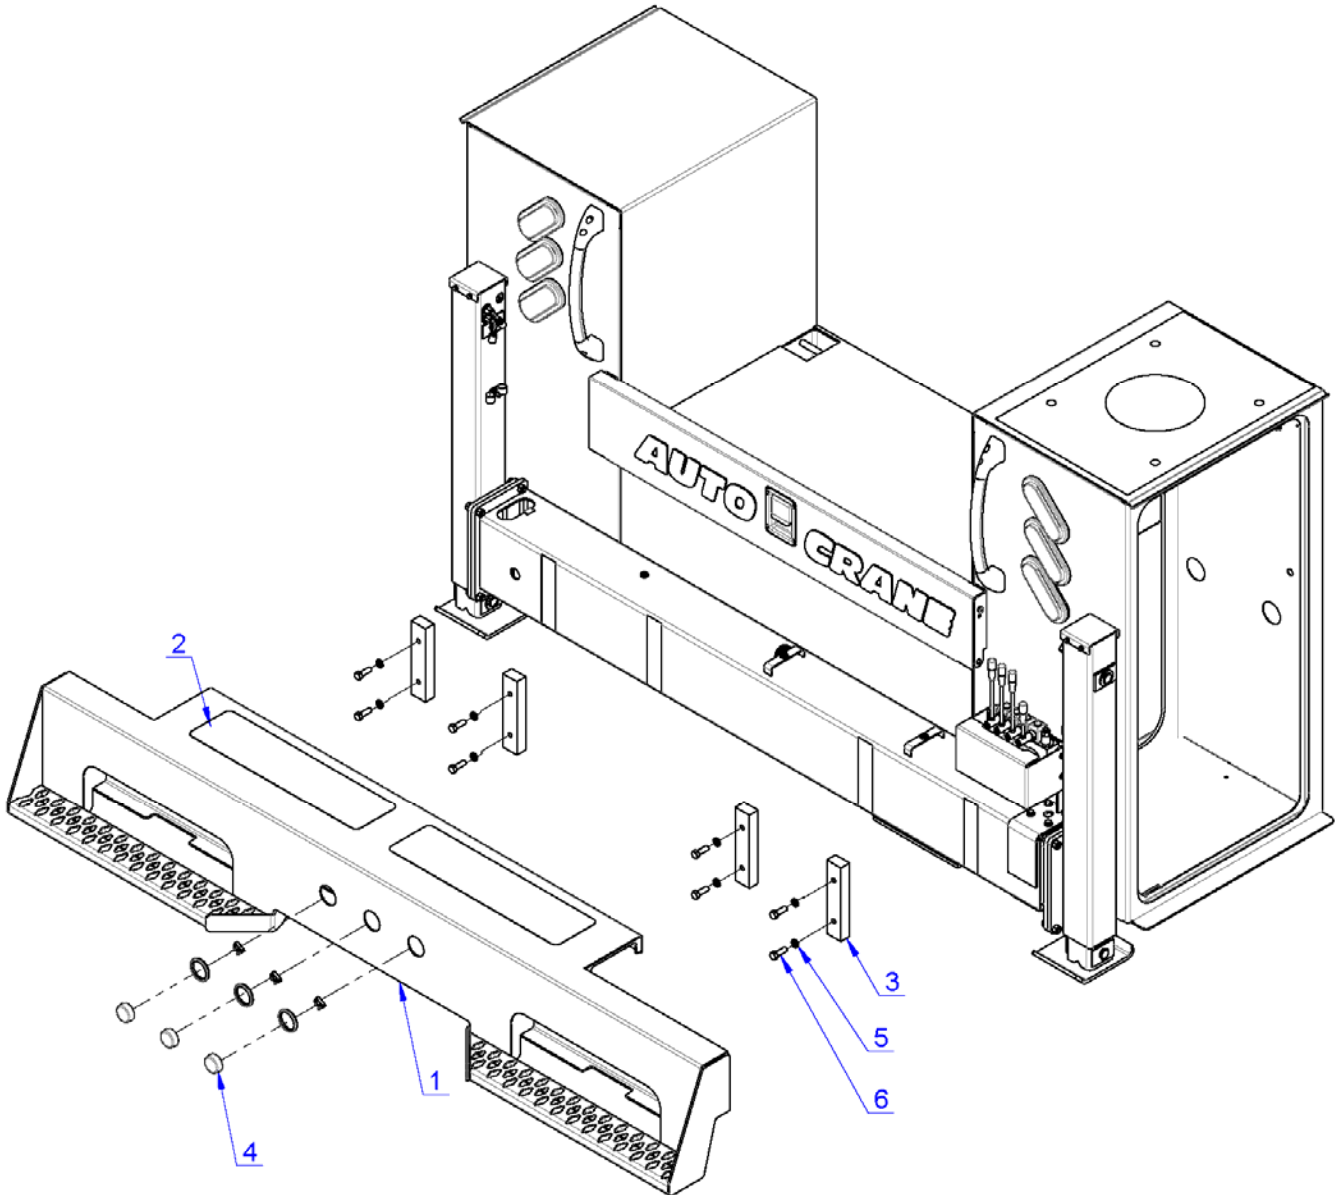

BUMPER ASSEMBLY 12", HYDRAULIC TITAN 38

ITEM NO.	LSC	RSC	PART NUMBER	DESCRIPTION
1	0	1	738750000	BUMPER ASSY 12 in RECEIVER, TITAN 38 RSC
1	1	0	738751000	BUMPER ASSY 12 IN RECEIVER, TITAN 38 LSC
2	4	4	766141000	DECAL, SAFETY SURFACE
3	4	4	750913000	BUMPER ADAPTER
4	3	3	560105000	LIGHT MARKER LED 2"
5	8	8	021500000	WASHER, SP LK 1/2
6	8	8	010201000	SCREW HX HD 1/2-13UNC x 1 1/2 LG




**BUMPER ASSEMBLY 20", HYDRAULIC
TITAN 38**

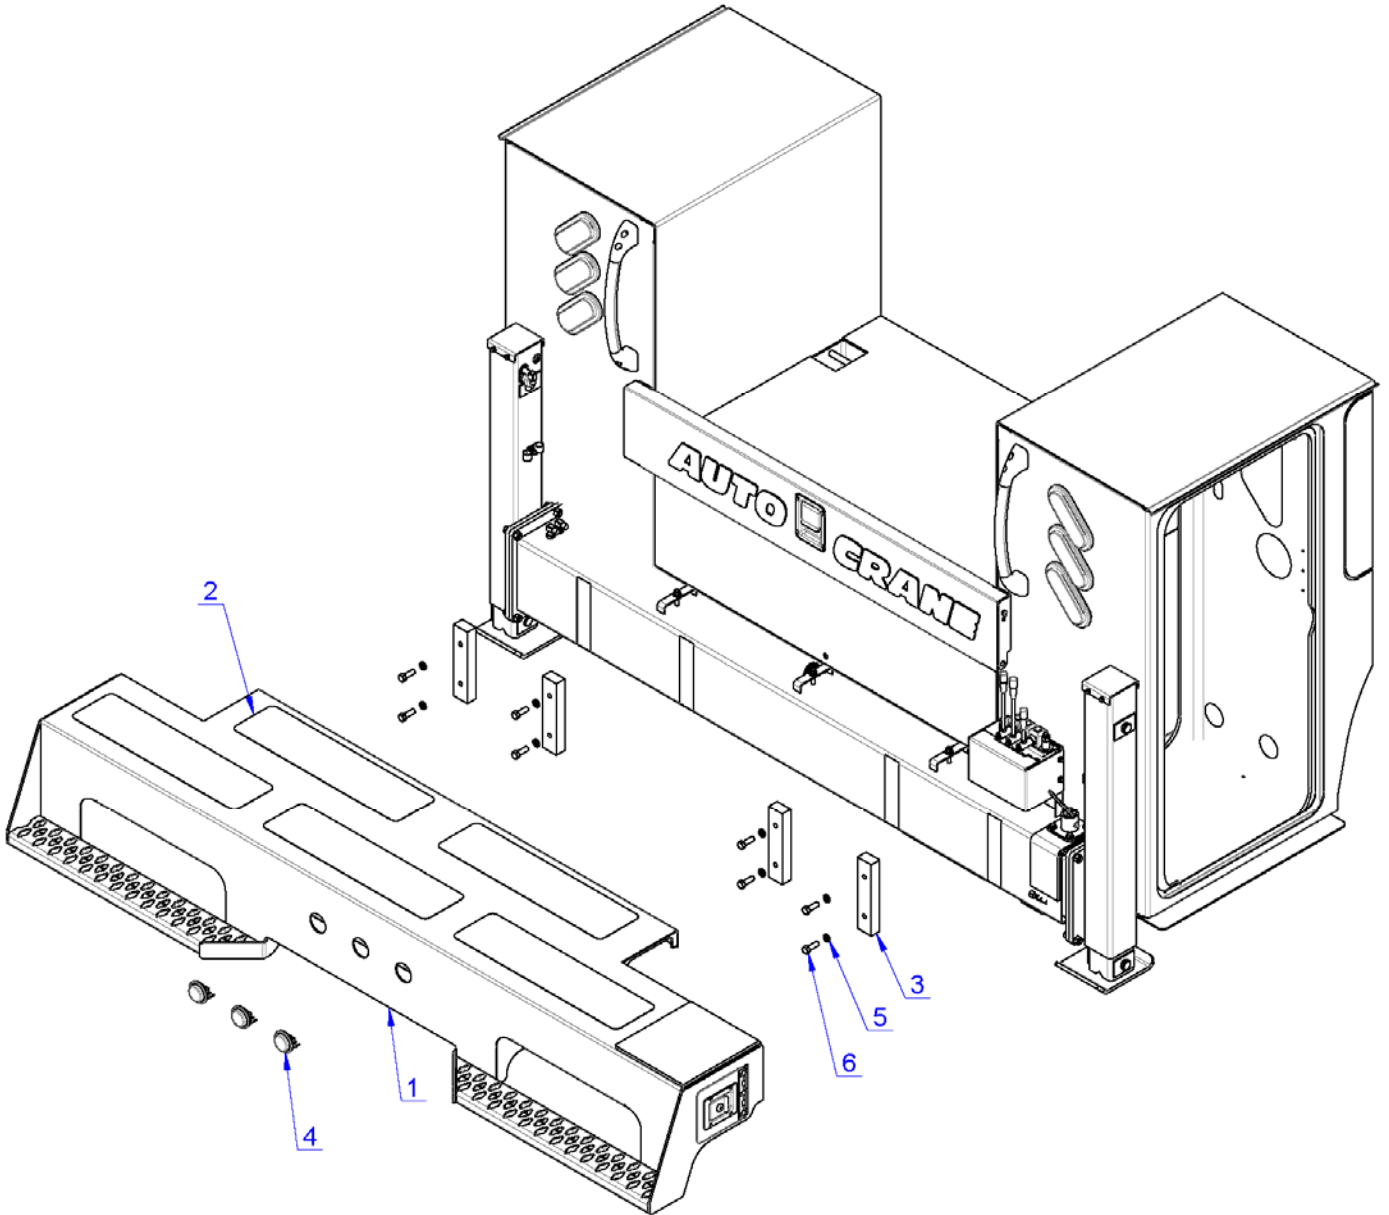

**BUMPER ASSEMBLY 20", HYDRAULIC
TITAN 38**


ITEM NO.	LSC	RSC	PART NUMBER	DESCRIPTION
1	1	0	738753000	BUMPER ASSY 20 in RECEIVER, TITAN 38 LSC
1	0	1	738752000	BUMPER ASSY 20 in RECEIVER, TITAN 38 RSC
2	5	5	766141000	DECAL, SAFETY SURFACE
3	4	4	750913000	BUMPER ADAPTER
4	3	3	560105000	LIGHT MARKER LED 2"
5	8	8	021500000	WASHER, SP LK 1/2
6	8	8	010201000	SCREW HX HD 1/2-13UNC x 1 1/2 LG

MASTER LOCK SYSTEM TITAN SERIES 84CA - P/N: 738695-XXX

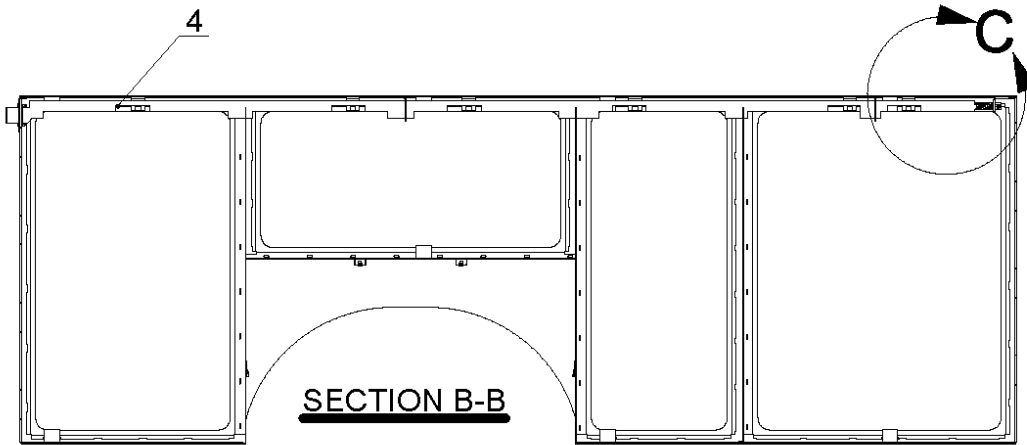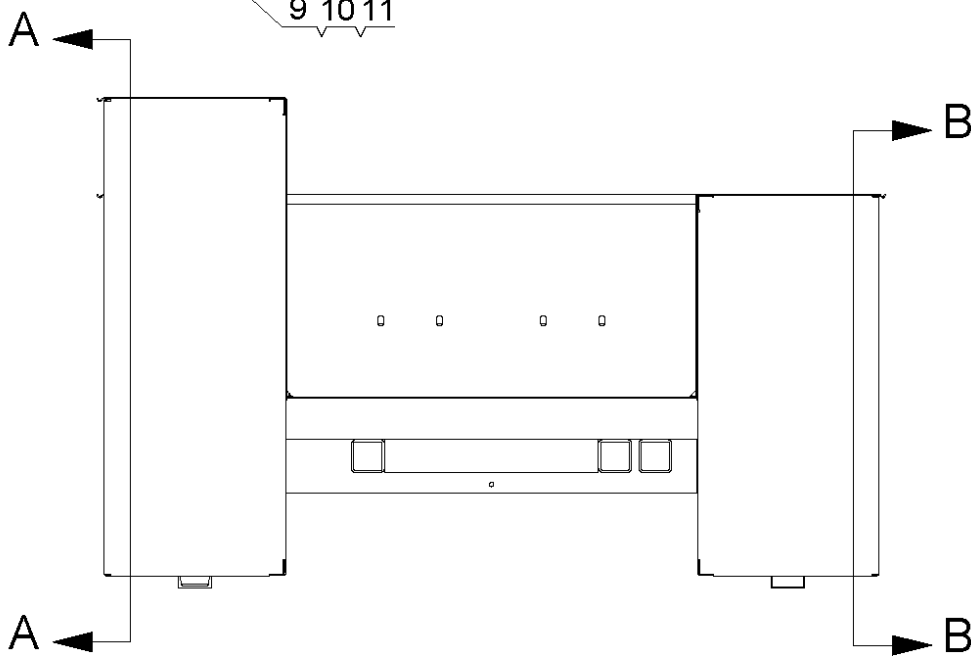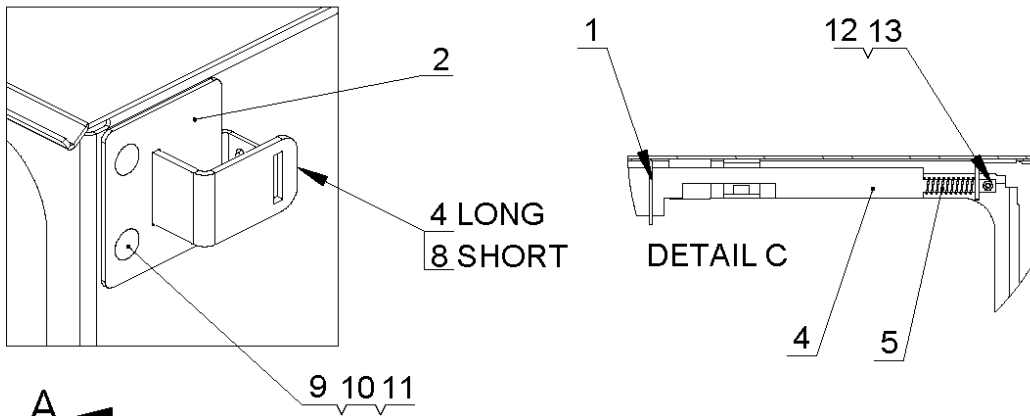

INSTALLATION INTO BOTH LS AND RS STD SIDE PACKS ARE THE SAME

MASTER LOCK SYSTEM **TITAN SERIES 84CA - P/N: 738695-XXX**

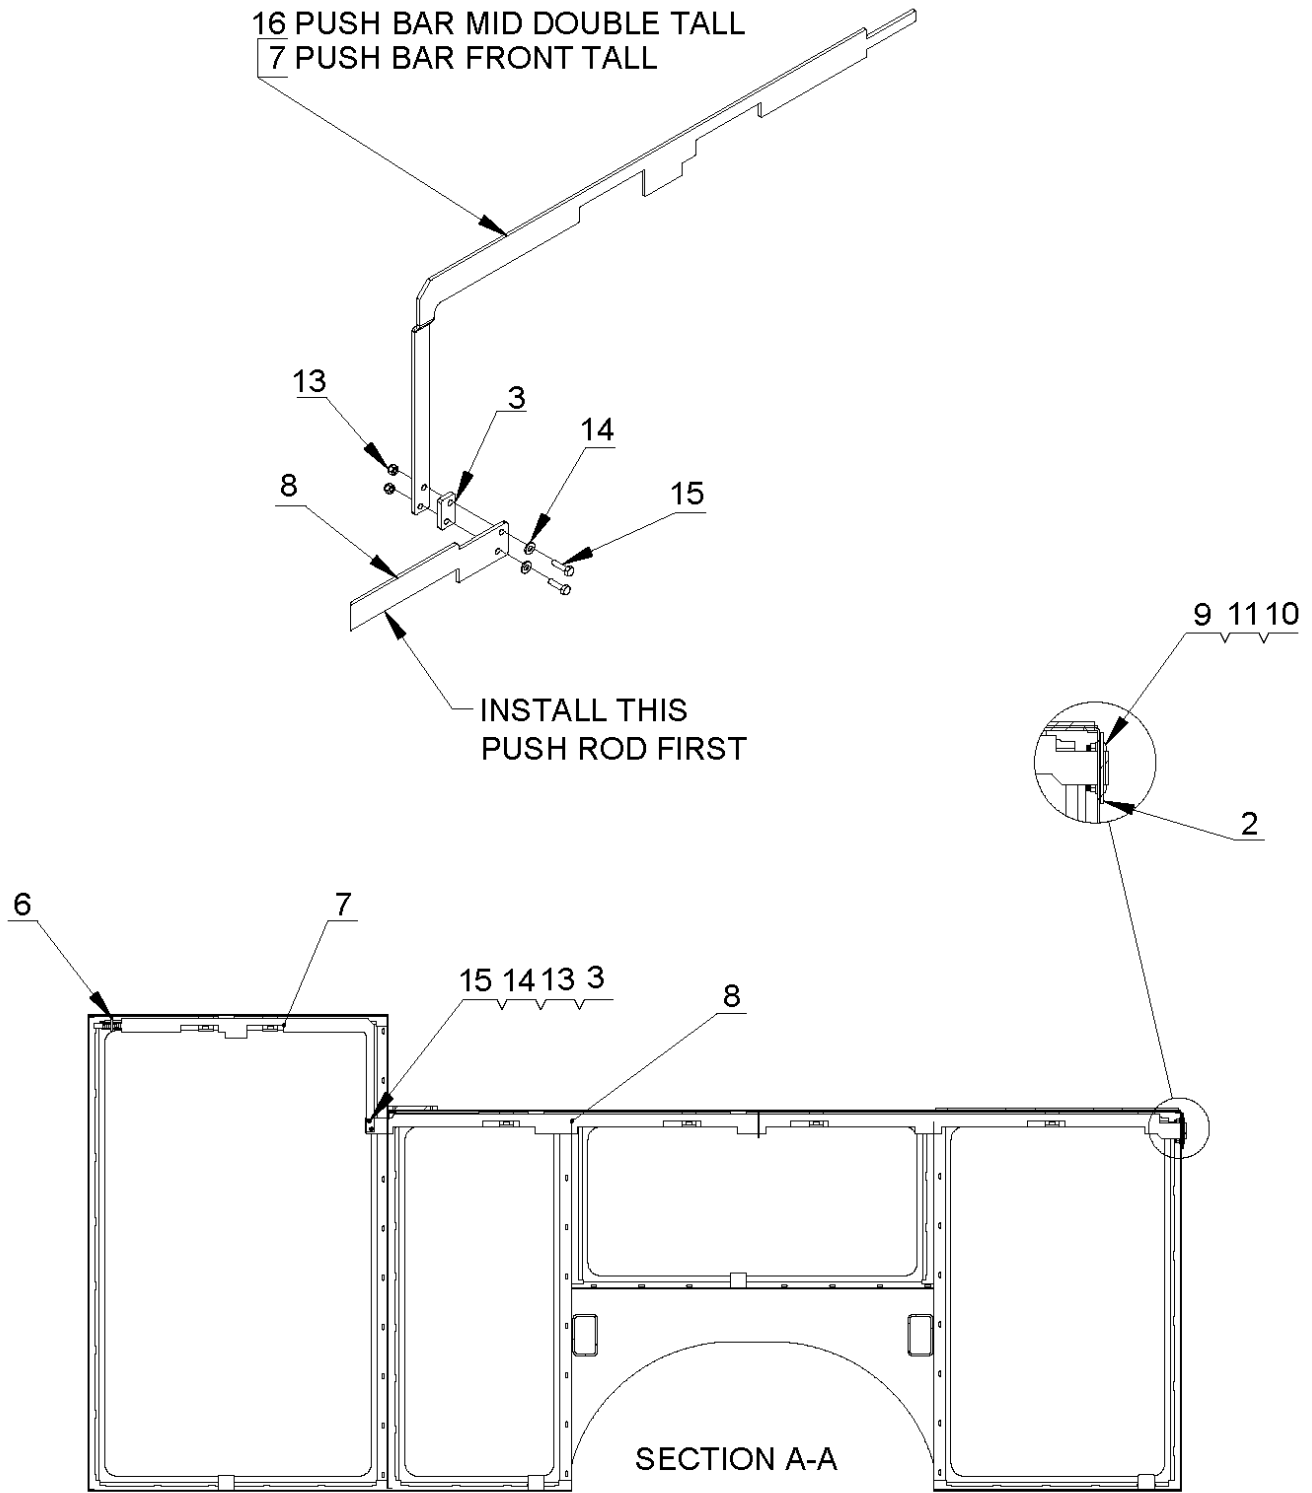

PUSH ROD INSTALLATION
 RIGHT SIDE SHOWN


MASTER LOCK SYSTEM

TITAN SERIES 84CA - P/N: 738695-XXX



MASTER LOCK SYSTEM CHART			738695-000 RS TALL	738695-001 RS/LS TALL	738695-002 LS TALL	738695-003 STD	738695-004 LS STD	738695-005 RS DBL TALL	738695-006 LS DBL TALL	738695-007 LS TALL	738695-008 RS STD
ITEM NO.	DESCRIPTION	PART NO.	QTY.	QTY.	QTY.	QTY.	QTY.	QTY.	QTY.	QTY.	QTY.
1	MASTER LOCK GUIDE	560119000	3	2	3	4	2	3	3	1	2
2	MASTERLOCK LOCKING PLATE	560121001	2	2	2	2	1	2	2	1	1
3	SPACER, PUSH ROD	760559000	1	2	1			1	1	1	
4	PUSH BAR LONG LS	739190000	1			1	1	1			
	PUSH BAR LONG RS	739190002			1	1			1		1
5	SPRING	736730000	2	2	2	2	1	2	2	1	1
6	MASTER LOCK MOUNT	560122000	2	2	2	2	1	2	2	1	1
7	PUSH BAR FRONT TALL RS	739193000	1	1							
	PUSH BAR FRONT TALL LS	739193002		1	1					1	
	PUSH BAR FRONT DBL TALL	739195000						1	1		
8	PUSH BAR SHORT LS	739191000	1	1						1	
	PUSH BAR SHORT RS	739191002		1	1						
	PUSH BAR SHORT DBL TALL RS	739192000						1			
	PUSH BAR SHORT DBL TALL LS	739192002							1		
9	SCREW CARRIAGE 3/8-16UNC X 1 LG	560138000	4	4	4	4	2	4	4	2	2
10	WASHER SP LK 3/8	021100000	4	4	4	4	2	4	4	2	2
11	NUT HX 3/8-16UNC	330372000	4	4	4	4	2	4	4	2	2
12	SCREW HX HD 1/4-20UNC X 5/8 LG CP	005401000	1		1	2	1	1	1	1	1
13	NUT HX NYLK 1/4-20UNC	016300000	1		1	2	1	5	5	2	1
14	WASHER FL 1/4	020300000	2	4	2			4	4	2	
15	SCREW HX HD 1/4-20UNC X 1 LG	005604000	2	4	2			4	4	2	
16	PUSH BAR MID DBL TALL RS	739194000						1			
	PUSH BAR MID DBL TALL LS	739194002							1		

NOTES

**MASTER LOCK SYSTEM
TITAN SERIES 60CA - P/N: 738805-XXX**

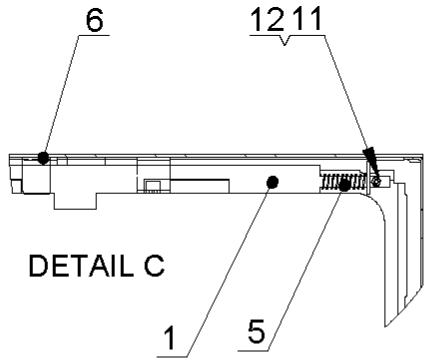


DETAIL C

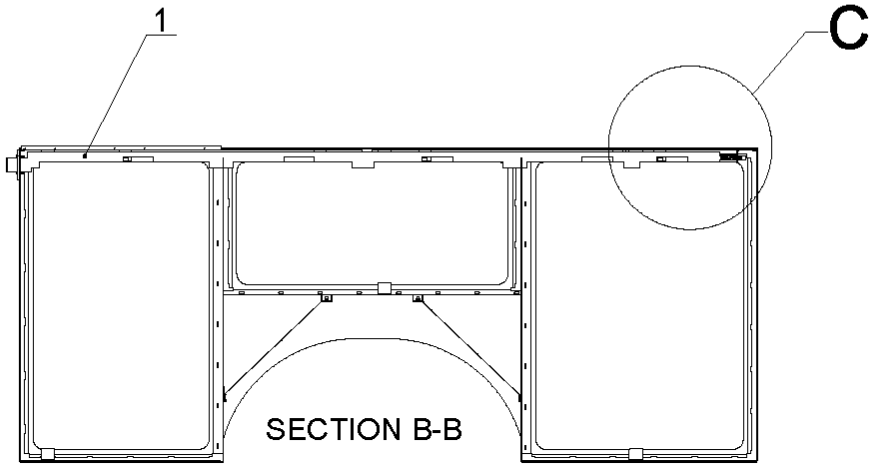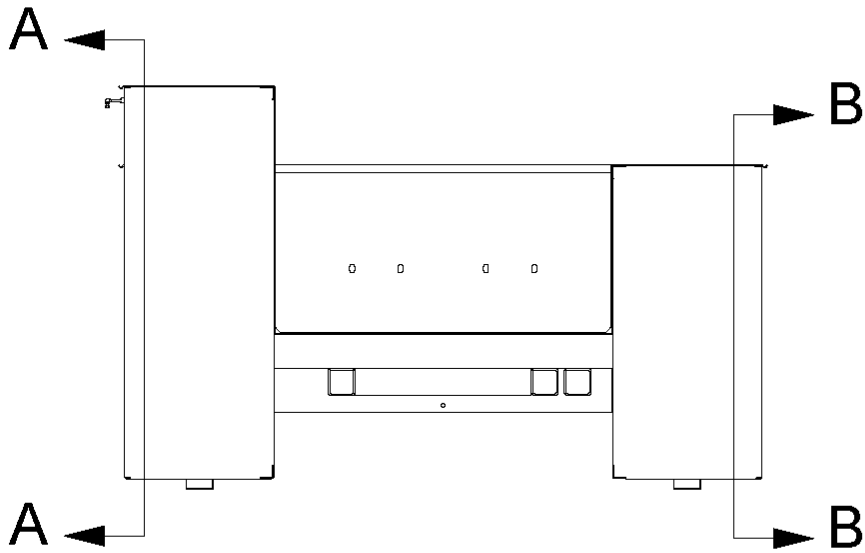

INSTALLATION INTO BOTH LS AND RS STD SIDE PACKS ARE THE SAME

**MASTER LOCK SYSTEM
TITAN SERIES 60CA - P/N: 738805-XXX**

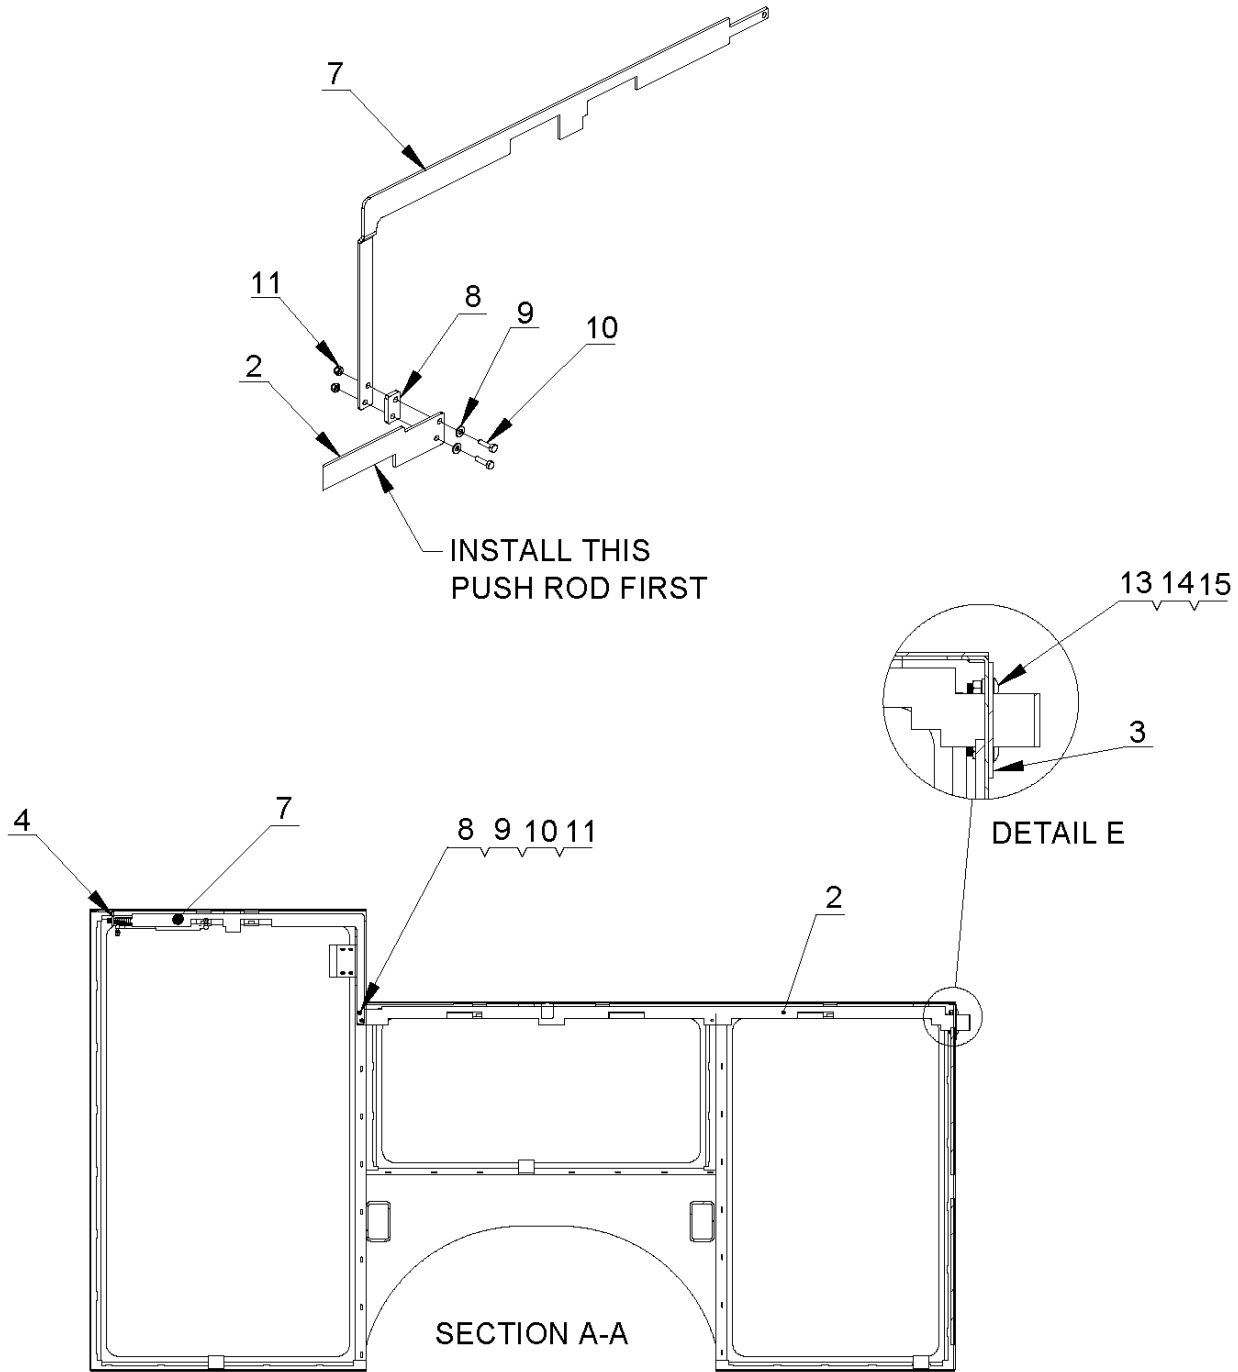

**PUSH ROD INSTALLATION
RIGHT SIDE SHOWN**



MASTER LOCK SYSTEM

TITAN SERIES 60CA - P/N: 738805-XXX

MASTER LOCK SYSTEM CHART			-000 STD	-001 RS TALL
ITEM NO.	DESCRIPTION	PART NO.	QTY.	QTY.
1	PUSH BAR LONG RS, TITAN 38/60CA	739197000	1	
	PUSH BAR LONG LS, TITAN 38/60CA	739197002	1	1
2	PUSH BAR SHORT DBL TALL RS	739192000		1
	PUSH BAR SHORT DBL TALL LS	739192002		
3	MASTERLOCK LOCKING PLATE	560121001	2	2
4	MASTER LOCK MOUNT	560122000	2	2
5	SPRING	736730000	2	2
6	MASTER LOCK GUIDE	560119000	2	2
7	PUSH BAR FRONT RS TALL, TITAN 38/60CA	739196000		1
	PUSH BAR FRONT LS TALL, TITAN 38/60CA	739196002		
8	SPACER, PUSH ROD	760559000		1
9	WASHER FL 1/4	020300000		2
10	SCREW HX HD 1/4-20UNC X 1 LG CP	005604000		2
11	NUT HX NYLK 1/4-20UNC	016300000	2	3
12	SCREW HX HD 1/4-20UNC X 5/8 LG CP	005401000	2	1
13	SCREW CARRIAGE 3/8-16UNC X 1 LG	560138000	4	4
14	WASHER SP LK 3/8	021100000	4	4
15	NUT HX 3/8-16UNC	330372000	4	4

NOTES

SHELF LOCATION TITAN SERIES 738830-XXX

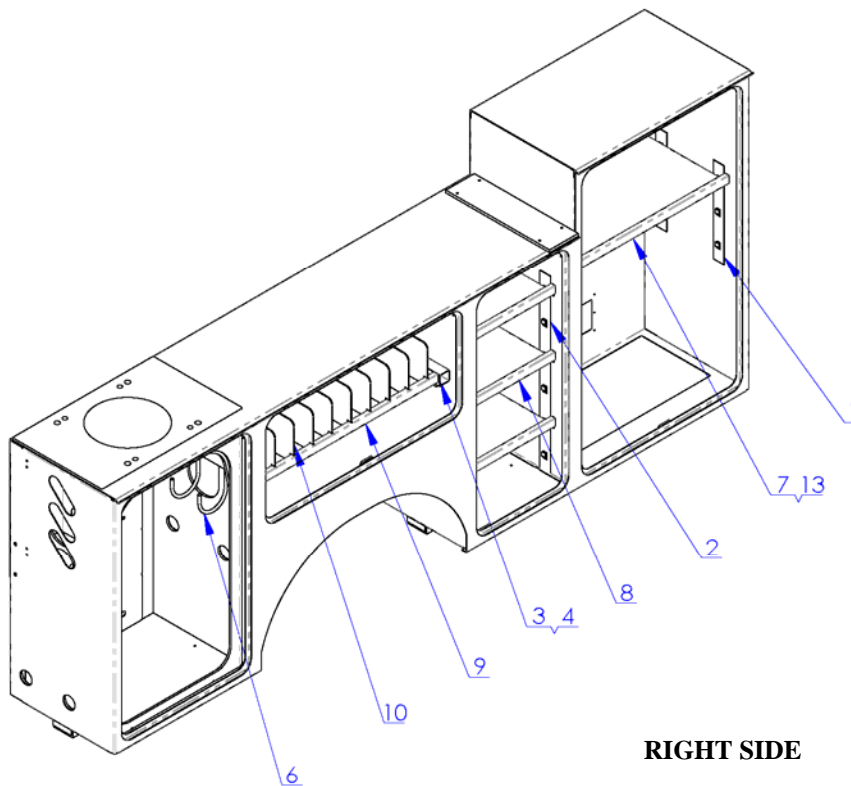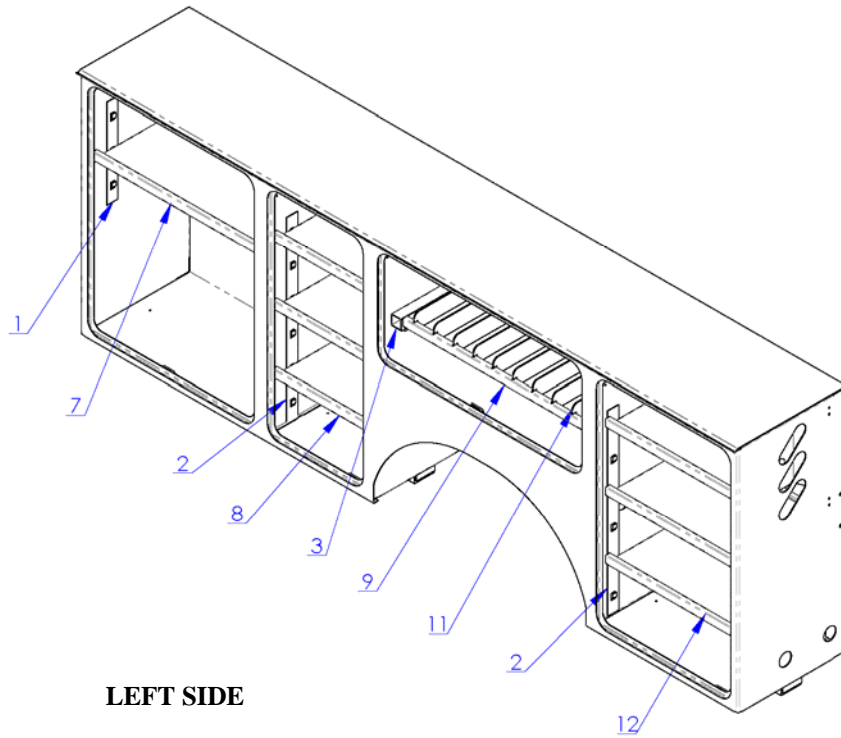

SHELF LOCATION TITAN SERIES 738830-XXX

ITEM	PART NO.	DESCRIPTION	000 QTY	001 QTY	002 QTY	003 QTY	004 QTY	005 QTY	006 QTY	007 QTY	008 QTY
1	750798000	SHELF STRIP SUPPORT 18"	8	4						4	8
2	750799000	SHELF STRIP SUPPORT 36"	12		4				4		4
3	340196000	TBG SQ 2 X .083W X 17	4			2	2				4
4	750804000	BRKT SHELF	4			2	2				4
**5	560227000	TBG SQ STL 2 1/2 X .120W X 36	2						2		2
6	750807000	CHAIN HOOK ASS'Y	1					1			1
*7	738825000	SHELF FRONT COMP	2	1							
8	738741000	SHELF MID TITAN 38	6		3						
9	738831000	SHELF HORIZ (PLASTIC DIVIDERS)	2			1	1				2
10	560481001	DIVIDER, SHELF TALL (PLASTIC)	10			10					10
11	560480001	DIVIDER, SHELF SHORT (PLASTIC)	13				10		3		13
12	738832002	SHELF REAR (PLASTIC DIVIDERS)	3						3		3
*13	738794000	SHELF FRONT COMP								1	2
*	FRONT COMP. SHELF 60CA LEFT OR RIGHT ONLY										
**	ITEM NOT SHOWN										

NOTE:

000 EQUALS ALL PARTS FOR TOTAL SHELF PACKAGE

001 EQUALS ONLY SHELVING FRONT COMP. CURB OR STR

002 EQUALS ONLY SHELVING MID COMP. CURB OR STR

003 EQUALS ONLY SHELVING HORIZ. COMP/ TALL DIVIDERS

004 EQUALS ONLY SHELVING HORIZ. COMP/ SHORT DIVIDERS

005 EQUALS ONLY CHAIN HOOK/REAR COMP. CRANE BOX



006 EQUALS ONLY SHELVING/REAR COMP. OPPOSITE CRN BOX

007 EQUALS ONLY SHELVING FRONT COMP. 60CA CURB OR STR


008 EQUALS ALL PARTS FOR TOTAL SHELF PACKAGE FOR A TITAN 38/60CA

SLIDE OUT TRAY TITAN SERIES - P/N 560238000

(TO BE USED IN FRONT STREET OR CURB SIDE COMPARTMENT)

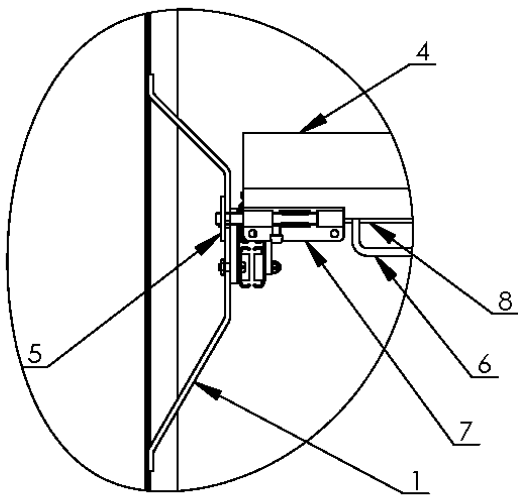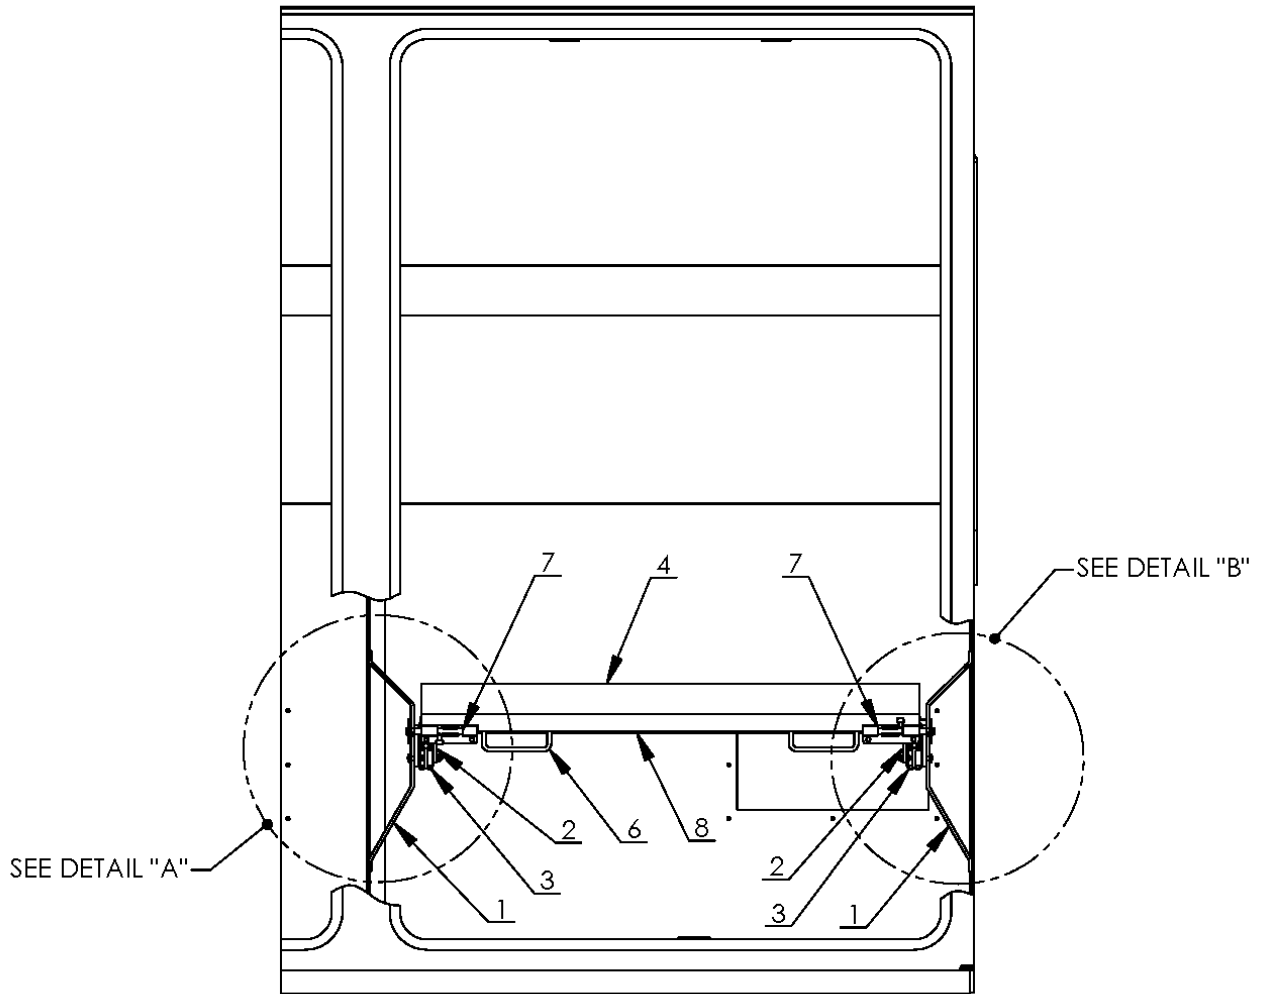

SEE DETAIL "A"

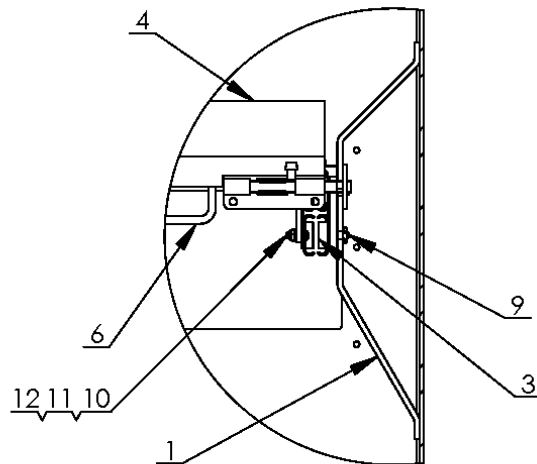


SEE DETAIL "B"

**SLIDE OUT TRAY
TITAN SERIES - P/N 560238000**

ITEM NO.	QTY.	PART NO.	DESCRIPTION
1	2	560240000	SUPPORT WDMT SLIDE OUT TRAY
2	2	754554000	SUPPORT SHELF
3	1	754551000	SLIDE SET 18/550#
4	1	560241000	SHELF SLIDE OUT TRAY
5	2	750747000	BARREL BOLT RETAINER
6	2	725317000	DRAWER PULL
7	2	750742000	BARREL BOLT
8	2	340040000	ANG 1 X 1 X 1/4 X 27.50
9	20	001204000	SCREW FL HD #8-32UNC X 3/4 LG
10	20	753275000	SCREW SOC BUT HD #8-32UNC X 5/8 LG GR8
11	20	019700000	WASHER SP LK #8
12	20	725321000	NUT HX NYLK #8-32UNC

TOOL BOX TITAN 38

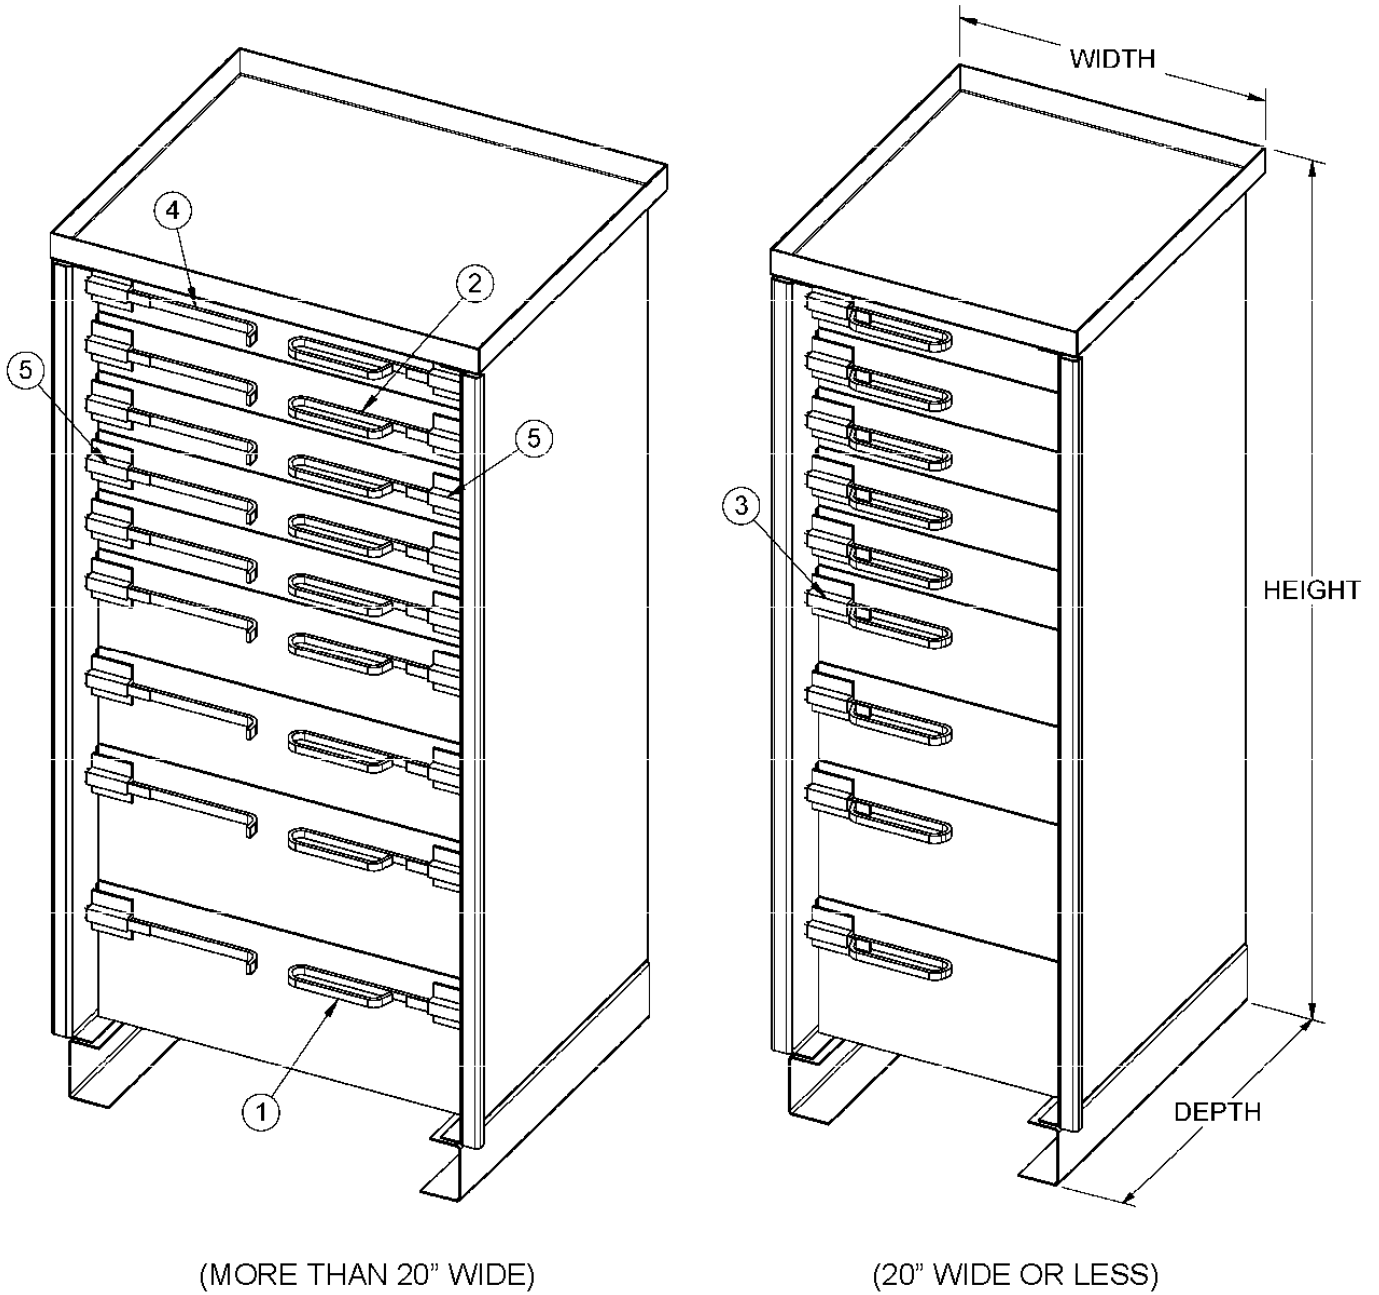

(MORE THAN 20" WIDE)

(20" WIDE OR LESS)


TOOL BOX TITAN 38

TITAN LEFT/RIGHT SIDE FRONT COMPARTMENT ONLY

TOOLBOX PART NUMBERS		
COMPARTMENT	PART NO.	DESCRIPTION
FRONT (TALL)	560127000	TOOLBOX, (2) 7", (2) 5", (5) 3", 30W x 44.25H x 18D, FRONT, T38(TALL)/50/60/70
FRONT (STD)	560320000	TOOLBOX, (1) 7", (2) 5", (5) 3", 28W x 37.25H x 18D, FRONT, T38(STD)
MID	560321000	TOOLBOX, (1) 7", (2) 5", (5) 3", 16W x 37.25H x 18D, MID, T38
HORIZONTAL	560420000	TOOLBOX, (1) 5", (2) 3", 37W x 16.25H x 18D, HORIZ, T38
REAR	560421000	TOOLBOX, (1) 7", (3) 5", (4) 3", 24W x 39.25H x 18D, REAR, T38


TOOLBOX SERVICE PART NUMBERS		
ITEM	PART NO.	DESCRIPTION
1	560330000	BRUSHED HANDL W/O LOGO
2	560330003	8" BAR FOR HANDLE, TOOLBOX (24"W)
	560330005	10" BAR FOR HANDLE, TOOLBOX (28"W)
	560330006	11" BAR FOR HANDLE, TOOLBOX (30"W)
	560332008	13 5/8" THUMB RELEASE BAR, W/O HANDLE, TOOLBOX (37"W)
3	560332000	LATCH, TOOLBOX (14" WIDE UNIT WIDTH)
	560332010	LATCH, TOOLBOX (15-1/2" WIDE UNIT WIDTH)
	560332011	LATCH, TOOLBOX (16" WIDE UNIT WIDTH)
	560322012	LATCH, TOOLBOX (20" WIDE UNIT WIDTH)
4	560332003	7 1/8" THUMB RELEASE BAR, W/O HANDLE, TOOLBOX (24"W)
	560332005	9 1/8" THUMB RELEASE BAR, W/O HANDLE, TOOLBOX (28"W)
	560332006	10 1/8" THUMB RELEASE BAR, W/O HANDLE, TOOLBOX (30"W)
	560332008	13 5/8" THUMB RELEASE BAR, W/O HANDLE, TOOLBOX (37"W)
5	560331000	LATCH BOLT
*	560333000	HEAVY DUTY DRAWER SLIDES 16"
*	560336000	DIVIDER TOOLBOX 7"HIGH X 16"DEEP
*	560335000	DIVIDER TOOLBOX 5"HIGH X 16"DEEP
*	560334000	DIVIDER, 3" HIGH X 16" DEEP
*		NOT SHOWN

OXY/ACET ASSY TITAN SERIES - P/N: 736230000

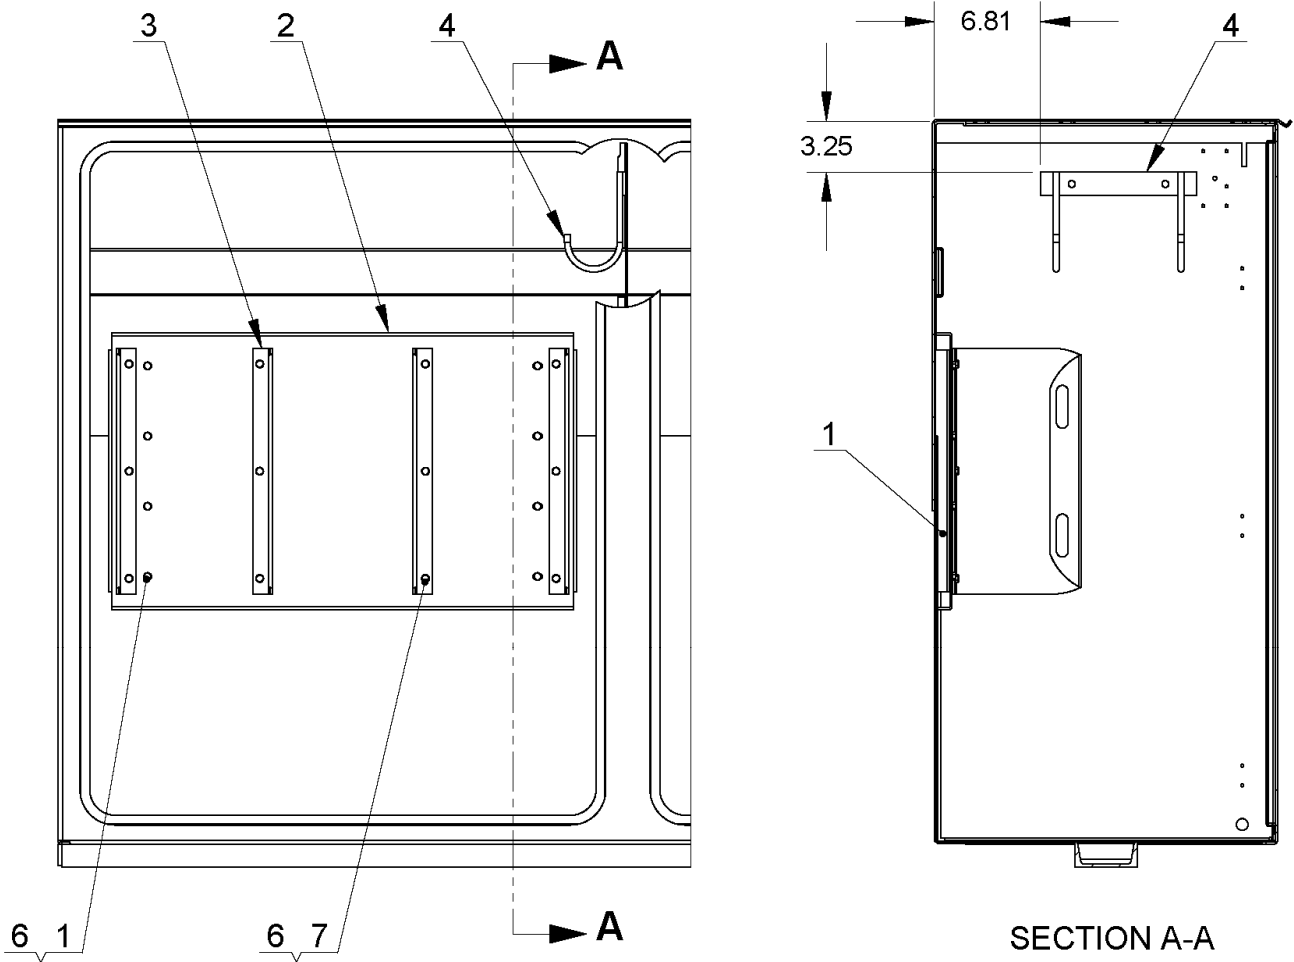


ITEM NO.	QTY.	PART NO.	DESCRIPTION
1	2	738766000	MOUNTING CHANNEL ASSY
2	1	736226000	OXY-ACET MTG PLT ASSY
3	4	736229000	DIVIDER PNL - OXY/ACET
4	1	750613000	HOSE HOOK WDMT
5	1	725039000	STRAP HOLD DOWN OXY/ACET
6	20	020200000	WASHER SP LK 1/4
7	20	005500000	SCREW HX HD 1/4-20UNC X 3/4 LG

OXY DIVIDER/SHELVING PACKAGE TITAN SERIES - P/N: 560483000

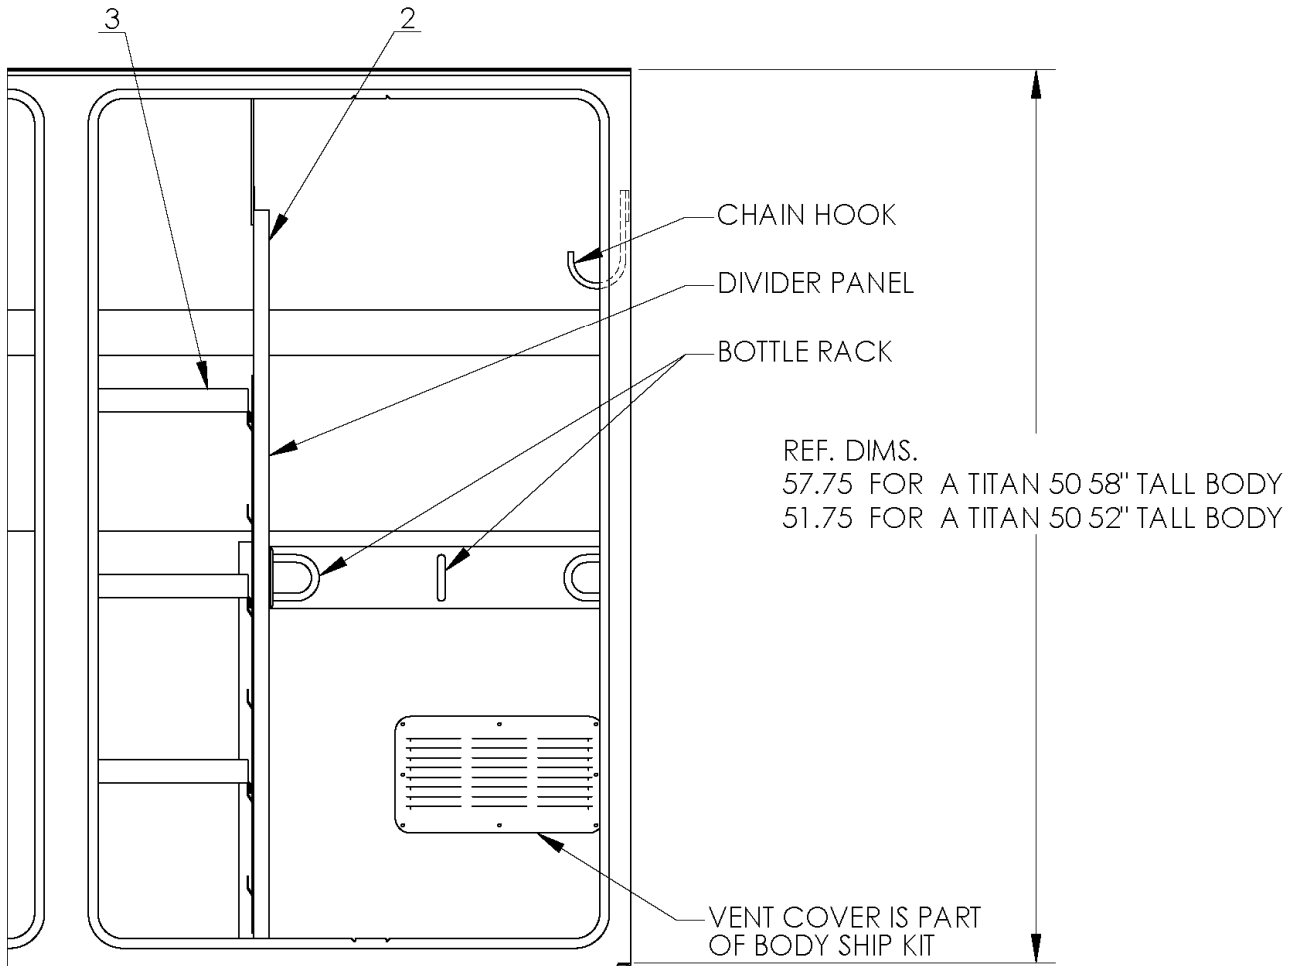


ITEM NO.	QTY.	PART NO.	DESCRIPTION
1	1	725039000	STRAP HOLD DOWN OXY/ACET
2	1	560400000	OXY DIVIDER/SHELVING WELDMENT
3	3	560484000	SHELF FRONT COMP (OXY/DIVIDER)

DROP WELL TITAN SERIES

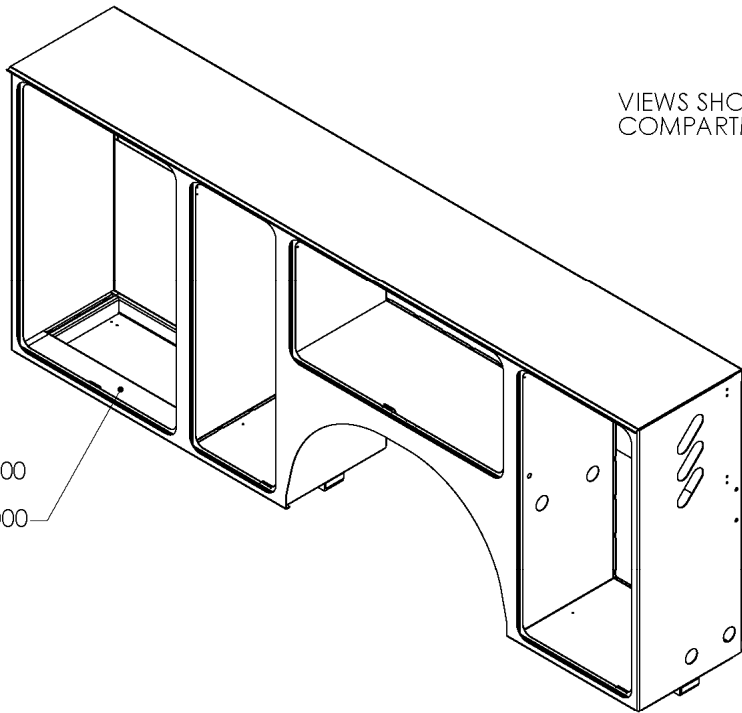



VIEWS SHOWS DROP WELL IN THE FRONT COMPARTMENT

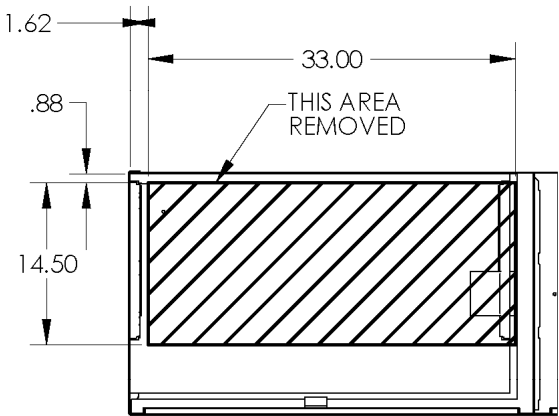

FRONT COMP MODIFICATION
CUTOUT DETAIL FOR DROP BOX

2" DROP WELL

6" DROP WELL


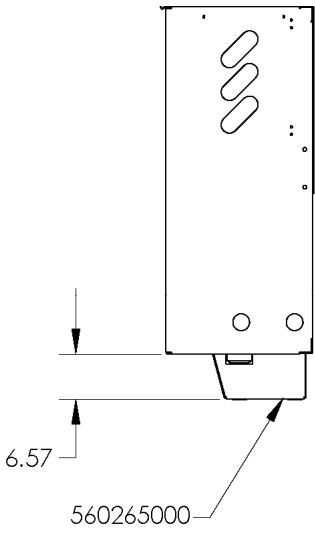
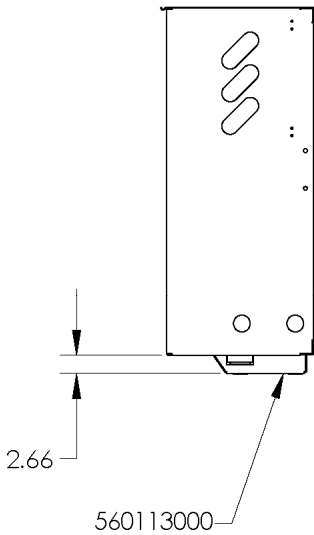


NOTES

PARTS WASHER TITAN SERIES

PART NO.	A	B	C	D	E	F	G
560600000	19 3/4	16	11 3/8	18	20 3/8	15 7/8	16 7/8
560601000	18	16	8 15/16	14	16 3/8	12	-


- ELECTRONIC 12V DC PUMP w/ 7-9 PSI 45 GPH DELIVERY CAPACITY.
- TRIM-LOK 4100B3X1/8C TANK LID WEATHERSTRIP
- 20 MESH SUCTION STRAINER
- 10 MICRON SPIN ON FILTER ELEMENT
- WEATHERPAK 2 PRONG SEALED
- ELECTRICAL SWITCH CONNECTOR
- WIRE LEAD INCLUDES TOGGLE AND PILOT LIGHT w/BRACKET

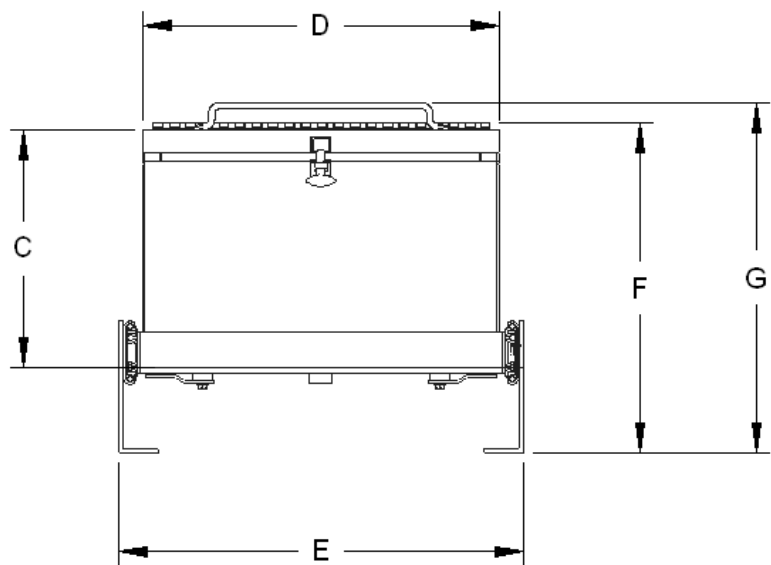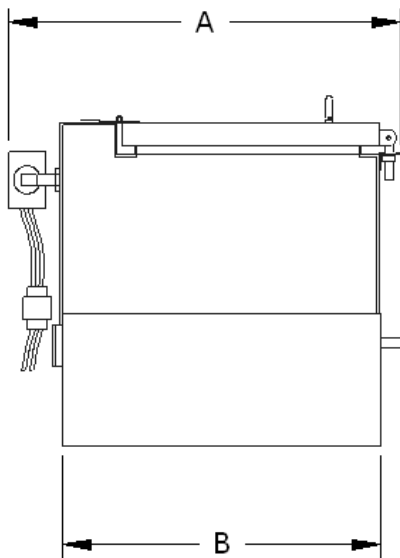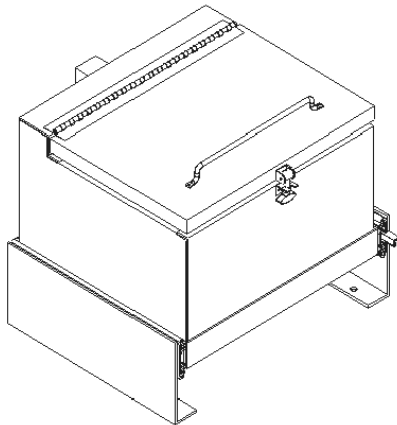


ROPE LIGHT KIT

TITAN SERIES - P/N: 560271-XXX


3.36 WATTS PER FOOT
 LAMPS SPACED EVERY 1"
 BULB LIFE: 25,000 HOURS
 TEMP RATING: +140 TO -40 DEGRESS F
 LUMINOUS INTENSITY: 350 L

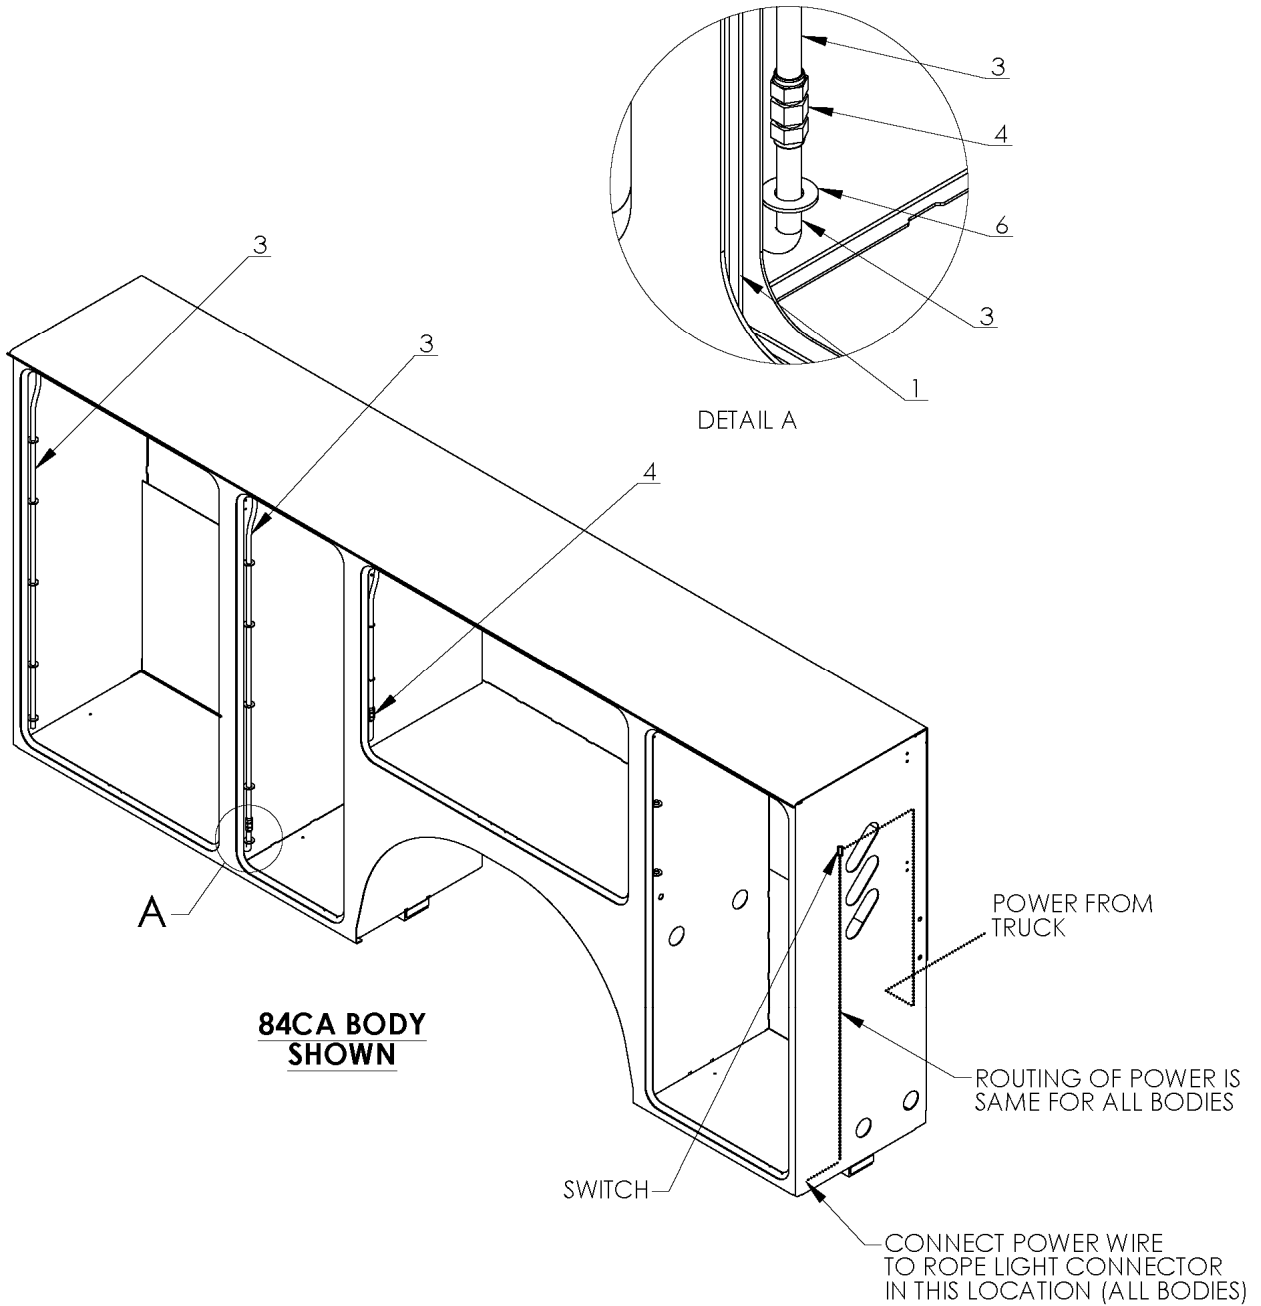

**ROPE LIGHT KIT
TITAN SERIES - P/N: 560271-XXX**

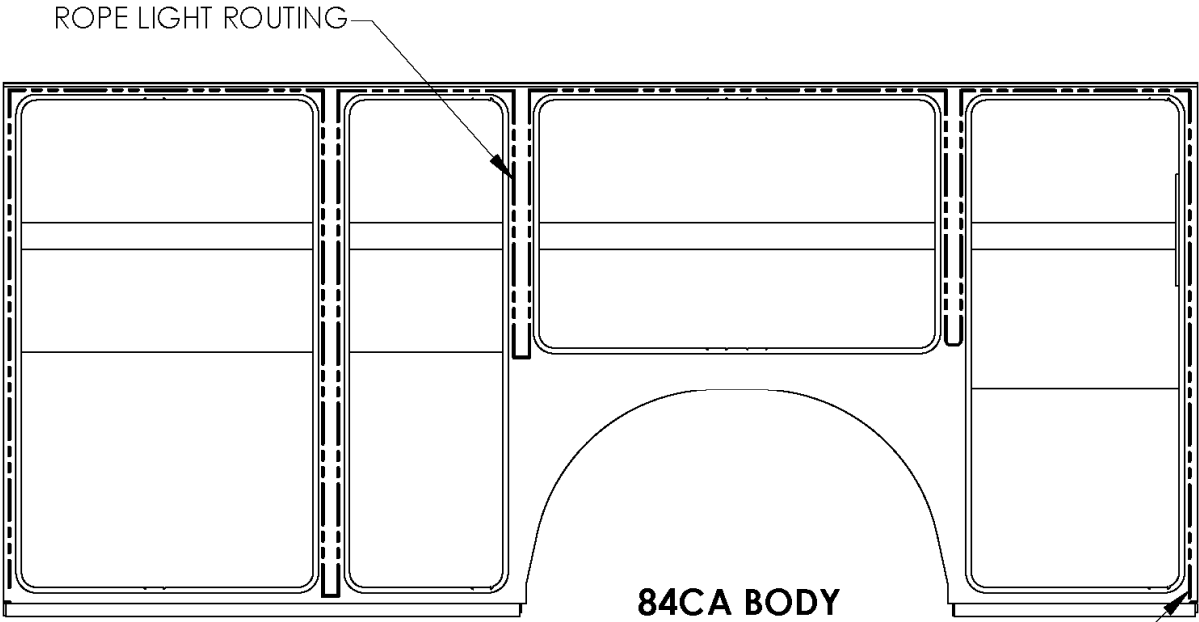


CONNECT POWER WIRE TO ROPE LIGHT CONNECTOR IN THIS LOCATION (ALL BODIES)

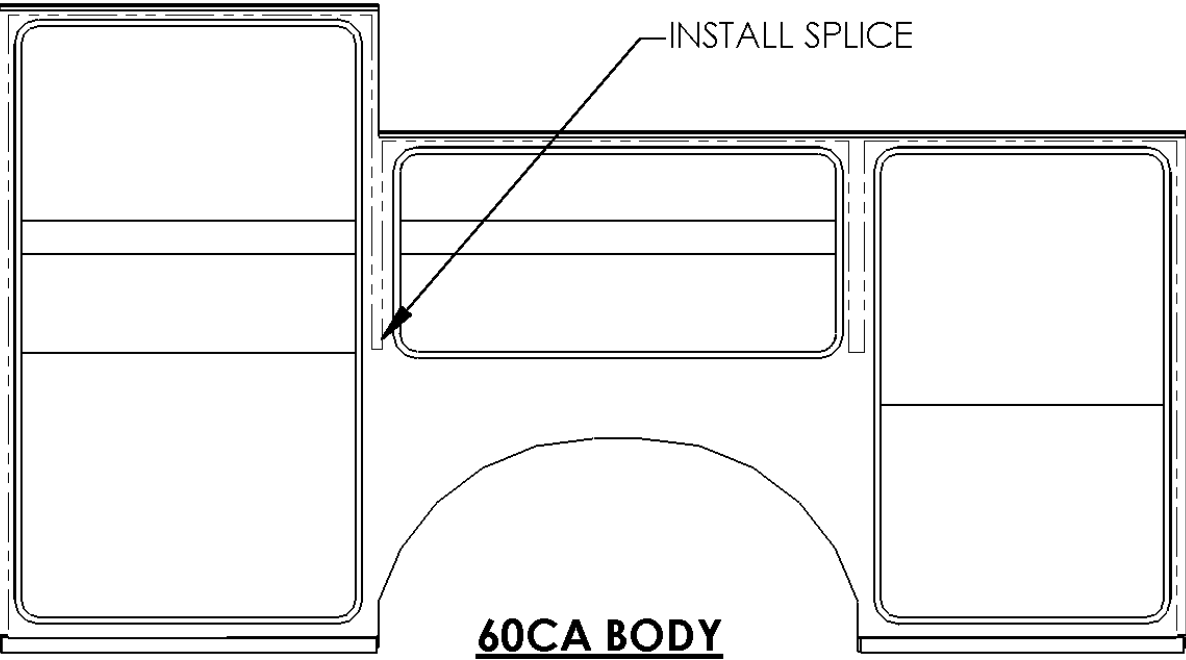


ROPE LIGHT KIT

TITAN SERIES - P/N: 560271-XXX

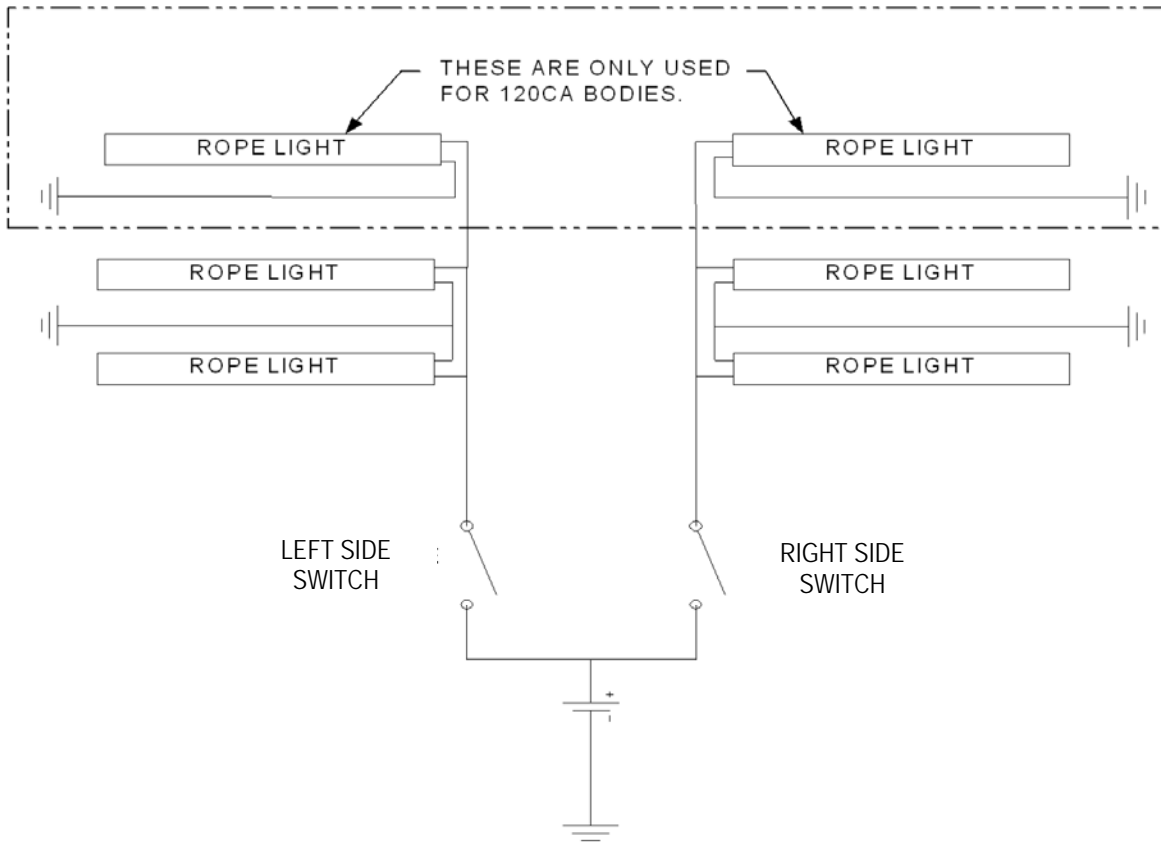

COMPARTMENT LIGHT KIT CHART			-000 (84 CA)	-020 (60 CA)
ITEM NO.	DESCRIPTION PART,NO.	PART NO.	QTY.	QTY.
1	GROMMET, RUBBER	750169000	6	6
2	SWITCH TOGGLE (ON-OFF)	750739000	2	2
3	LIGHTING, ROPE	560116000	3	3
4	SPLICE, 1/2" ROPE LIGHT	560388000	2	2
5	TIE WRAP PUSH-IN	560383000	20	12
6	WASHER FL 5/8 X 1 5/16 OD	407314000	64	56
7	WIRE 16GA 600V BLACK	800590000	30'	30'


COMPARTMENT LIGHT KIT TITAN SERIES - P/N: 560271-XXX

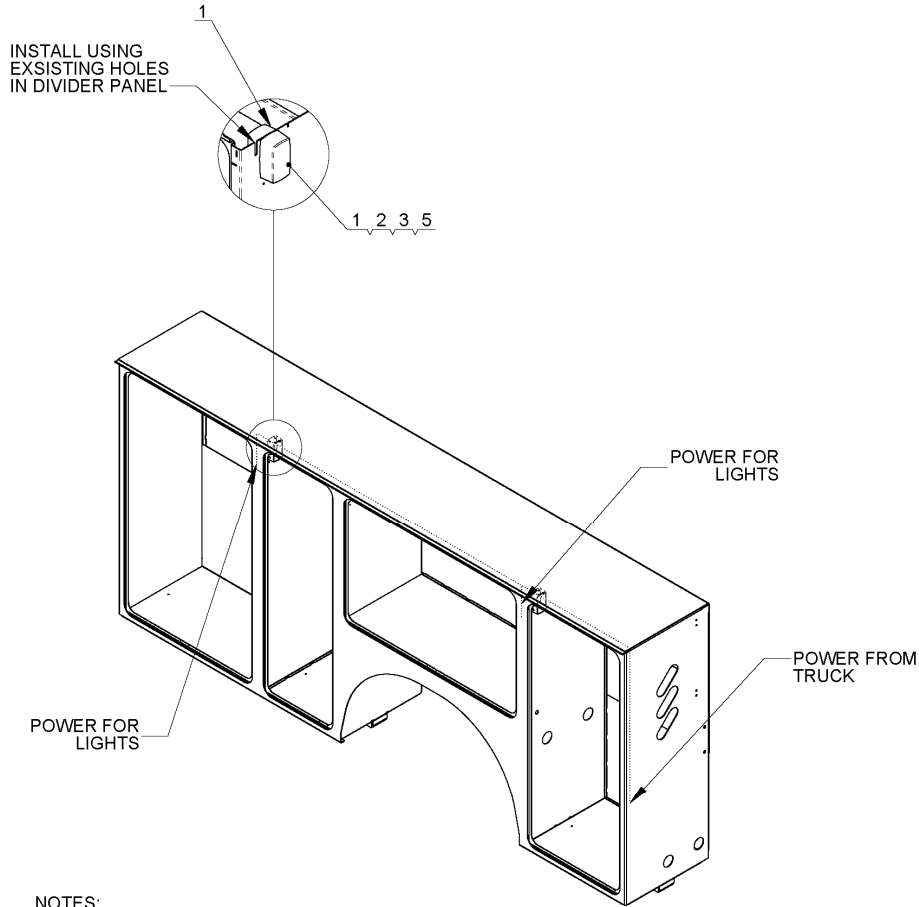

- NOTES:
1. MOUNTING FOR 84 CA IS SHOWN. MOUNTING FOR 120CA AND 60 CA ARE SIMLIAR. SEE NEXT SHEET FOR WIRING DIAGRAM.
 2. LEFT SIDE ROUTING SHOWN. RIGHT SIDE OPPOSITE.


COMPARTMENT LIGHT KIT CHART			-001 - 84 CA	-021 - 60 CA
ITEM #	DESCRIPTION	PART. NO.	QTY.	QTY.
1	LIGHT, COMPARTMENT	750730000	8	10
2	WASHER FL #8 ZP	019701000	16	20
3	SCREW RD HD #8-32UNC X 3/4LG	001503000	16	20
4	WASHER SP LK #8	019700000	16	20
5	NUT HX #8-32UNC CP	015500000	16	20
6	WIRE 16 GA 600V BLACK	800590000	40 FT	36 FT

COMPARTMENT LIGHT KIT TITAN SERIES - P/N: 560271-XXX

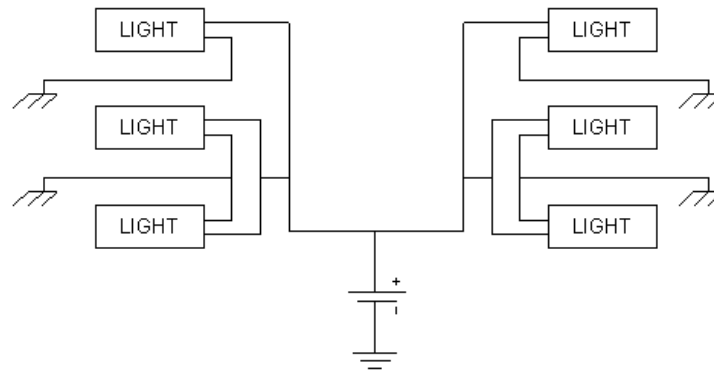

560271021 - 60 CA

THE COMPARTMENT LIGHTS ARE MOUNTED BACK TO BACK ON THE DIVIDER PANEL BETWEEN THE HORIZONTAL AND REAR COMPARTMENTS. THE OTHER LIGHT IS MOUNTED ON THE DIVIDER PANEL BETWEEN THE FRONT & HORIZONTAL COMPARTMENTS FACING THE FRONT COMPARTMENT

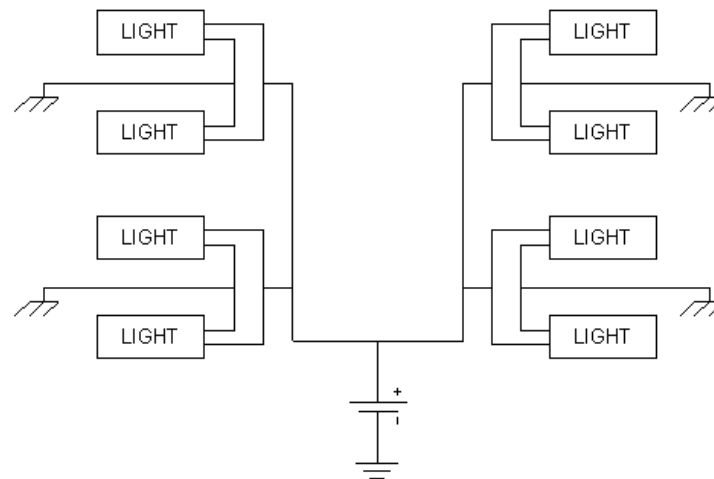

560271001 - 84 CA


THE COMPARTMENT LIGHTS ARE MOUNTED BACK TO BACK ON THE DIVIDER PANEL BETWEEN THE FRONT AND MID COMPARTMENT AS WELL AS THE HORIZONTAL AND REAR COMPARTMENTS.

FLOOD LIGHT KIT

TITAN SERIES - P/N:750825000

SPECIFICATIONS:

- A. 408 TRACTOR LIGHT
- B. BAKED BLACK ENAMEL FINISH ON BONDERIZED STEEL HOUSING
- C. HOLLOW MOUNTING BOLD W/ SWIVELING BRACKET.
- D. 3000 CANDLE PWR BEAM
- E. 55 WATTS
- F. 12 VOLTS
- G. 4.5 AMPS
- H. 5" DIA,
6 1/4" HEIGHT
2 3/4" DEPTH

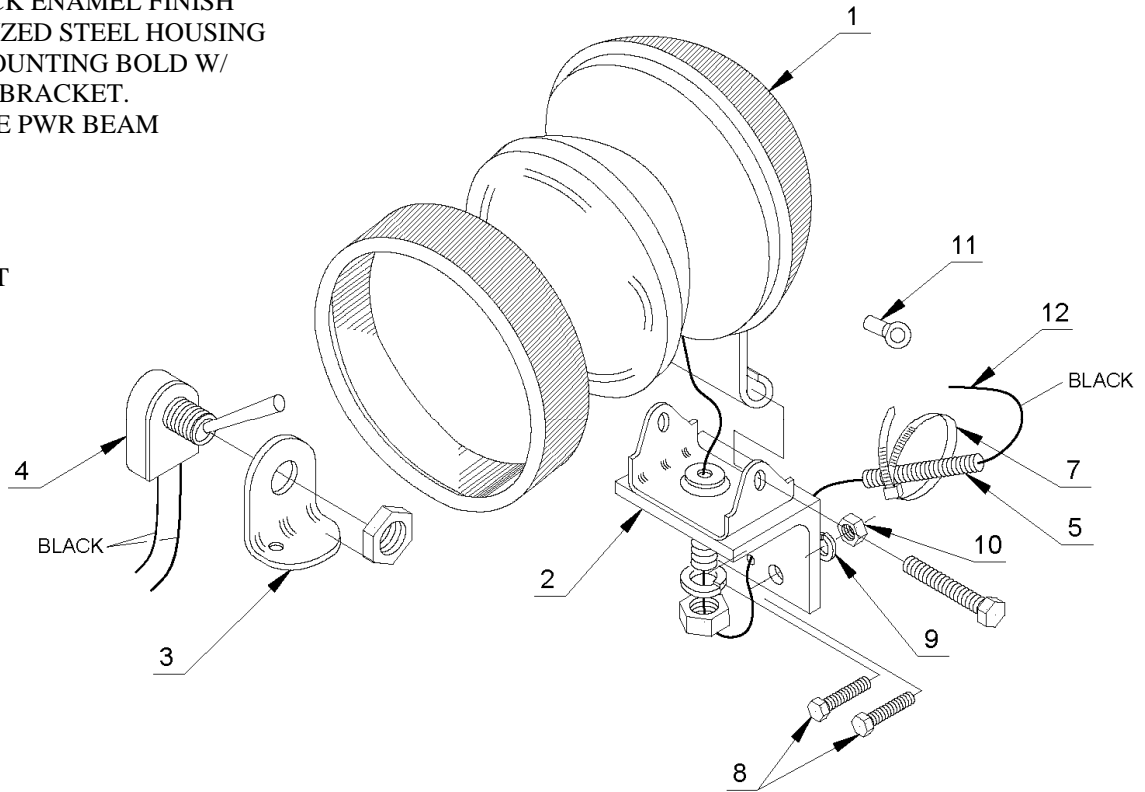


ITEM NO.	QTY	PART NUMBER	DESCRIPTION
1	1	750731000	LIGHT, FLOOD
2	1	750878000	BRKT MNTG SPOTLIGHT
3	1	750877000	BRACKET MOUNTING SWITCH
4	1	750739000	SWITCH TOGGLE(ON-OFF)
5	12 FT	750736000	LOOM CONVOLUTED
6	1	750738000	STICK-ON, CABLE TIE MOUNT
7	1	750737000	TIE, CABLE
8	2	006200000	SCREW HX HD 1/4UNC X 1 1/4 GR5
9	2	020200000	WASHER SP LK 1/4 STAINLESS
10	2	015900000	NUT HX 1/4-20UNC SS
11	2	000302000	TERMINAL WR 2R814
12	12 FT	800590000	WIRE 16G 600V 1C BLK

FLOOD LIGHT KIT

TITAN SERIES - P/N:750825001


SPECIFICATIONS:

- A. HIGH BULB LIFE, 400 HR. AVERAGE
- B. EASILY REPLACEABLE BEAM
- C. FIELD TESTED UNDER EXTREME CONDITIONS.
- D. 80 DEG X 30 FLOOD
- E. TRAPEZOID
- F. SOFT
- G. 12 VOLTS
- H. 50 WATTS
- I. 4 AMPS
- J. 200,000 CANDLE PWR BEAM
- K. EASY SWIVEL MOUNT

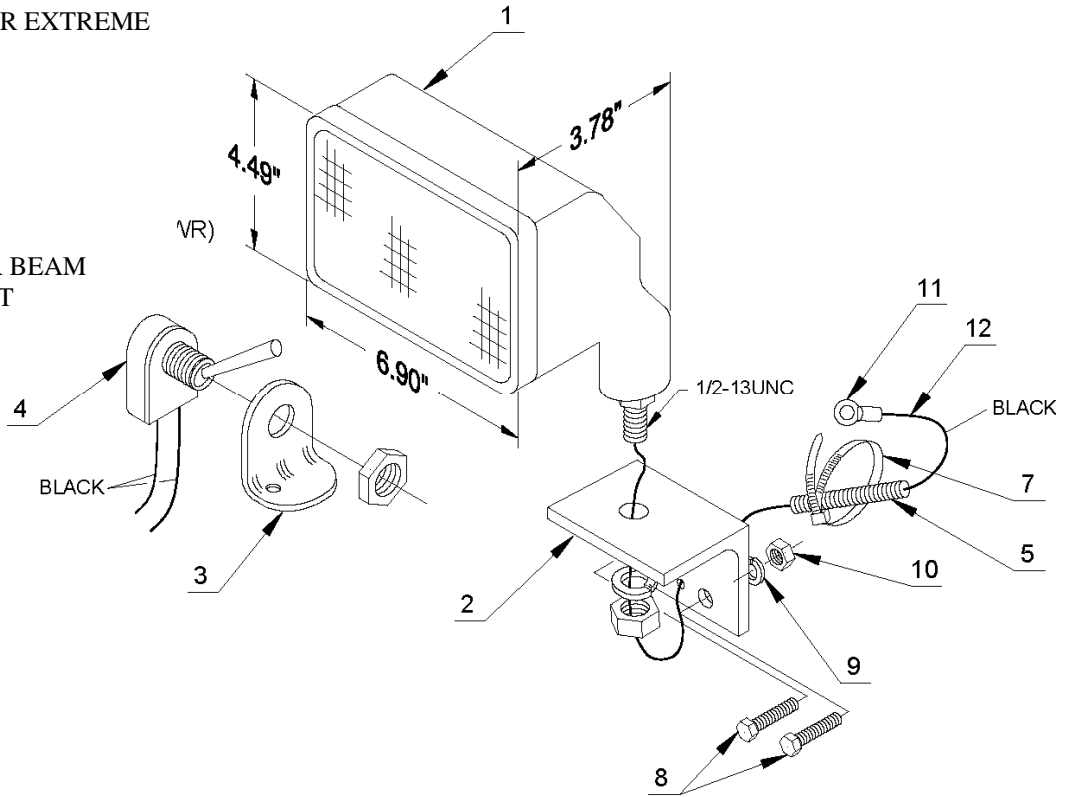


ITEM NO.	QTY	PART NUMBER	DESCRIPTION
1	1	750026000	LIGHT, SEALED BEAM
2	1	750878000	BRKT MNTG SPOTLIGHT
3	1	750877000	BRACKET MOUNTING SWITCH
4	1	750739000	SWITCH TOGGLE(ON-OFF)
5	12 FT	750736000	LOOM CONVOLUTED
6	1	750738000	STICK-ON, CABLE TIE MOUNT
7	1	750737000	TIE, CABLE
8	2	006200000	SCREW HX HD 1/4UNC X 1 1/4 GR5
9	2	020200000	WASHER SP LK 1/4 STAINLESS
10	2	015900000	NUT HX 1/4-20UNC SS
11	2	000302000	TERMINAL WR 2R814
12	12 FT	800590000	WIRE 16G 600V 1C BLK

BOOM SUPPORT TITAN SERIES

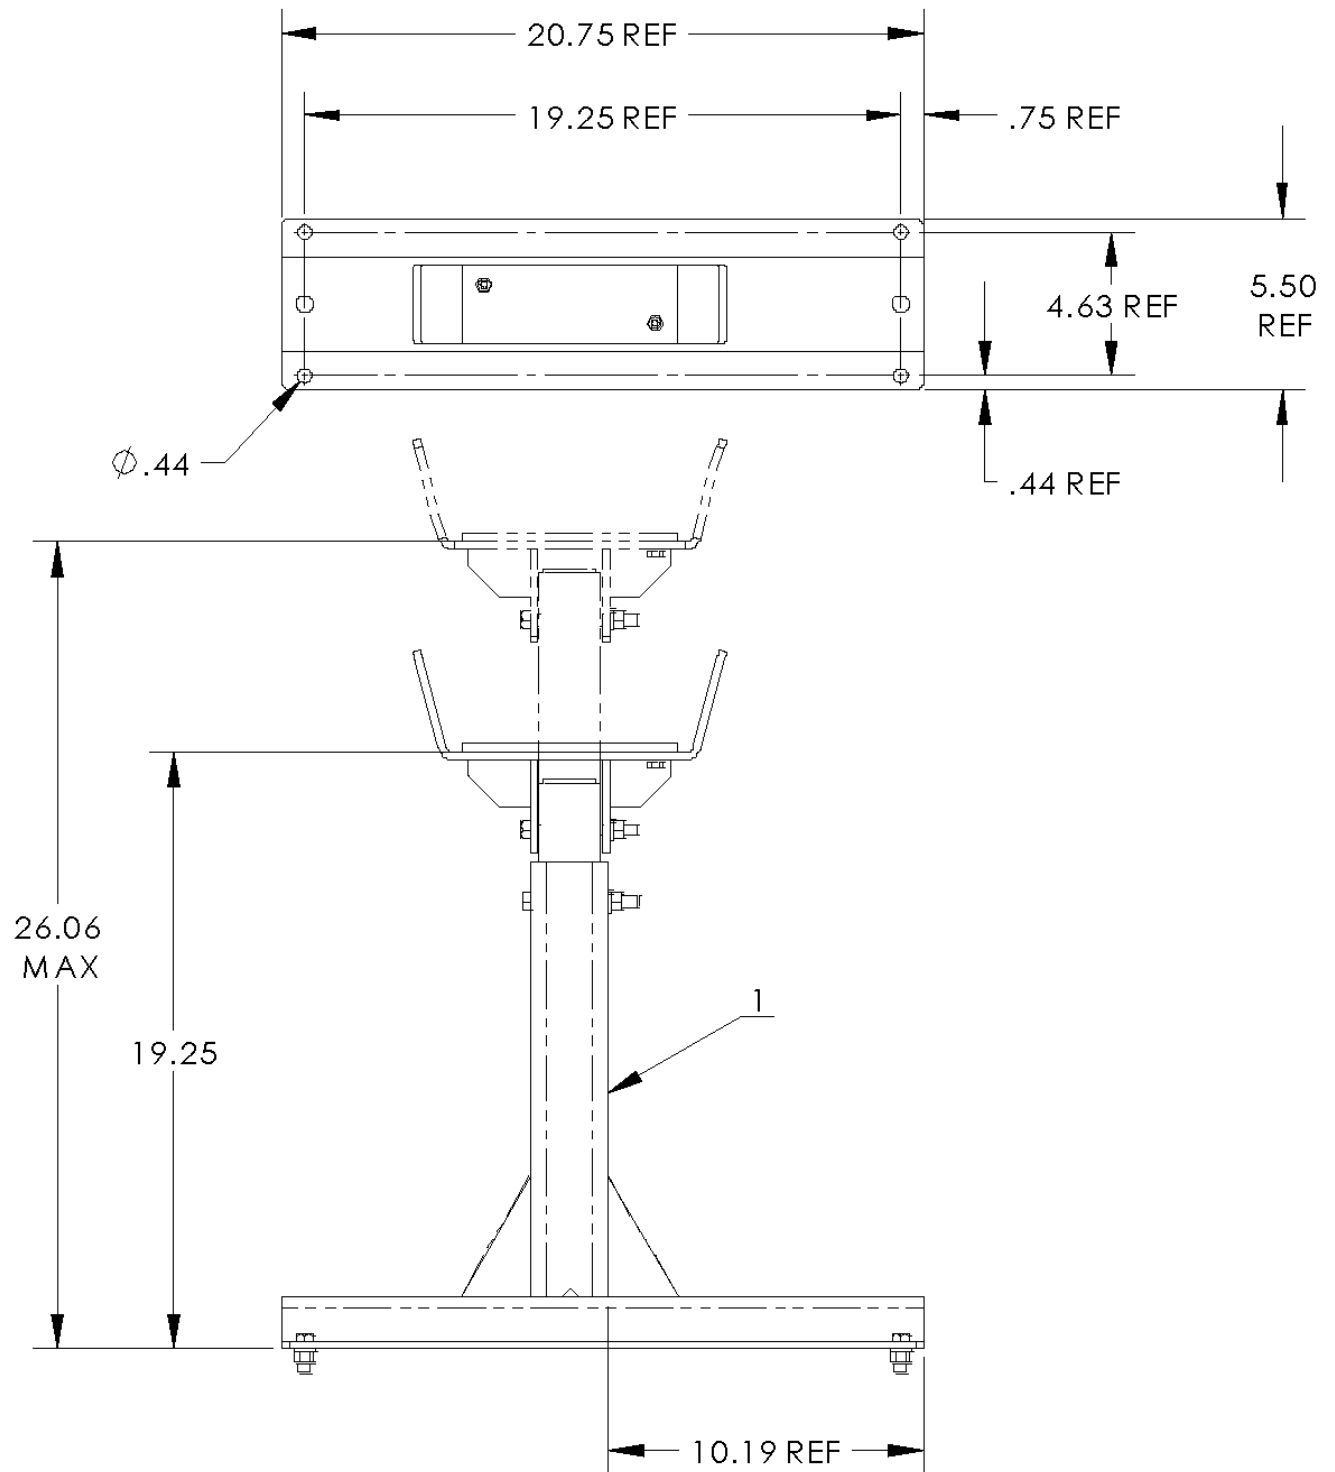




BOOM SUPPORT TITAN SERIES

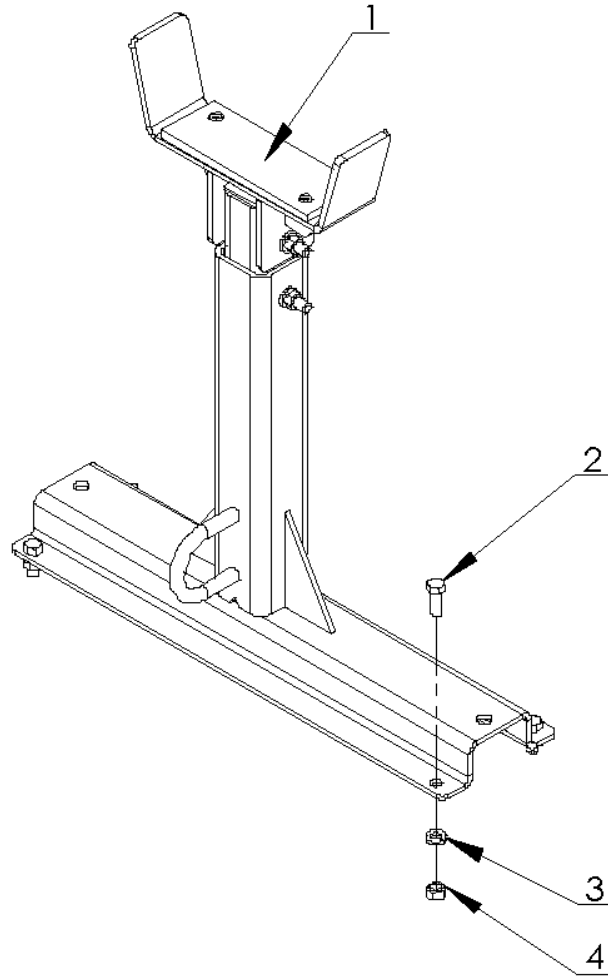

715064000

ITEM NO.	715064000	PART NO.	DESCRIPTION
1	1	560195000	BOOM SUPPORT ASSY
2	4	021100000	WASHER SP LK 3/8
3	4	330371000	SCREW HX HD 3/8-16UNC X 1 LG GR8
4	4	330372000	NUT HX 3/8-16UNC

BULKHEAD RESERVOIR TITAN SERIES

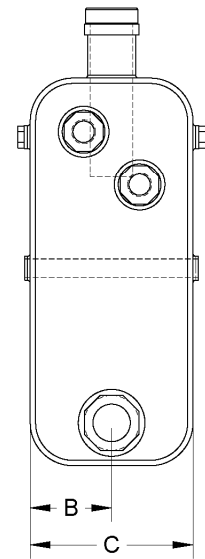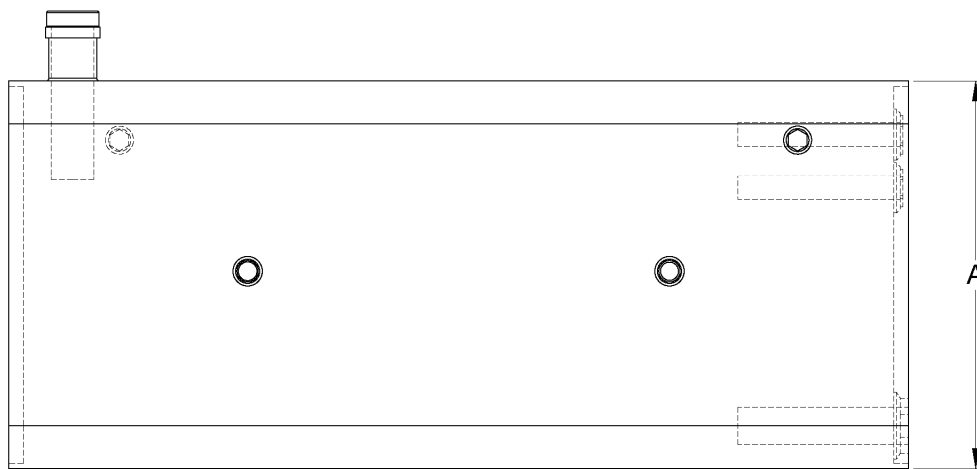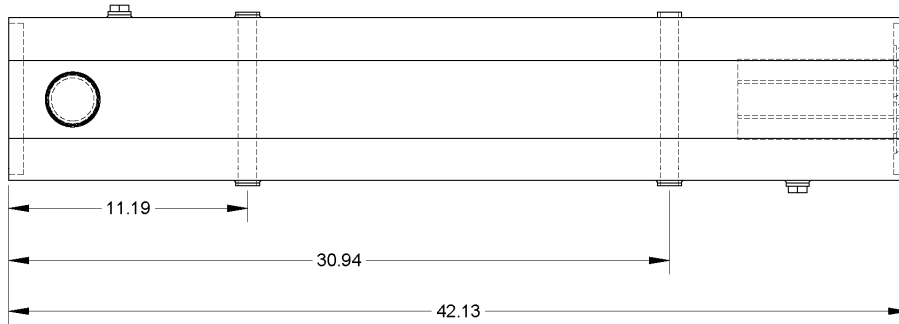


	A	B	C
738498000 (23 GALLON)	18.15	3.81	7.625
751095050 (36 GALLON)	26.06	4.03	8.06

SERVICE PARTS INCLUDE	23 GALLON	36 GALLON
FILTER, RESERVOIR	NA	751095051
CAP, FILLER BREATHER WITH STRAINER	751095055	751095055
FILTER ASSEMBLY	750380000	751095051
REPLACEMENT FILTER	NA	751095056

AIR RECEIVER TANK TITAN SERIES

	OVERALL LENGTH	OVERALL TANK DIA.
750828000 30 GALLON TANK	36 3/4"	31 1/2"
750848000 60 GALLON TANK	46 1/2"	40"

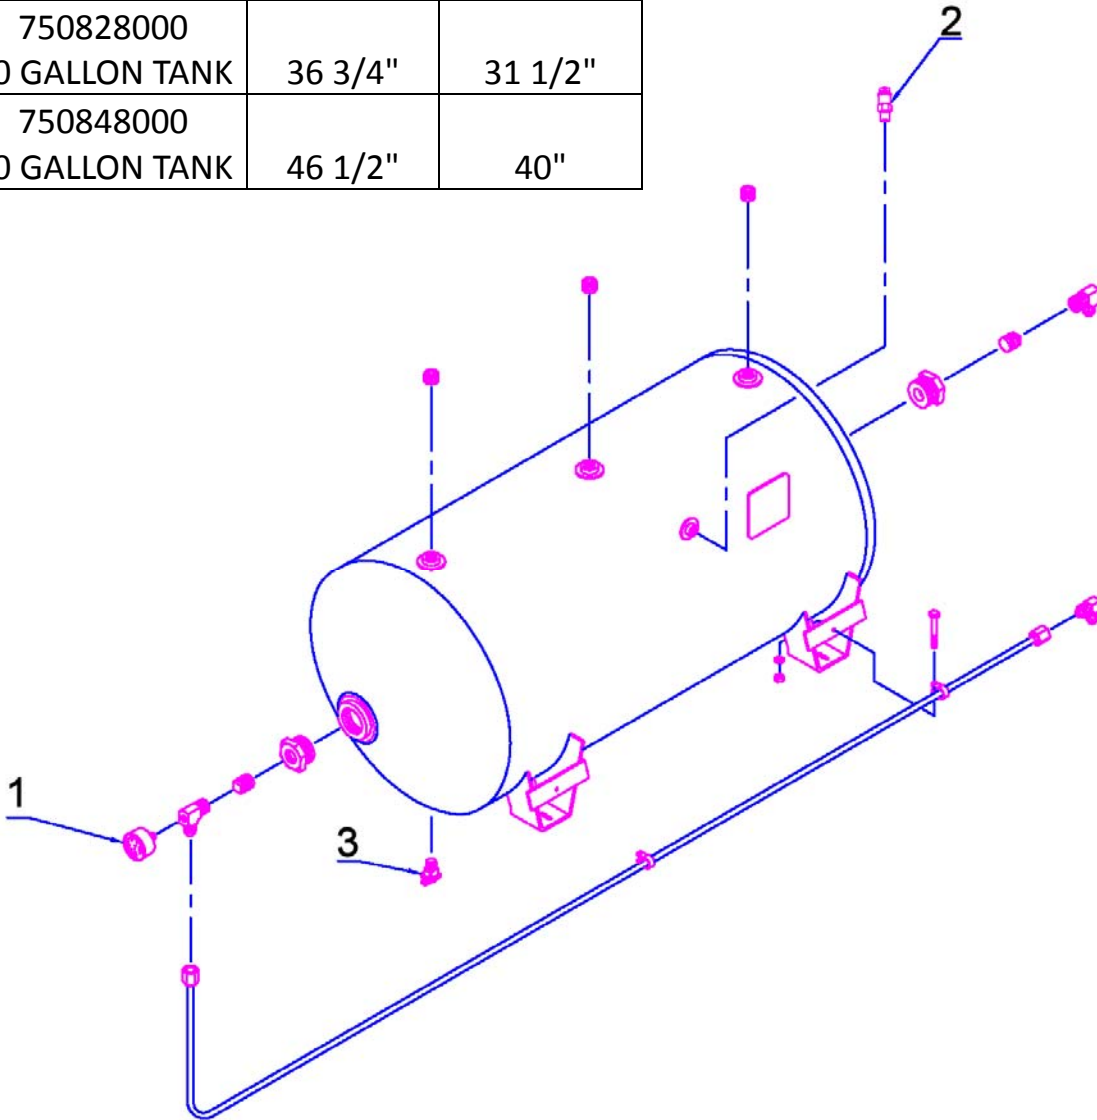



REPLACEMENT PARTS INCLUDE:

ITEM NO.	QTY	PART NUMBER	DESCRIPTION
1	1	750205006	GAUGE, 0-200 PSI AIR (REF.)
2	1	750715000	VALVE, BIB DRAIN
3	1	751220100	VALVE RELIEF, 200 PSI, 1/4 NPT, ALUM

AIR RECEIVER TANK, 18 GALLON TITAN SERIES - P/N 751524100

NOTE:

1. THIS RECEIVER TANK IS TO BE MOUNTED UNDER TRUCK CHASSIS.
2. FOR USE ON FORD F-550 ONLY

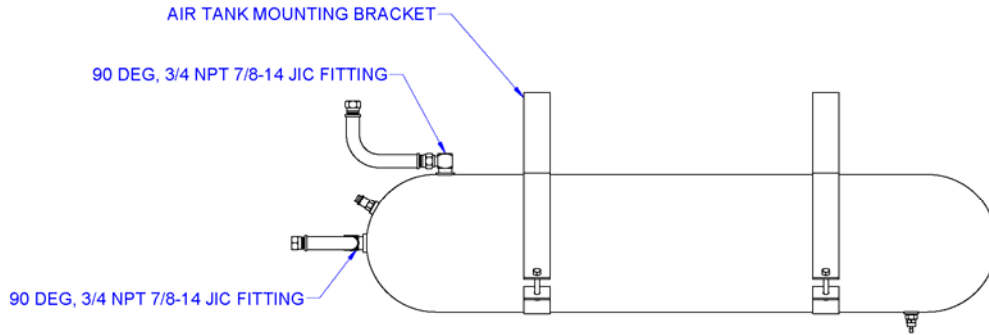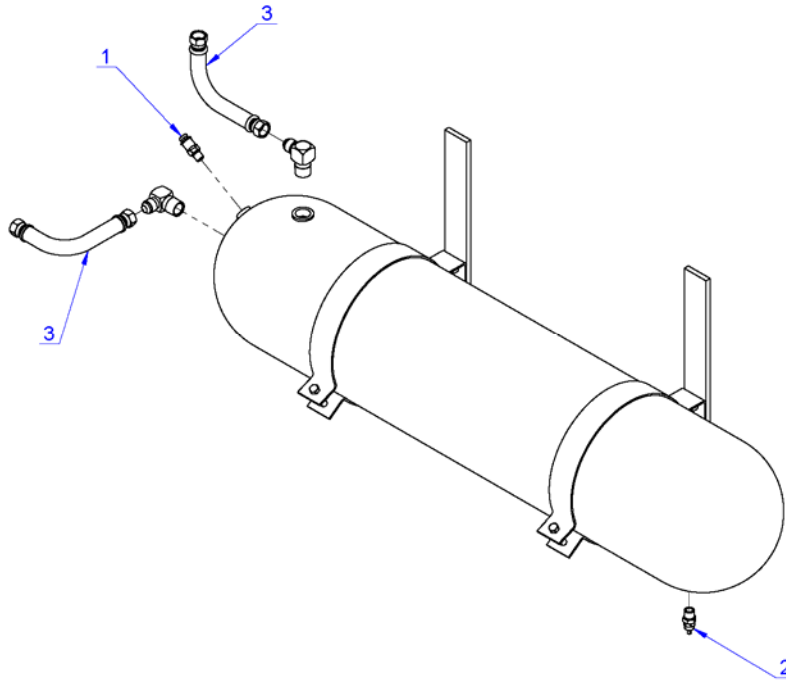

REPLACEMENT PARTS INCLUDE:

ITEM NO.	QTY	PART NUMBER	DESCRIPTION
1	1	751220100	VALVE, RELEIF, 200 PSI, 1/4 NPT, ALUM
2	1	750715000	VALVE, 1/4 NPT DRAIN
3	360 in.	750209000	HOSE, 5/8

FIRE EXTINGUISHER TITAN SERIES - P/N: 750061000

TYPE:


5LB/LEVER SQUEEZE/HOSE & HOSE/PRESSURE GAUGE
PER NATIONAL FIRE PROTECTION ASSOCIATION STD. NO.10
"PORTABLE FIRE EXTINGUISHERS

SPECIFICATIONS:

- (A) UNDERWRITERS LABORATORIES (UL LISTED)
- (B) DRY CHEMICALS FIRE EXTINGUISHERS CLASSIFICATION
2-A: 10-B-C. TESTED TO ANSI/UL 711 & ANSI/UL299.
- (C) 5 LB (2.27 KG) MULTI-PURPOSE DRY CHEMICAL
(AMMONIUM PHOSPHATE BASE)
- (D) SUITABLE FOR USE AT TEMPERATURE FROM
-65° F TO 120° F (54° C TO 49° C)


NOTE:

EXTINGUISHER TO COME WITH OWNERS MANUAL FOR HAND PORTABLE FIRE EXTINGUISHERS.

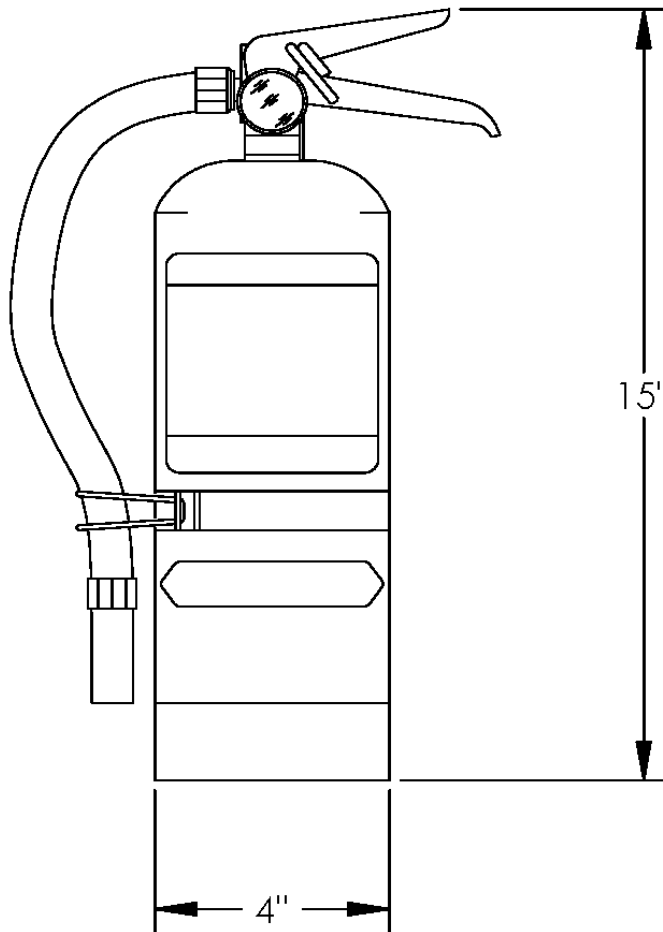

BACK-UP ALARM

TITAN SERIES - P/N:750681000

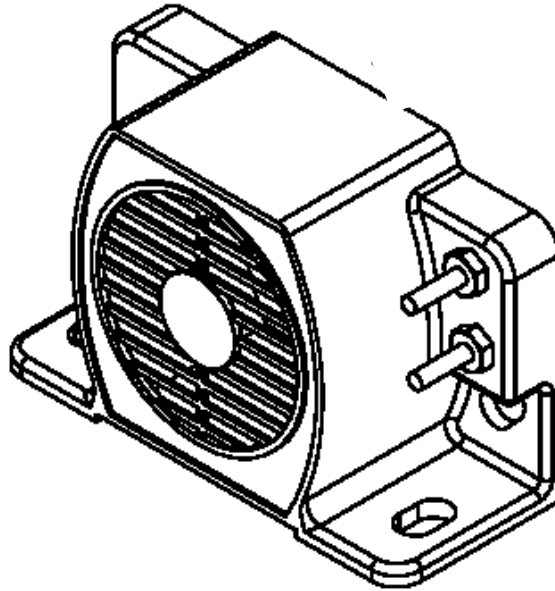

DESCRIPTION

BACK-UP SAFETY ALARM MEETS OR EXCEEDS SAE J99 4B

VOLUME: 102 Db
VOLTAGE: 12/24 VDC
PULSE RATE: 90/MINUTE

POWER CONNECTION: 2-18", 16 GA. LEADS; RED LEAD TO POSIVE;
BLACK LEAD TO GROUND.

MOUNTING INSTRUCTIONS

1. DRILL TWO HOLES FOR 1/4" BOLTS 3 1/4 BETWEEN CENTERS.
2. MOUNT ALARM TO VEHICLE OR BRACKET
3. UNIT MAY BE CONNECTED DIRECTLY INTO THE BACK-UP LIGHT CIRCUIT, IF NOT AVAILABLE, MOUNT A SWITCH SUCH THAT IT OPERATES WHEN THE VEHICLE IS PLACED IN REVERSE. APPLY VOLTAGE 12 THRU 24 VDC VIA SWITCH TO THE RED LEAD, CONNECT THE BLACK LEAD TO GROUND. ALARM WILL SOUND EACH TIME WHEN VEHICLE IS PLACED IN REVERSE.

BODY PREVENTIVE MAINTENANCE TITAN SERIES

PREVENTIVE MAINTENANCE RECOMMENDATIONS FOR EXTERIOR SURFACES ON TRUCK SERVICE BODIES

PAINT FINISH PREVENTIVE MAINTENANCE INSTRUCTIONS

The paint finish on Auto Crane products can become damaged during normal use when chipped, scratched, exposed to harsh chemicals, cleaned with high pressure washers, etc. During periods when the truck is exposed to salt or other corrosive chemicals, the truck should be washed weekly. The paint finish should be inspected when washed or at least monthly. Any exposed bare metal or visible rust should be repaired immediately. The repairs should be performed in the damaged area by following steps 1-5 in the TOP COAT PAINT PREPARATION INSTRUCTIONS section.

TOP COAT PAINT PREPARATION INSTRUCTIONS

The following paint process steps should be used by Auto Crane distributors when top coating bodies that were primed by Auto Crane: **(Note: Unbolt doors from body and paint separately Per the instructions shown below)**

1. Clean all surfaces to be top coated so dirt, oil, and other contaminants do not get embedded in the primer when sanded.
 - a. Wash with a mild detergent in warm water.
 - b. Rinse with clean water.
 - c. Wipe dry with a clean cloth.
2. Scuff sand all primed areas to be top coated with 320 grit sandpaper or an equivalent abrasive. Sand any areas with visible rust to bare metal.
3. Solvent clean all areas to be top coated to remove sanding residue. Wipe dry with a clean cloth to remove any remaining residue.
4. Re-prime the following areas to a minimum 2 mil dry film thickness per the primer manufacturer's instructions. The primer must be compatible with Sherwin Williams' E2W932 epoxy primer.
 - a. All bare metal.
 - b. All exposed corners and narrow edges, such as on doors, door openings, drip rails, and bumpers. This is necessary because excessive primer tends to get removed when sanding corners and narrow edges.
 - c. All areas to be top coated if the body has been stored in an outside environment for more than 3-6 months. This is necessary because more primer tends to get removed when sanding a primed-only body that has been exposed to the sun and outside environment for an extended period.
5. Apply a 2 mil dry film thickness top coat per the manufacturer's instructions within 24 hours of completing steps 1-4. The top coat paint must be compatible with Sherwin-Williams' E2W932 epoxy primer. The final primer and top coat should have approximately a 4 mil dry film thickness. Allow paint to fully cure before delivery to customer



P.O. Box 580697 * Tulsa, OK 74158-0697
4707 N. Mingo Rd. * Phone (918) 836-0463

LIMITED WARRANTY 2 YEAR PARTS AND LABOR

Auto Crane will warranty to the consumer for a period of (2) years parts and labor from the date of purchase. Each new Auto Crane unit they sell will be free under normal use and service from defects in material and workmanship. Date of purchase will be honored as the date indicated on the Bill of Sale, which must accompany the Warranty Registration and be on file with Auto Crane. Absent a valid Warranty Registration and appropriate documentation, the original date of manufacture, as indicated by the serial number on the product, will be used to determine the effective date of the 2 year warranty.

The obligation of Auto Crane under this warranty is limited to the replacement or repair of parts that appear to the manufacturer after review and/or inspection to be defective and paid flat rate labor for replacing defective parts. This warranty does not obligate Auto Crane to bear the travel time charges in connection with the replacement or repair of defective parts. Responsibility for customer's claims arising from misapplication, abuse, misuse or alteration of equipment or parts lies with the distributor or user and no warranty obligation is assumed in these circumstances by Auto Crane.

Auto Crane will in no event be liable for any consequential damages or contingent liabilities arising out of the failure of any Auto Crane Product or parts to operate properly.

Auto Crane makes no warranty in respect to component accessories, it being subject to the warranties of their respective manufacturers.

If field service, at the request of the distributor, is rendered and fault is found not to be with Auto Crane's product, the distributor shall pay the time and expense of the field representative.

Claims for service labor or other expenses that have incurred by the buyer without approval or authorization or Auto Crane will not be accepted.

When applying for warranty, claims may be handled by contacting your nearest authorized Auto Crane **Distributor**. **All claims are to be filed in writing on an Auto Crane Warranty Claim Form.**

AUTO CRANE COMPANY IS UNDER NO OBLIGATION TO EXTEND THIS WARRANTY TO ANY CUSTOMER FOR WHICH AN AUTO CRANE DELIVERY REPORT FORM HAS NOT BEEN COMPLETED AND ON FILE WITH AUTO CRANE COMPANY



P.O. Box 580697 * Tulsa, OK 74158-0697
4707 N. Mingo Rd. * Phone (918) 836-0463

5 YEAR LIMITED BODY WARRANTY

COVERED PRODUCTS:

- * Auto Crane Service Bodies - no rust-thru guarantee to the first owner/user of record for five (5) years from the date of purchase.
- * Door Hinges - Guarantee the hinges will not fail to operate or come off the product, to the first owner/user of record for five (5) years from the date of purchase.

ELIGIBILITY:

- * Product(s) warranted must be properly maintained and serviced.
- * The selling distributor must file for the first owner/user the application for warranty by completing the delivery report form enclosed in the Owners Manual within 30 days of the product purchase date. The complete delivery report form must be forwarded to Auto Crane Company. The warranty agreement issued is not transferable.

EXCLUSIONS:

- * Warranty applies to the Auto Crane bodies only and excludes all options, modifications and alterations.
- * Paint required following repairs or replacement of parts under warranty after the first year from the date of delivery.
- * Product(s) that have been misused or damaged, inclusive of, but not limited to, accidents.
- * Absent a completed and valid delivery report form, the original date of manufacture will be used as the effective date for the limited warranty.

SPECIFIC NON-RUST-THRU WARRANTY EXCLUSIONS:

- * Product(s) that have been used to carry corrosive materials, where such materials result in rust-thru conditions.
- * Product(s) purchased by the first owner/user in prime paint condition.
- * Consequential damages including, but not limited to, transportation costs, lost profit and loss of income, as a result of a vehicle being out of service.
- * Product(s) purchased and used outside the U.S.A. or Canada.

APPLYING FOR WARRANTY:

- * Claims may be handled by contacting your nearest authorized Auto Crane Distributor. All claims are to be filed in writing on an Auto Crane Warranty Claim Form.
- * The Auto Crane Company reserves the sole right to inspect item(s) claimed for warranty and decide the best way to handle any and all claims, including the replacement or repair of the warranted part.
- * Should the warranted product rust thru, the hinges fail to operate or come off the product, Auto Crane will pay the cost of parts and flat rate labor to repair or replace as necessary the defective component. NOTE: Paint following repair or replacement of a part is exclusive under warranty after the first year from date of delivery.
- * DEFECTS FROM MANUFACTURING WORKMANSHIP AND/OR MATERIAL NOT SPECIFIED ABOVE WILL BE SUBJECT TO WARRANTY INCLUSIVE OF MATERIALS AND LABOR TO THE FIRST OWNER/USER OF RECORD FOR TWO (2) YEARS FROM THE DATE OF DELIVERY. Exclusions, as well as methods of applying for warranty remain the same as stated in the limited five (5) year warranty covered above.



P.O. Box 580697 * Tulsa, OK 74158-0697
4707 N. Mingo Rd. * Phone (918) 438-2760

LIMITED WARRANTY 1 YEAR PURCHASED REPLACEMENT PARTS

Auto Crane will warranty to the consumer for a period of (1) year from the date that a new Auto Crane replacement part was purchased from an authorized Auto Crane distributor. Each new Auto Crane part they sell will be free under normal use and service from defects in material and workmanship. Date of purchase will be honored as the date indicated on the Bill of Sale to the consumer.

The obligation of Auto Crane under this warranty does not apply to parts replaced under the limited warranty for a new Auto Crane product. The warranty for parts replaced under the limited warranty of a new Auto Crane product expires when the warranty for that product expires.

The obligation of Auto Crane under this warranty is limited to the replacement or repair of purchased replacement parts that appear to the manufacturer to be defective after review of documentation (Auto Crane Warranty Claim Form, photos, data, etc.) provided by the Auto Crane distributor and/or inspection of parts returned to Auto Crane. This warranty does not obligate Auto Crane to bear labor costs to replace the defective parts or travel time charges in connection with the replacement or repair of defective parts. Responsibility for customer's claims arising from misapplication, abuse, misuse or alteration of equipment or parts lies with the distributor or user and no warranty obligation is assumed in these circumstances by Auto Crane.

Auto Crane will in no event be liable for any consequential damages or contingent liabilities arising out of the failure of any Auto Crane product or parts to operate properly.

Auto Crane makes no warranty in respect to parts for component accessories, it being subject to the warranties of their respective manufacturers.

If field service, at the request of the distributor, is rendered and fault is found not to be with Auto Crane's product, the distributor shall pay the time and expense of the field representative.

Claims for service labor or other expenses that have incurred by the buyer without approval or authorization or Auto Crane will not be accepted.

When applying for warranty, claims may be handled by contacting your nearest authorized Auto Crane **Distributor**. **All claims are to be filed in writing on an Auto Crane Warranty Claim Form.**

