


# Owner's Manual

14528 Telescopic Crane

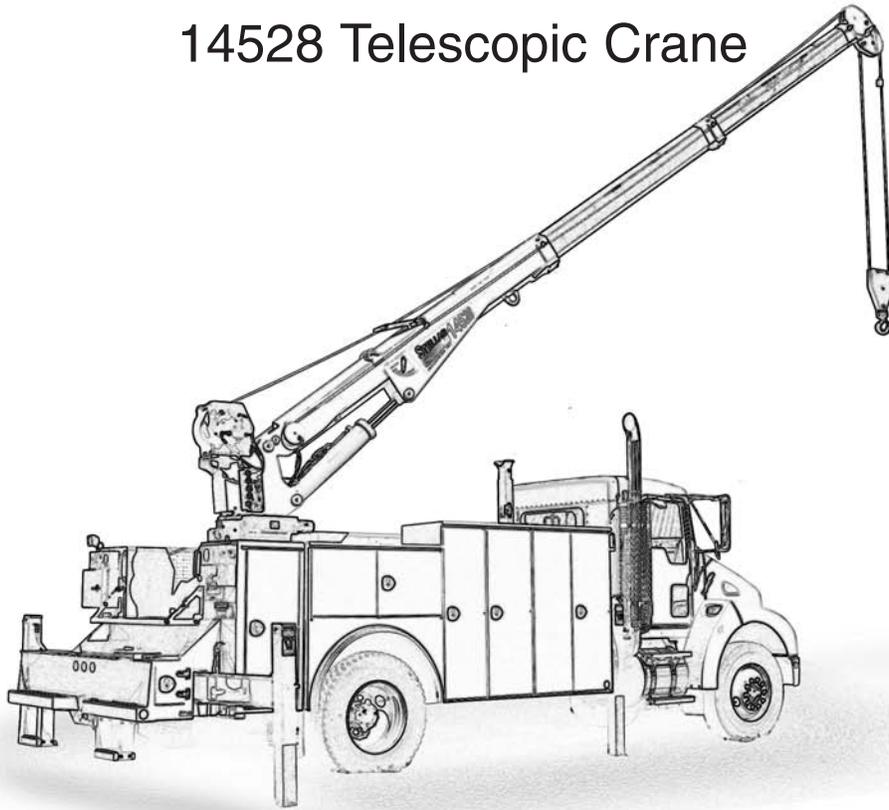

Stellar Industries, Inc.  
190 State Street  
PO Box 169  
Garner, IA 50438  
800-321-3741  
Fax: 641-923-2811  
[www.stellarindustries.com](http://www.stellarindustries.com)

Subject to Change without Notification.  
© 2005 Stellar Industries, Inc.

Manual Part No. 31713  
Last Revision: 9/19/05

# Telescopic Crane Owner's Manual Revisions

Date of Revision	Manuals Effected	Section Revised	Description of Revision
September 1, 2005	6620, 6628, 9620, 9628, 10620, 10628, 14528	Chapter 7: Assembly Drawings	Updated Main Boom and Extension Boom Drawings to reflect engineering changes.
September 19, 2005	6620, 6628, 9620, 9628, 10620, 10628, 14528	Chapter 7: Assembly Drawings	Updated Cable and Hook Assembly Drawings to reflect engineering changes.

# Introduction

---

Stellar Cranes are designed to provide safe and dependable service for a variety of operations. With proper use and maintenance, Stellar Cranes will operate at peak performance for many years.

This manual contains information vital to the safe use and efficient operation of this unit. Following the information provided within this manual can ensure the longevity of the crane. Carefully read and study the operator's manual before using the unit. Failure to adhere to the instructions could result in property damage or even serious bodily injury to the operator or others close to the crane.

A copy of this manual is provided with every crane and shall remain with the crane at all times. Information contained within this manual does not cover all maintenance, operating, or repair instructions pertinent to all possible situations. This manual is not binding. Stellar Industries, Inc. reserves the right to change, at any time, any or all of the items, components, and parts deemed necessary for product improvement or

commercial/production purposes. This right is kept with no requirement or obligation for immediate mandatory updating of this manual.

This product manual is not intended as a training manual for beginners or unskilled operators. This manual offers guidelines for correct and safe usage of the crane, maintenance, and troubleshooting. If more information is required or technical assistance is needed, please contact the Stellar Industries, Inc. Customer Service Department.

Some sections of this manual contain information pertaining to all Stellar manufactured cranes and may or may not apply to your specific model.

If this manual becomes damaged, misplaced, or unreadable at any point, or if you feel that any part of this manual is unclear or incorrect, please contact Stellar Customer Service Department at 800-321-3741 or email at [service@stellarindustries.com](mailto:service@stellarindustries.com)

**For Technical Questions, Information, Parts, or Warranty,  
Call Toll-Free at  
800-321-3741**

Hours: Monday - Friday, 8:00 a.m. - 5:00 p.m. CST

Or email at the following addresses:

**Technical Questions, and Information**

[service@stellarindustries.com](mailto:service@stellarindustries.com)

**Order Parts**

[parts@stellarindustries.com](mailto:parts@stellarindustries.com)

**Warranty Information**

[warranty@stellarindustries.com](mailto:warranty@stellarindustries.com)

# WARNINGS! READ THIS PAGE!

---

## WARNING!

- Never exceed load chart capacities (centerline of rotation to hoist hook).
- Never un-reel last 5 wraps of cable from winch.
- Never wrap the cable around a load.
- Never attempt to drag or lift a load from the side.
- Never weld, modify, or use unauthorized components on any Stellar unit. This will void any warranty or liability. Failure of the crane may also result.
- Never use a sling bar or anything larger than the hook throat that could prevent the hook latch from closing, thus negating the safety feature.
- Never hold on any remote control switch that will cause unsafe operating conditions.
- Failure to correctly plumb and wire the crane can cause a malfunction and damage to the crane and/or operator.
- Stellar cranes are not designed or intended for use in any applications involving lifting or moving personnel.
- Operate the crane in compliance with the load capacity chart at ALL TIMES. Do not rely on the overload device to determine maximum rated loads.

## WARNING!

According to Federal Law (49 cfr part 571), each final-stage manufacturer shall complete the vehicle in such a manner that it conforms to the standards in effect on the date of manufacture of the incomplete vehicle, the date of final completion, or a date between those two dates. This requirement shall, however, be superseded by any conflicting provisions of a standard that applies by its terms to vehicles manufactured in two or more stages.

Therefore, the installer of Stellar cranes and bodies is considered one of the manufacturers of the vehicle. As such a manufacturer, the installer is responsible for compliance with all applicable federal and state regulations. They are required to certify that the vehicle is in compliance with the Federal Motor Vehicle Safety Standards and other regulations issued under the National Traffic and Motor Vehicle Safety Act.

Please reference the Code of Federal Regulations, title 49 - Transportation, Volume 5 (400-999), for further information, or visit <http://www.gpoaccess.gov/nara/index.html> for the full text of Code of Federal Regulations.

## WARNING!

It is imperative that you grease the PTO output shaft upon initial installation and Clean and Regrease Periodically with a high-temp grease. Cleaning and regreasing the PTO output shaft periodically will help ensure that the shafts won't experience premature wear or weld together. Greasing will also help prevent the splines from premature wear.

# Table of Contents

---

---

Chapter 1 - Safety	1-1
Chapter 2 - Operation	2-1
Chapter 3 - Maintenance	3-1
Chapter 4 - Specifications	4-1
Chapter 5 - Decals	5-1
Chapter 6 - Installation	6-1
Chapter 7 - Assembly Drawings	7-1
Chapter 8 - Hydraulics/Electrical	8-1
Chapter 9 - Replacement Parts	9-1
Chapter 10 - Troubleshooting	10-1

# Chapter 1 - Safety

---

## **Please Read the Following Carefully!**

This portion of the manual contains information regarding all Stellar manufactured cranes. Some items contained within this chapter may not apply to your specific equipment.

Safety should be the number one thought on every Stellar crane operator's mind. Three factors should exist for safe operation: a qualified operator, well-maintained equipment, and the proper use of this equipment. The following information should be read and understood completely by everyone working with or near the crane before beginning.

Stellar Industries, Inc. is not liable for accidents occurred during the usage of the crane caused by non-fulfillment from the operator's side of current rules, laws and regulations.

Always wear approved accident-prevention clothing such as: protective helmets, anti-slip shoes with steel toes, protective gloves, anti-noise headphones, protective glasses, and reflective jackets with breathing apparatus. Consult your employer regarding current safety regulations and accident-prevention equipment.

Do not wear rings, wristwatch, jewelry, loose-fitting or hanging clothing such as ties, torn garments, scarves, unbuttoned jackets or unzipped overalls, which could get caught up in the moving parts of the crane.

Keep a first-aid box and a fire extinguisher readily available on the truck. Regularly check to make sure the fire extinguisher is fully charged and the first-aid kit is stocked.

Do not use controls and hoses as handholds. These parts move and cannot provide stable support.

Never allow anyone to ride the crane hook or load.

## **MAINTENANCE SAFETY**

Never modify or alter any of the equipment, whether mechanical, electrical, or hydraulic, without Stellar Industries' approval.

Do not perform any maintenance or repair work on the crane unless authorized and trained to do so.

Release system pressure before attempting to make adjustments or repairs.

Do not attempt service or repair when PTO is engaged.

Decals are considered safety equipment. They must be maintained, as would other safety

## **GENERAL**

It is the responsibility of the owner to instruct the operator in the safe operation of your equipment and to provide the operator with properly maintained equipment.

Trainees or untrained persons shall be under the direct supervision of qualified persons.

Do not operate equipment under the adverse influence of alcohol, drugs, or medication.

## **PERSONAL SAFETY**

Keep clear of all moving parts.

Always wear the prescribed personal safety devices.

devices. Do not remove any decals. Replace any decals that are missing, damaged, or not legible.

The safety instruction plates, notices, load charts and any other sticker applied to the crane or service body must be kept legible and in good condition. If necessary, replace them.

## **STABILITY**

Know the crane components and their capabilities and limitations. Overloading the crane may result in serious damage of self, others, equipment or the surroundings.

Never exceed manufacturer's load ratings. These ratings are based on the machine's hydraulic, mechanical, and structural design rather than stability.

The supporting surface under the service truck must be able to support the weight of the machine and its load. Use outrigger pads if necessary.

Park the vehicle on level ground and extend the outriggers fully out and then down.

Keep feet and legs clear when lowering outrigger jacks.

Never operate the crane without making sure the outriggers are positioned on stable, flat ground.

Set the parking break and disengage the drive axle before attempting a lift.

## **LOAD SAFETY**

Know the weight of the load being lifted. Do not exceed the rated capacity of the crane.

Do not apply side loads to the booms.

Do not leave a crane load suspended or unattended.

Do not walk under suspended loads.

Do not position any load over a person nor should any person be permitted to place him or herself under a load.

Do not use the boom or the winch to drag a load. No crane is designed for these types of loads.

Do not use the crane boom to push downward onto anything.

## **ELECTROCUTION**

Allow extra space for swaying power lines in windy conditions.

Keep a minimum of ten feet between any portion of the crane and an electrical line. Add an additional 12" for every additional 30,000 Volts or less.

Remember - Death or serious injury can occur when working near power lines or during electrical storms.

Use a signal person when operating near electrical sources.

## **ENVIRONMENT**

Do not operate the crane during electrical storms.

In extreme cold, allow adequate time to warm the truck before engaging the PTO. Do not rev the truck engine and over speed the hydraulic pumps as permanent damage to the pumps may occur. Follow the vehicle owner's manual regarding operating the vehicle in such adverse conditions.

In dusty work areas, every effort must be taken to keep dust and sand out of the moving parts of the machinery.

In high humidity work areas, keep parts as dry as possible and well lubricated.



*Be familiar with the remote control and how it works before operating the crane.*

## CRANE CONTROLS

1. Be familiar with the sequence and operation of the crane controls.
2. Each individual crane function should have control function decals. Replace them immediately if they are missing or illegible.
3. Keep hands, feet and control levers free from mud, grease and oil.
4. Be familiar with the remote control and how it operates before attempting to lift a load.
5. Be prepared before beginning operation of the crane:
  - All protective guards must be in place.
  - Be aware of the surroundings: low branches, power lines, unstable ground.
  - Be sure all safety devices provided are in place and in good operating condition.
  - Be prepared for all situations. Keep fire extinguisher and first aid kit near.
  - Be sure all regular maintenance has been performed.
  - Visually inspect all aspects of the crane for physical damage.
  - Check for fluid leaks.
  - Make sure the outriggers are down and stable.

## ATTENTION!

Stellar Industries, Inc. is not liable for accidents occurred during the usage of the crane caused by non-fulfillment from the operator's side of current rules, laws, and regulations.

# Chapter 2 - Operation

## Job-Site Set-Up

*Thoroughly plan the lift before positioning the vehicle. Consider the following:*

1. The vehicle should be positioned in an area free from overhead obstructions to eliminate the need for repositioning.
2. Position the vehicle so that it is impossible for any portion of the equipment to come within the minimum required safe distance of any power line. Maintain a clearance of at least 10 feet between any part of the crane, load line, or load, and any electrical line or apparatus carrying up to 50,000 volts. One foot additional clearance is required for every additional 30,000 volts or less. Remember to allow for winds that cause power lines to sway. It is recommended that a signal person be used when the vehicle is set-up near power lines.
3. The vehicle should also be positioned on a firm and level surface that will provide adequate support for the outrigger loading. Use extreme caution when setting up near overhanging banks or excavations.
4. The parking break must be set on the vehicle and the drive axle disengaged before performing a crane operation.
5. The outriggers must be extended to stabilize the truck before beginning operation.

## Unit Operation Overview

1. Engage the PTO
2. Turn on Power to Crane
3. Position Outriggers
4. Operate Crane
5. Store Outriggers
6. Turn Off Power to Crane
7. Disengage the PTO

### 1. Engage the PTO

- A. Engage the parking brake.
- B. Place the transmission in the Neutral position.
- C. Make certain the PTO switch is in the 'off' position.
- D. Start the vehicle engine.
- E. Depress the clutch on manual transmission vehicles.
- F. Engage the PTO switch for cable and air type shifters. Turn on dash switch for electrical operated style. Consult vehicle owner's manual for location and operation of OEM style in-dash PTO switch.
- G. Slowly release the clutch on a manual transmission vehicle.
- H. Warm engine and hydraulic system oil. Let system run for 10-20 minutes for warm-up. This is especially important in cold weather.
- I. Proceed with the outrigger and crane operation.



PTO Switch

### 2. Turn on Power to Crane


Activate power to the crane and outriggers. The power switch is located on the control panel in the vehicle cab.

### 3. Position Outriggers

Once the PTO is engaged, extend the outriggers using the control levers or switches marked 'outrigger'. These may be located on the crane base or in the compartment under the crane. See photo below.



Outrigger control panel, located in the crane compartment.

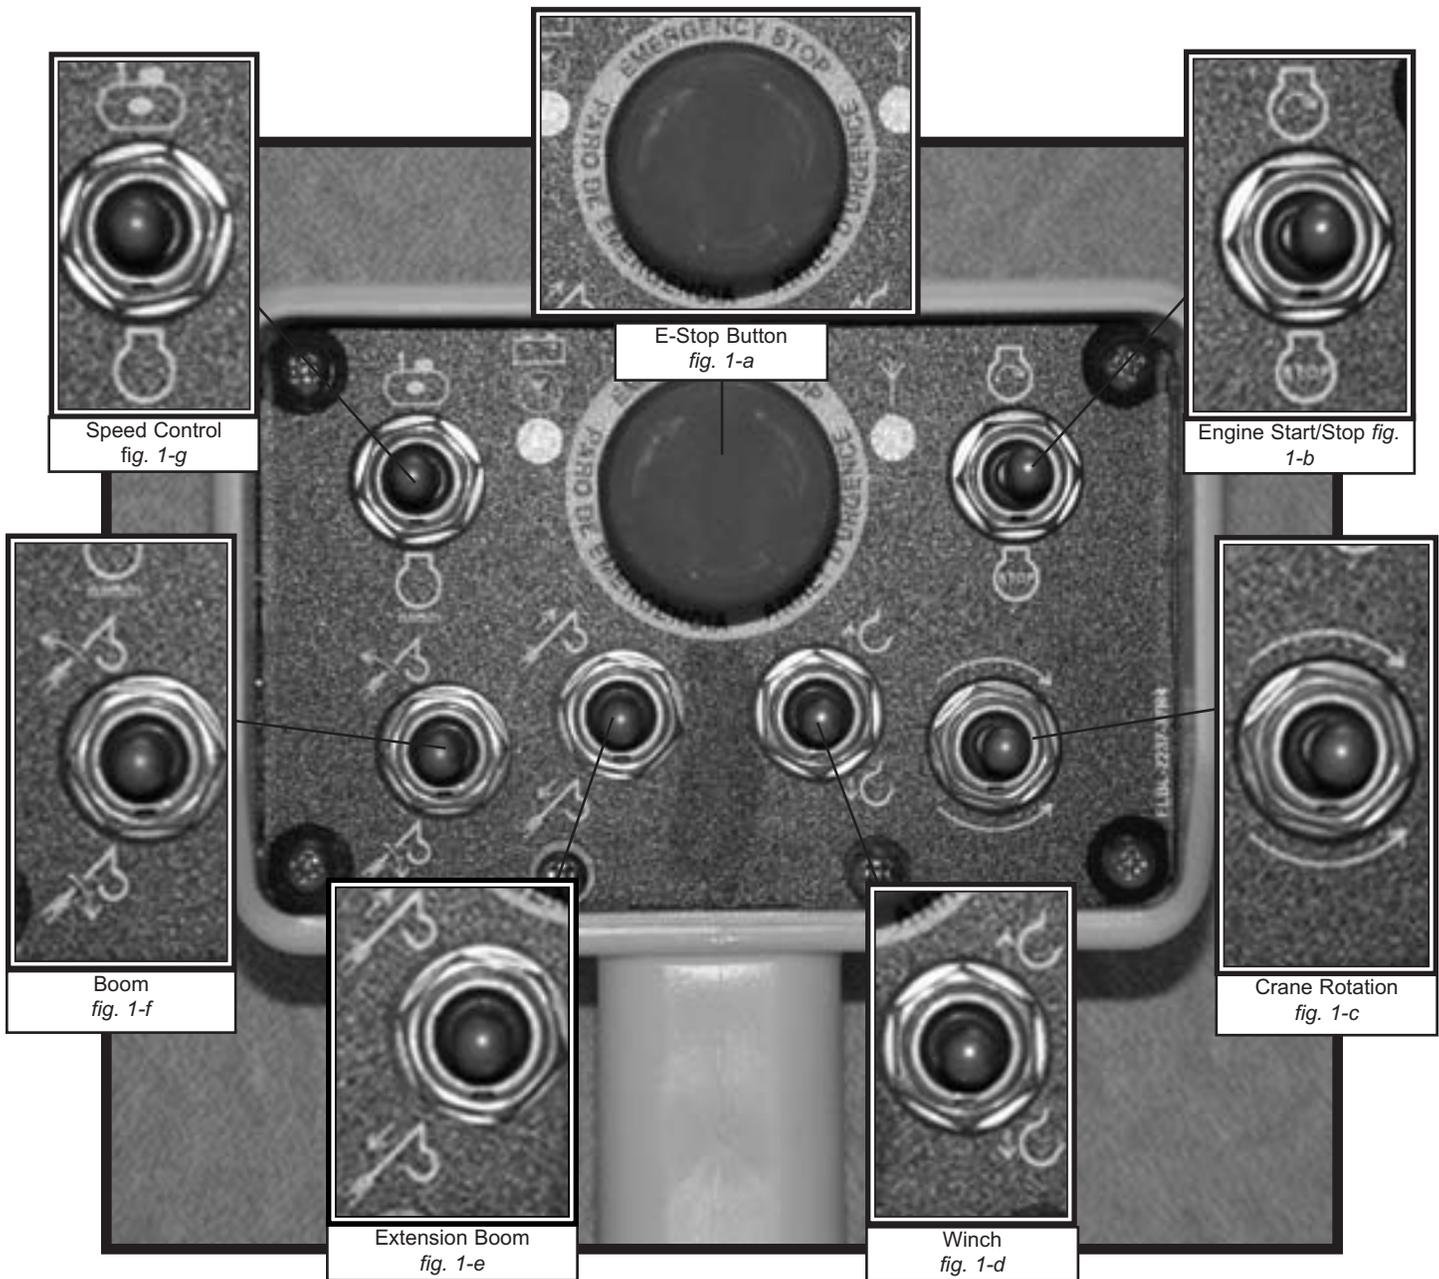

#### 4. Operate Crane

- A. Turn on necessary power to the crane.
- B. Locate the remote and engage E-Stop. See Fig. 1-a.
- C. Activate toggle switch for desired crane function. See Figures 1-c, 1-d, 1-e, 1-f.
- D. Pull the trigger to regulate speed of crane. See Fig. 2.
- E. When operation is complete, press E-Stop, Fig. 1-a, to turn off. Store remote handle in a safe, dry location.

#### 5. Store Outriggers

Retract outriggers using the control levers or switches marked 'outrigger'.

#### 6. Turn Off Power to Crane

Deactivate power to crane and outriggers.



Fig. 2-Variable Speed Trigger on remote.\*

Note: The crane should not function until the trigger has been activated. The speed of the crane will vary in direct correlation with how much or how little the trigger is engaged.



#### 7. Disengage the PTO

- A. On manual transmission vehicles, depress the clutch pedal completely.
- B. Disengage the PTO switch.
- C. If vehicle is a manual transmission, release the clutch pedal gradually.

# Manual Operation


***If the remote control malfunctions, follow these steps to operate the crane manually:***

- 1. Activate Flow Control.** Turn override screw on flow control counter-clockwise until the pressure gauge reaches maximum pressure.
- 2. Operate Solenoids.** Slide knurled sleeve out and then push or pull to operate. Be sure the sleeve is in the center position after stowing the crane.
- 3. Deactivate Flow Control.** Turn override screw clockwise until the pressure gauge reaches 0-50 psi.
- 4. Have unit serviced immediately.**

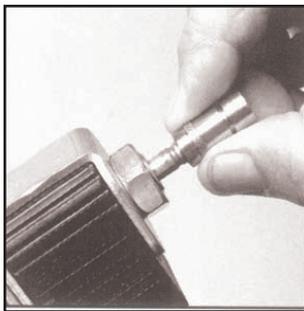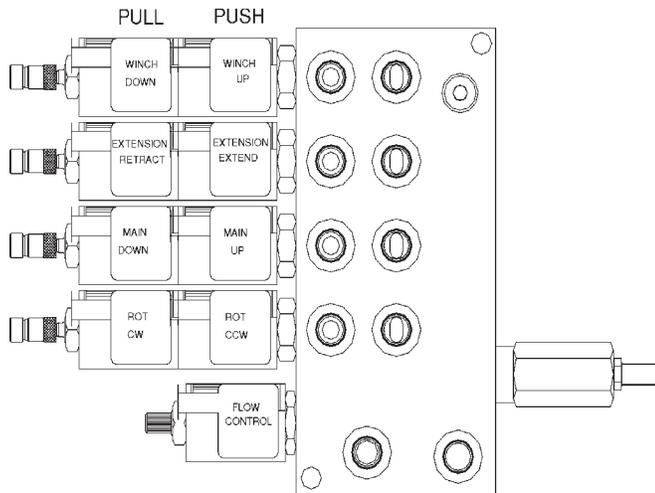

### Manual Override Pull Function

The knurled sleeve is pulled all the way out together with the knob to manually override the pull solenoid function.

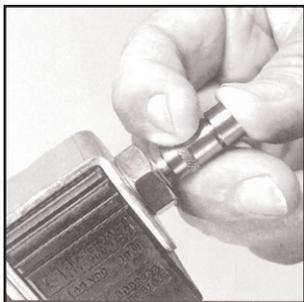

### Manual Override Push Function

The knurled sleeve should first be pulled to unlatch the ball latching mechanism and then, while holding the sleeve back, the override knob should be pushed all the way in to override the push solenoid.

## Crane Precautions

1. Movement of the control levers should be slow and smooth to meter oil flow for safe operation. Avoid jerky and sudden movements.
2. The crane controls should be clearly marked with decals. If these are missing or illegible, replace immediately. (See Chapter 5: Decals)
3. Lift load slightly off the ground to check the safety of the cargo. Do not use stability to determine the safety. Consult the capacity charts and strictly adhere to them.
4. Be constantly aware of the boom position when operating the controls.
5. The boom tip should be centered directly over the load before making the lift to avoid swinging.
6. Do not drag loads with the crane.
7. Do not attempt to lift fixed loads.
8. Do not load boom in a sideways direction.
9. Know the weight of the rigging and load to avoid overloading the crane.
10. Do not extend or rotate a load over anyone.
11. Wear protective gear such as hardhat, safety glasses, steel-toed boots, and gloves.

## Hook Precautions

1. Hooks are designed and manufactured to lift specific loads. The specified rated load of a hook applies to loads held uniformly in direct tension and does not take into account shock loads, hook tip loading, side loading, bending, torsional, or related loads.
2. Do not attempt to lift a load that is larger than the load rating of the hook.
3. Never use a hook's yield point as an indicator of its capacity.
4. Do not use a hook to lift personnel.
5. Know the rated load of the hook in use.
6. Never weld attachments to a finished hook in field applications. This will alter and destroy the design properties of the hook material.
7. Keep fingers, hands, body, and loose clothing from between the hook and the load.
8. Avoid shock loading.
9. Inspect the hook regularly for excessive wear and maintain it in safe operating condition.

# Load Moment Indicator

## Load Moment Indicator

Stellar Industries provides the model 14528 Crane with a load moment indicator to assist the operator in maintaining a safe operating load. This safety device does not take over the capacity chart. The capacity chart should be consulted for all lifts to determine a safe lifting position for the load. The LMI has 3 LED's on its side to indicate it is working properly. The Green LED indicates there is power to the LMI. The Yellow LED indicates the crane is in an overload condition and the crane functions of main boom down, winch up, and extension out will no longer operate until a safe lifting position is achieved.

## Troubleshooting

If the operator loses winch functions and extension functions, there is a problem with the LMI. If the Green LED is off, power has been lost to the LMI. To allow for the crane to keep operating with normal functions, the operator should look in the mast and find the 4-wire Weather-Pack connector with only one wire and a plug on the end. Next, find the 4-wire Weather-Pack that connects to the LMI. Connect those 2 Weather-Packs and normal crane operation should return.

**Warning!** If the LMI emergency connector is hooked up, there will be **no overload protection**. The operator must carefully follow the capacity chart. Contact Stellar Industries to have the LMI fixed immediately.

# Chapter 3 - Maintenance

---

## **WARNING - Read the Following before performing any maintenance on the crane.**

1. Only authorized service personnel are to perform maintenance on the crane.
2. Disengage the PTO before any service or repair is performed.
3. Do not disconnect hydraulic hoses while there is still pressure in those components.
4. Before disconnecting hydraulic components, place the boom on the ground or have it supported, shut off the engine, release any air pressure on the hydraulic reservoir, and move pedals and control levers repeatedly through their operating positions to relieve all pressures.
5. Keep the crane and service body clean and free from grease build-up, oil and dirt to prevent slippery conditions.
6. Perform all safety and maintenance checks before each period of use.
7. Replace parts with Stellar Industries, Inc. approved parts only.
8. Immediately repair or have repaired any components found to be inadequate.

## **Maintenance Procedures**

1. Position the crane where it will be out of the way of other operations or vehicles in the area.
2. Be sure boom is lowered to the ground or otherwise secured from dropping.
3. Place all controls in the off position and secure operating features from inadvertent motion.
4. Disconnect power source.
5. Relieve hydraulic oil pressure from all hydraulic circuits before loosening or removing hydraulic components.
6. Label or tag parts when disassembling.

## **Daily Inspection**

*Daily Inspection should occur each day before the crane is put into use. Each day, inspect the crane for all of the following:*

1. Hydraulic oil level.
2. Loose parts or damage to structures or weld.
3. Cylinder movement due to leakage.
4. Hoses and gearboxes for evidence of oil leaks.
5. Controls, including hand throttle for malfunction or adjustment.
6. Truck hand brake operation.
7. All securing hardware such as cotter pins, snap rings, hairpins, and pin keepers for proper installation.
8. All safety covers for proper installation.
9. Cylinder holding valves for proper operation.
10. Wire rope for broken wires, extensive wear, distortion, and heat damage.

## **Periodic Inspection**

*Periodic Inspection should occur while the crane is in use. For the duration of the usage, inspect the crane for all of the following:*

1. Loose bolts and fasteners.
2. All pins, bearings, shafts, and gears for wear, cracks, or distortion to include all pivots, outriggers, sheave pins, and bearings.
3. Hydraulic systems for proper operating pressure.
4. Main frame mount bolts.
5. Cylinders for:
  - A. Damaged rods.
  - B. Dented barrels.
  - C. Drift from oil leaking internally.
  - D. Leaks at rod seals or holding valves.
6. PTO drive line system for proper alignment, lubrication, and tightness.
7. Hydraulic hose and tubing for evidence of damage such as blistering, crushing, or abrasion.

## Weekly Inspection

*Weekly Inspection should occur at the beginning of every work week. Each week, inspect the crane for all of the following:*

1. Lubrication of points required by lubrication chart. See chart at the end of this chapter.
2. Proper operation of load hook safety latch.
3. Presence of this owner's manual.

## Monthly Inspection

*Monthly Inspection should occur at the beginning of every work month. Each month, inspect the crane for all of the following:*

1. Frame bolt tightness - turn barrel nuts and mounting bolts during the first month of operation on new machines and then quarterly thereafter.
2. Cylinders and valves for leaks.
3. Lubrication.
4. Load hook for cracks or having more than 15 percent normal throat opening or 10 degrees twist.
5. Structural members for bends, cracks, or broken members.
6. All welds for breaks and cracks.
7. All pins and keepers for proper installation.
8. All control, safety, and capacity placards for readability and secure attachment.
9. Inspect all electrical wires and connections for worn, cut, or deteriorated insulation and bare wire. Replace or repair wires as required.
10. Tightness of all boom wear, pad-retaining bolts.

## Cleanliness

**An important item in preserving the long life of the crane is keeping dirt, grime, and corrosive material out of the working parts. Thoroughly wash the crane periodically.**

## Service

*The following general suggestions should be helpful in analyzing and servicing your crane. Using the following systematic approach should be helpful in finding and fixing problems:*

1. Determine the problem.
2. List and record possible causes.
3. Devise checks.
4. Conduct checks in a logical order to determine the cause.
5. Consider the remaining service life of components against the cost of parts and labor necessary to replace them.
6. Make the necessary repair.
7. Recheck to ensure that nothing has been overlooked.
8. Functionally test the new part in its system.

## Inspection Checklist

*For a more detailed outline of scheduled inspection points, refer to the Stellar Inspection Checklist at the end of this chapter. This list is an excellent guide for the inspection tasks that will help maintain the quality of your Stellar product. Feel free to photocopy the checklist as needed.*



Follow these guidelines to maintain the quality of your Stellar product.

## Mobil Lubrication Recommendations :

Component	Location	Recommendation
Engine	Crankcase	Apply Manufacturer's Recommendations
Hydraulic System Below -5°F -5°F to 90°F Above 90°F	Reservoir	Mobil DTE 12M or 11M Mobil DTE 13M Mobil DTE 25
Open Gears	Hand	Mobilgrease Moly52
Bearings, grease (including turntable bearing inner race)	Gun	Mobilgrease XHP 222
Worm Drive Gearbox	Gearbox	Mobilith SHC 007
Planetary Gearbox (including winch)	Gearbox	Mobilube HD Plus 80W-90
Wear Pad Lubrication	Spray	MobilTac 375NC
Compressor Fluids Reciprocating Single stage Double Stage	Crankcase Crankcase	Mobil Rarus 427 Mobil Rarus 427
Screw -15°F to 86°F -23°F to 100°F 32°F to 113°F	Crankcase	Mobil Rarus SHC 1024 Mobil Rarus SHC 1025 Mobil Rarus SHC 1026

### Greasing the Crane

Lubricate all grease gun points with Extreme Pressure Grease - Stellar P/N: 22059. Lubricate all open face gears, both worm and straight EXTERNAL gears, with Molube Alloy - Stellar P/N: 4460. **DO NOT USE THIS LUBRICANT ON ANY OTHER SURFACES!**

## Wire Rope Maintenance

### Wire Rope Inspection Points

*While inspection of the entire rope is required, attention should be directed to these critical points:*

1. **Pick-up Points** for signs of wear due to stress from repeated lifts.
2. **End Attachments** for corrosion and broken wires at both ends of the rope.
3. **Drums** for signs of corrugation and wear that may lead to wire damage.
4. **Sheaves** to ensure that each sheave has the proper groove size and contour.
5. **Abuse Points** for heavy amounts of scuffing and scraping.

*It is important to perform detailed inspections of all ropes associated with the crane. These inspections can be divided into two types:*

#### 1. **Frequent Inspection**

- A. All running ropes should be inspected once each working day. These visual observations will be concerned with discovering damage that may be an immediate hazard. The following concerns should be addressed:
  1. Distortion of the rope.
  2. General corrosion.
  3. Broken or cut strands.
- B. Use caution while inspecting sections of rapid deterioration.
- C. Use caution while inspecting boom hoist ropes. Proper inspection is critical but difficult.

#### 2. **Periodic Inspection**

- A. Inspection frequency will be determined by a qualified person and will be based on such factors as expected rope life, environment conditions, capacity of typical lifts, rates of usage, and exposure to shock loads. Periodic inspection needs to be performed at least annually.
- B. Periodic inspections will be performed by a qualified individual and will cover the entire length of the rope.

Only the surface wires of the rope need to be inspected. This inspection will be concerned with discovering damage that may be an immediate hazard. The following concerns should be addressed:

1. Distortion of the rope.
  2. General corrosion.
  3. Broken or cut strands.
  4. Reduction of rope diameter.
  5. Corroded or broken wires at end connections.
  6. Corroded, cracked, bent, worn, or improperly applied end connections.
- C. Use caution when inspecting the following:
1. Sections in contact with saddles, equalizer sheaves, or other sheaves where rope travel is limited.
  2. Sections of the rope at or near ends with corroded or broken wires.

### Wire Rope Replacement

*Rope replacement guidelines are as follows:*

1. Broken wires, including standing ropes with more than two broken wires in one lay or more than one broken wire at an end connection.
2. Wear of one-third the original diameter of the outside wires.
3. Distortion of the rope structure.
4. Evidence of heat damage.
5. Reductions from nominal diameters of more than 1/64 in. (0.4 mm) for diameters from 5/16 in. (19.0 mm) and 1/32 in. (0.8 mm) for diameters from 3/8 in. (9.5 mm) to and including 1/2 in. (13.0 mm).

### Wire Rope Maintenance

*Proper maintenance is key in ensuring a long lasting rope. These three tips will help:*

1. Store the rope to prevent damage.
2. Avoid objects that may scrape, bend, or crush the wires of the rope.
3. Always keep the rope well-lubricated.

## Holding Valve Inspection Procedure

The cylinders are equipped with holding valves that prevent sudden movement of the cylinder rods in the event of a hydraulic hose or hydraulic component failure. The valve is checked in the following manner:

1. Identify the cylinder in question.
2. Identify the holding valves and the cylinder direction in question.
  - a. Cylinder Extend.
  - b. Cylinder Retract.
3. Place the machine so that the cylinder will be located in the appropriate testing position.
4. Pick the load (Do not exceed capacity, rated or stability).
5. Disengage hydraulics.
6. Operate crane functions.
  - A. If the cylinder creeps (lowering the load), replace the holding valve.
  - B. If the cylinder does not creep (load stays suspended), the valve is operational.

## Gear-Bearing Bolt Maintenance


Anytime a gear-bearing bolt is removed, it must be replaced with a new bolt of the identical grade and size. Once a bolt has been torqued to 75% of its proof load and then removed, the torque coefficient may no longer be the same as when the bolt was new thus giving indeterminate damp loads after torquing.

## Warning!


**Failure to replace gear-bearing bolts may result in bolt failure due to metal fatigue causing serious injury or even death.**

# Torque Data Chart

Grade 5



Grade 8



Grade 9



Size (DIA-TPI)	Bolt DIA (Inches)	Plain (Ft-Lb)	Plated (Ft-Lb)	Plain (Ft-Lb)	Plated (Ft-Lb)	Plated (Ft-Lb)
5/16-18	0.3125	17	13	25	18	22
3/8-16	0.3750	31	23	44	33	39
7/16-14	0.4375	49	37	70	52	63
1/2-13	0.5000	75	57	105	80	96
9/16-12	0.5625	110	82	155	115	139
5/8-11	0.6250	150	115	220	160	192
3/4-10	0.7500	265	200	375	280	340
7/8-9	0.8750	395	295	605	455	549
1-8	1.000	590	445	910	680	823
1 1/8-7	1.1250	795	595	1290	965	1167
1 1/4-7	1.2500	1120	840	1815	1360	1646
1 3/8-6	1.3750	1470	110	2380	1780	2158
1 1/2-6	1.500	1950	1460	3160	2370	2865

*When using the torque data in the charts above, the following rules should be observed.*

1. Bolt manufacturer's particular specifications should be consulted when provided.
2. Flat washers of equal strength must be used.
3. All torque measurements are given in foot-pounds. To convert to inch-pounds, multiply by 12.
4. Torque values specified are for bolts with residual oils or no special lubricants applied. If special lubricants of high stress ability, such as Never-Seez compound graphite and oil, molybdenum disulphite, colloidal copper or white lead are applied, multiply the torque values in the charts by the factor .90. The use of Loctite does not affect the torque values listed above.
5. Torque values for socket-head capscrews are the same as for Grade 8 capscrews.

# Stellar Industries Inspection Checklist for Telescopic Boom Cranes

Use of this checklist is subject to terms of the Stellar Warranty information. Additional copies of this checklist can be obtained by contacting Stellar Customer Service at (800) 321-3741 or by download at: <http://www.stellarindustries.com/pages/downloads.htm>

Type of Inspection (check one)

- Daily (if deficiency found)       Quarterly  
 Monthly       Annual

Owner/Company:

Contact Person:

Crane Make/Model:

Crane Serial:

Date Inspected:

Hour Meter Reading:

Inspected by: (print)

Signature of Inspector:

## Type of Inspection Information

Daily and monthly inspections are to be performed by a “designated” person, who has been selected by the employer or the employer’s representative as being competent to perform specific duties.

Quarterly and annual inspections are to be performed by a “qualified” person who, by possession of a recognized degree in an applicable field or certificate of professional standing, or who, by extensive knowledge, training and experience has successfully demonstrated the ability to solve or resolve problems related to the subject matter and work.

One hour of normal crane operation assumes 20 complete cycles per hour. If operation exceeds 20 cycles per hour, inspection frequency should be increased accordingly.

Consult the Stellar Owner’s Manual for additional inspection items.

Before inspecting and operating the crane, make certain that the crane is set up away from power lines and leveled with outriggers fully extended.

**Daily (D):** Before each day of operation, those items with a (D) must be inspected. This inspection need not be recorded unless a deficiency is found.

**Monthly (M):** Monthly inspections or 100 hours of normal operation (which ever comes first) includes all daily and monthly inspection items plus items designated with a (Q). This inspection must be recorded.

**Quarterly (Q):** Every three months or 300 hours of normal operation (which ever comes first) includes all daily and monthly inspection items plus items designated with an (M). This inspection must be recorded.

**Annual (A):** Each year or 1200 hours of normal operation (which ever comes first) includes all items on this form which encompasses daily, monthly, and quarterly inspections plus those items designated by (A). This inspection must be recorded.

# Daily Inspection

Frequency	Key	Inspection Description	Status
D	Labels	All load charts, safety & warning labels, & control labels are present and legible.	
D		Check all safety devices for proper operation.	
D	Controls	Control mechanisms for proper operation of all functions, leaks, & cracks.	
D	Station	Control mechanisms for proper operation of all functions, leaks, & cracks.	
D	Hyd System	Hydraulic system (hoses, tubes, & fittings) for leakage & proper oil level.	
D	Hook	Presence & proper operation of hook safety latches.	
D	Rope	Proper reeving of wire rope on sheaves & winch drum.	
D	Pins	Proper engagement of all connecting pins & pin retaining devices.	
D	General	Overall observation of crane for damage or missing parts, cracked welds & presence of safety covers.	
D	Operation	During operation, observe crane for abnormal performance, unusual wear (loose pins, wire rope damage, etc.). If observed, discontinue use & determine cause & severity of hazard.	
D	Remote Ctrl's	Operate remote control devices to check for proper operation.	
D	Electrical	Operate all lights, alarms, etc. to check for proper operation.	
D	Anti 2-Blocking	Operate anti 2-blocking device to check for proper operation.	
D	Operation Aid	Check presence of boom angle indicator.	
D	Operation Aid	Check overload device for proper operation.	
D		Other	
D		Other	

## Monthly Inspection

Frequency	Key	Inspection Description	Status
M	Daily	All Daily Inspections.	
M	Cylinders	Visual inspection of cylinders for leakage at rod, fittings, & welds. Damage to rod & case.	
M	Valves	Holding valves for proper operation.	
M	Valves	Control valve for leaks at fittings & between sections.	
M	Valves	Control valve linkages for wear, smoothness of operation & tightness of fasteners. Relief valve for proper pressure settings.	
M	General	Bent, broken or significantly rusted/corroded parts.	
M	Electrical	Electrical systems for presence of dirt, moisture & frayed wires.	
M	Structure	All structural members for damage.	
M	Welds	All welds for breaks & cracks.	
M	Pins	All pins for proper installation & condition.	
M	Hardware	All bolts, fasteners & retaining rings for tightness, wear & corrosion.	
M	Wear Pads	Condition of wear pads.	
M	Pump & Motor	Hydraulic pumps & motors for leakage at fittings, seals & between sections. Check tightness of mounting bolts.	
M	PTO	Transmission/PTO for leakage, abnormal vibration & noise, alignment & mounting bolt torque.	
M	Hyd Fluid	Quality of hydraulic fluid and for presence of water.	
M	Hyd Lines	Hoses & tubes for leakage, abrasion damage, blistering, cracking, deterioration, fitting leakage, & secured properly.	
M	Hook	Load hook for abnormal throat distance, twist, wear, & cracks.	
M	Rope	Condition of load line.	
M	Manual	Presence of operator's manuals with the unit.	
M	Chassis	Tire wear and air pressure.	
M	Chassis	Working backup alarm.	
M	Station	Fire extinguisher at cab or machinery housing.	
M	Other	Other	
M	Other	Other	

# Quarterly Inspection

Frequency	Key	Inspection Description	Status
Q	Daily	All daily inspections.	
Q	Monthly	All monthly inspections.	
Q	Rotation Sys	Rotation bearing for proper torque of all mounting bolts.	
Q	Hardware	Base mounting bolts for proper torque.	
Q	Structure	All structural members for deformation, cracks, & corrosion.	
		Base	
		Outrigger beams & legs	
		Mast	
		Inner boom	
		Outer boom	
		Extension(s)	
		Jib boom	
		Jib extension(s)	
		Other	
Q	Hardware	Pins, bearings, shafts, gears, rollers, & locking devices for wear, cracks, corrosion, & distortion.	
		Inner boom pivot pin(s) & retainer(s)	
		Outer boom pivot pin(s) & retainer(s)	
		Inner boom cylinder pin(s) & retainer(s)	
		Outer boom cylinder pin(s) & retainer(s)	
		Extension cylinder pin(s) & retainer(s)	
		Jib boom pin(s) & retainer(s)	
		Jib cylinder pin(s) & retainer(s)	
		Jib extension cylinder pin(s) & retainer(s)	
		Boom tip attachments	
		Other	
Q	Hyd Lines	Hoses, fittings, & tubing for proper routing, leakage, blistering, deformation, & excessive abrasion.	
		Pressure line(s) from pump to control valve	
		Return line(s) from control valve to reservoir	
		Suction line(s) from reservoir to pump	
		Pressure line(s) from control valve to each function	
		Load holding valve pipe(s) and hose(s)	
		Other	
Q	Pumps & Motors	Pumps and motors for loose bolts/fasteners, leaks, noise, vibration, loss of performance, heating and excess pressure.	
		Winch motor(s)	
		Rotation motor(s)	
		Other	
Q	Valves	Hydraulic valves for cracks, spool return to neutral, sticking spools, relief valve failure.	
		Main control valve	
		Load holding valve(s)	
		Outrigger or auxiliary control valve(s)	
		Other	
		Other	
Q	Cylinders	Hydraulic cylinders for drifting, rod seal leakage, & leakage at welds. Rods for nicks, scores, & dents. Cas for damage. Case & rod ends for damage & abnormal wear.	
		Outrigger cylinder(s)	
		Inner boom cylinder(s)	
		Outer boom cylinder(s)	
		Extension cylinder(s)	
		Rotation cylinder(s)	
		Jib lift cylinder(s)	
		Jib extension cylinder(s)	
		Other	
Q	Winch	Winch, sheaves, & drums for damage, abnormal wear, abrasion, & other irregularities.	
Q	Hyd Filter	Hydraulic filters for replacement per maintenance schedule.	

## Quarterly Inspection

Frequency	Key	Inspection Description	Status
A	Daily	All daily inspection items.	
A	Monthly	All monthly inspection items.	
A	Quarterly	All quarterly inspection items.	
A	Hyd System	Hydraulic fluid change per maintenance schedule.	
A	Controls	Control valve calibration for correct pressures & relief valve settings.	
A	Valves	Safety valve calibration for correct pressures & relief valve settings	
A	Valves	Valves for failure to maintain correct settings.	
A	Rotation Sys	Rotation drive system for proper backlash clearance & abnormal wear, deformation, & cracks.	
A	Lubrication	Gear oil change in rotation drive system per maintenance schedule.	
A	Hardware	Check tightness of all fasteners and bolts.	
A	Wear Pads	Wear pads for excessive wear.	
A	Loadline	Loadline for proper attachment to drum.	
A	Historic Data	Monthly inspection records.	
A	Historic Data	Maintenance records.	
A	Historic Data	Repair and modification records.	



# Chapter 4 - Specifications


---

## Model 14528 Crane SPECIFICATION SHEET

Crane Rating:	70,000 ft-lbs (9.68 ton-meters)
Standard Boom Length:	13' (3.96 m) from CL of Crane
Boom Extension:	1st stage: Hydraulic 90" (228.6 cm) 2nd stage: Hydraulic 90" (228.6 cm)
Maximum Horizontal Reach:	28' (8.53 m) from CL of Crane
Maximum Vertical Lift: (from crane base)	29' 4" (8.94 m)
Boom Elevation:	-5 to +80 degrees
Stowed Height: (crane only)	43" (102.9 cm)
Mounting Space Required:	25" x 22" (63.5 x 55.9 cm)
Approximate Shipping Weight:	3100 lbs (1406 kg)
Controls:	Radio control standard for all functions.
Winch Specifications	
Rope Diameter:	1/2" (1.27 cm)
Line pull speed:	60 ft/min (18.29 m/min)
Max. single part line:	7000 lbs (3175 kg)
Max. double part line:	14,000 lbs (46,350 kg)
Rotation: (worm gear)	400 degree power
Lifting Capacities:	5375 lbs @ 13' (2440 kg @ 3.96 m) 2500 lbs @ 28' (1130 kg @ 8.54 m)
Power Supply Required:	PTO & Pump (12 gpm @ 2600 psi) (45.4 lpm @ 180 bars)

\*Subject to change without notification

# CAPACITY CHART

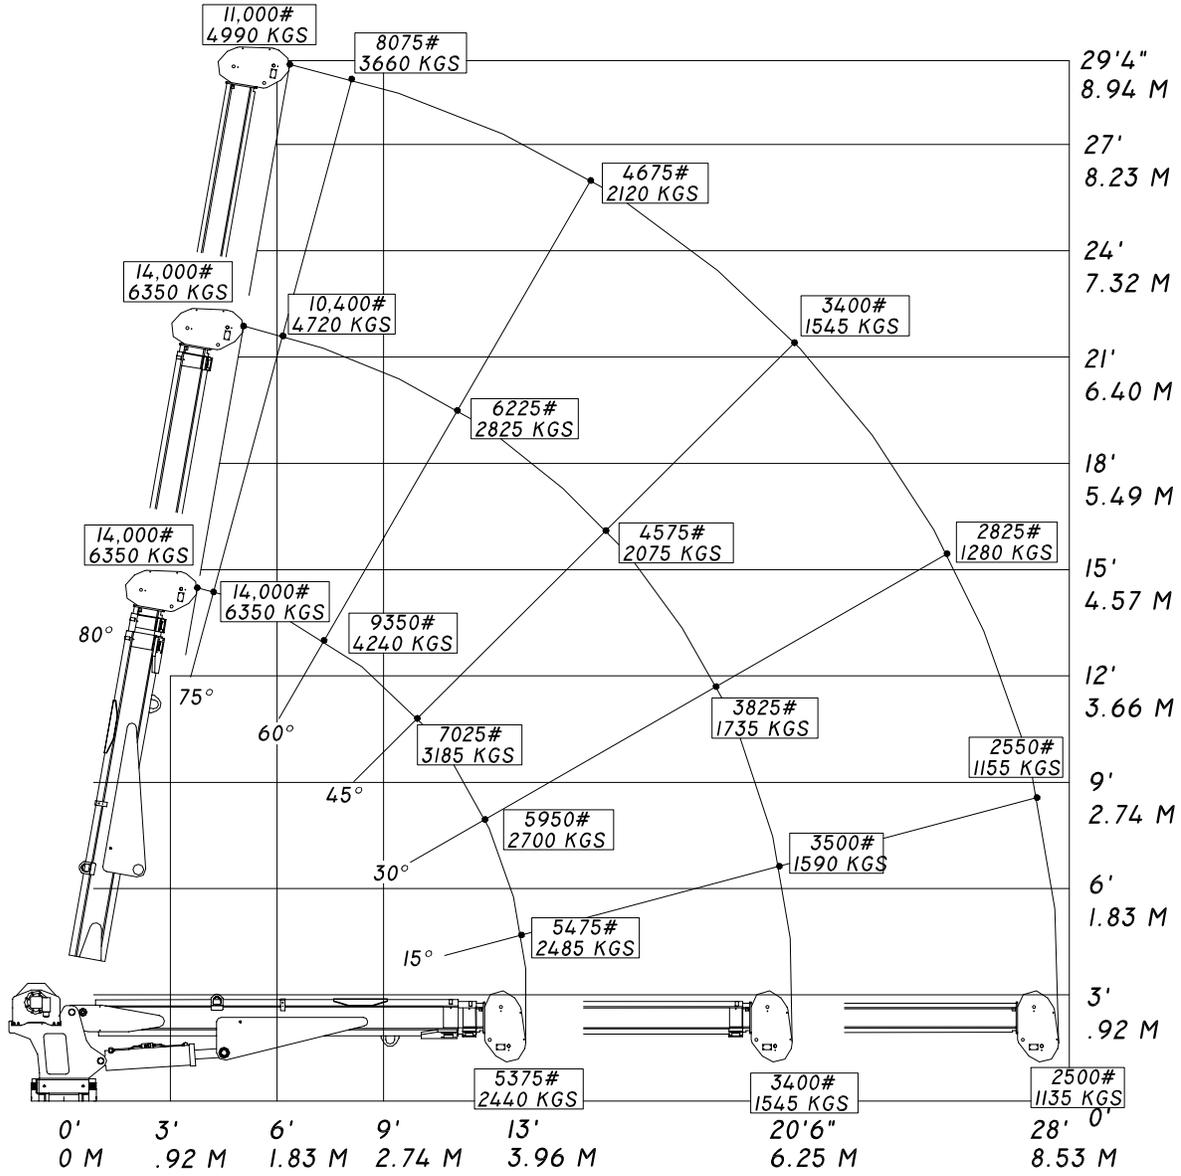

Maximum 1-part line capacity is 7000 lbs.  
For greater loads, use 2-part line.

REACH IN FEET  
CAPACITY IN POUNDS

Weight of load handling devices  
are part of the load lifted and must  
be deducted from the capacity.

# STELLAR 14528

# Chapter 5 - Decals


## Decals of Note



### Foot Crushing Hazard Decal

**Location:** On each outrigger leg.

**Function:** To inform the operator and other personnel in the work area of the hazard associated with the operation of the outriggers, the possible consequences should the hazard occur, and how to avoid the hazard. PN: C4795

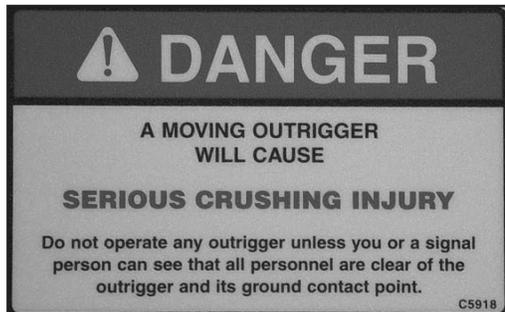

### Moving Outrigger Hazard Decal

**Location:** On each outrigger


**Function:** To inform the operator of the hazard associated with outrigger operation, the possible consequences should the hazard occur, and how to avoid the hazard. PN: C5918




### Instructional Decal

**Location:** At Stow Hook area

**Function:** To caution the operator not to use the stow hook for any lifting applications. PN: 24712

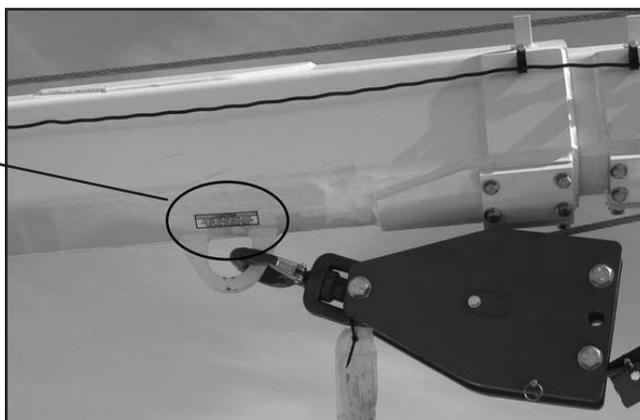


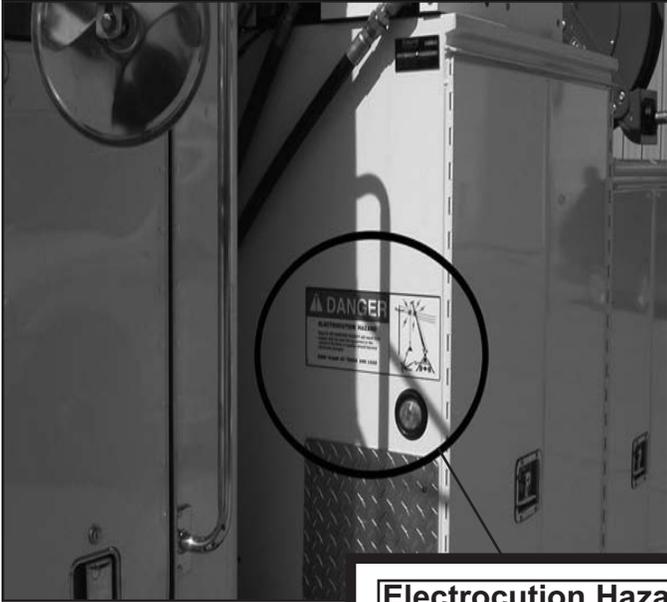




**Electrocution Hazard Decal**

**Location:** Each side of truck body, Front & Rear Bumper

**Function:** To inform the operator and other personnel in the work area of the hazard associated with contact or proximity to electrical lines, the possible consequences should the hazard occur and how to avoid the hazard.

PN: C4545

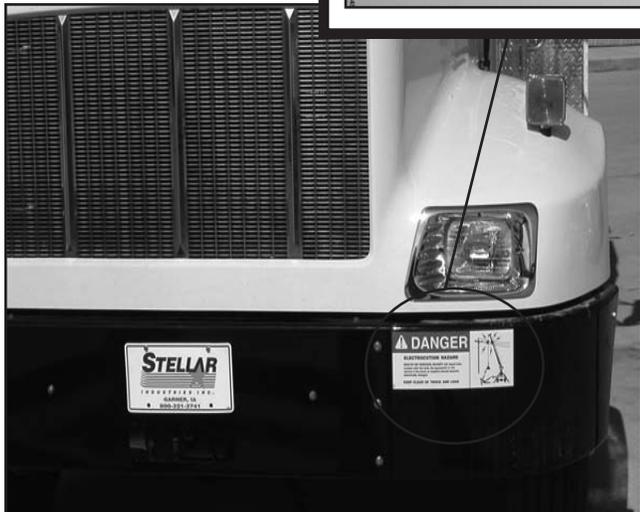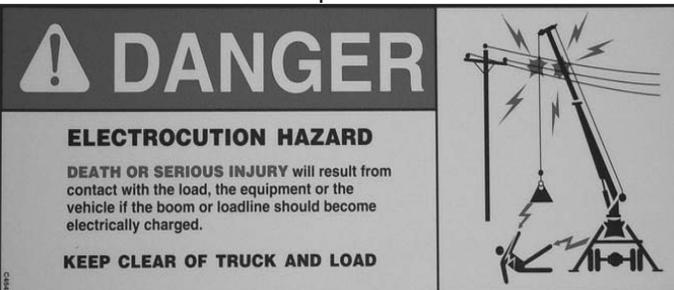


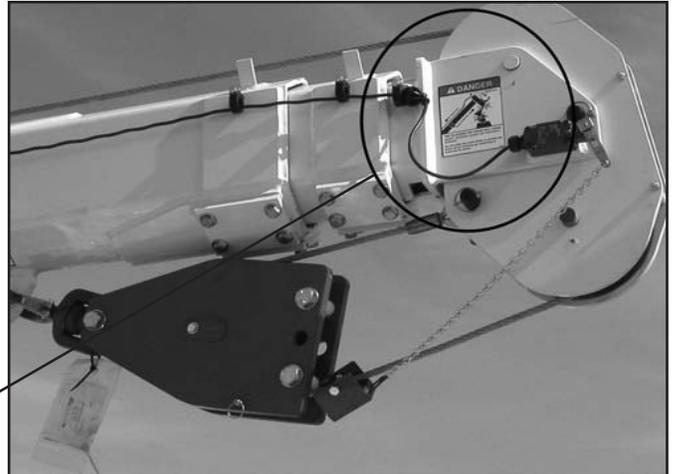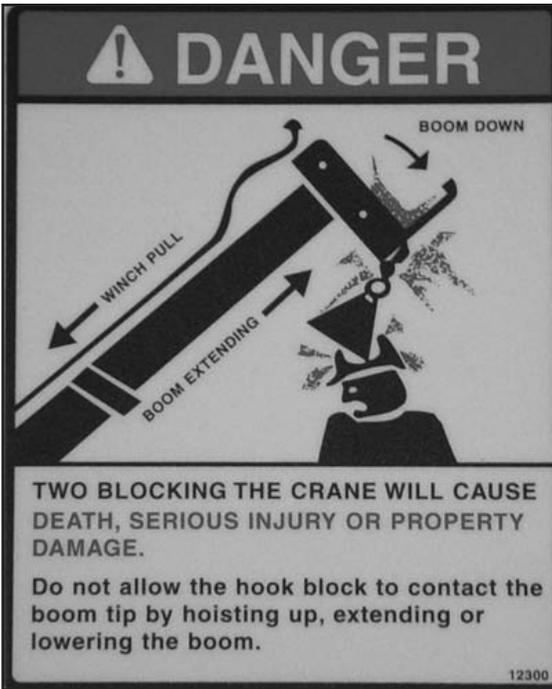

**Two Block Hazard Decal**

Location: At Boom Tip

Function: To inform the operator of the hazard associated with bringing the sheave(s) into contact with the hook, snatch block or load, the possible consequences should the hazard occur and how to avoid the hazard.  
PN: 12300

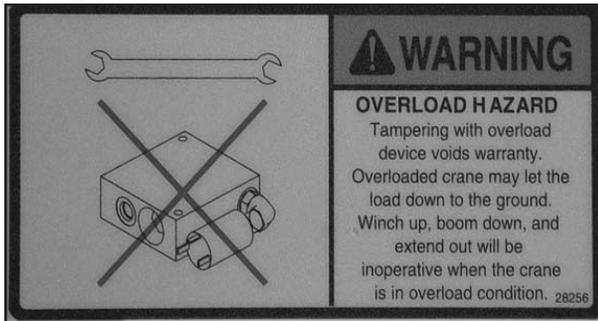


**Instructional Decal**

Location: At Overload Switch

Function: To inform the operator that tampering with the overload device may cause a unit failure.  
PN: 28256



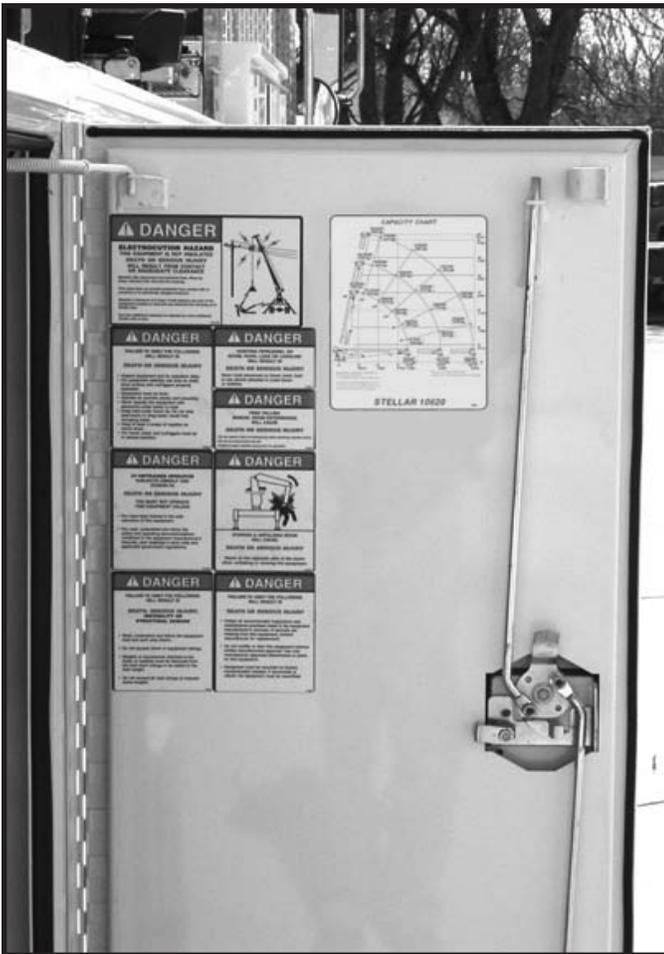

**! DANGER**

FAILURE TO OBEY THE FOLLOWING  
WILL RESULT IN

**DEATH OR SERIOUS INJURY**

- Follow all recommended inspections and maintenance practices listed in the equipment manufacturer's manuals. If manuals are missing from this equipment, contact manufacturer for replacement.
- Do not modify or alter this equipment without written manufacturer's approval. Use only manufacturer approved attachments or parts on this equipment.
- Equipment must be mounted on factory recommended chassis. If remounted or rebuilt, the equipment must be recertified.

**Operation Hazard Decal**

**Location:** Inside Crane Compartment, on Compartment Door

**Function:** To inform the operator and other personnel in the work area of the hazard associated with improper maintenance and unauthorized modifications, the possible consequences should the hazard occur, and how to avoid the hazard.  
PN: 4190

**! DANGER**

**ELECTROCUTION HAZARD**  
THIS EQUIPMENT IS NOT INSULATED  
**DEATH OR SERIOUS INJURY**  
WILL RESULT FROM CONTACT  
OR INADEQUATE CLEARANCE

Maintain safe clearances from electrical lines. Allow for boom, electrical line, and load line swaying.

This crane does not provide protection from contact with or proximity to an electrically charged conductor.

Maintain a clearance of at least 10 feet between any part of the equipment, loadline or load and any electrical line carrying up to 50,000 volts.

One foot additional clearance is required for every additional 30,000 volts or less.

C1179

**Electrocution Hazard Decal**

**Location:** Inside Crane Compartment, on Compartment Door

**Function:** To inform the operator of the hazard associated with overloading the crane, the possible consequences should the hazard occur, and how to avoid the hazard.  
PN: C1179

**! DANGER**

FAILURE TO OBEY THE FOLLOWING  
WILL RESULT IN



**DEATH, SERIOUS INJURY,  
INSTABILITY OR  
STRUCTURAL DAMAGE**

- Read, understand and follow the equipment load and work area charts.
- Do not exceed winch or equipment ratings.
- Weights of accessories attached to the boom or loadline must be deducted from the load chart ratings or be added to the load weight.
- Do not exceed jib load ratings at reduced boom lengths.


**Operation Hazard Decal**

**Location:** Inside Crane Compartment, on Compartment Door

**Function:** To inform the operator of the hazard associated with overloading the crane, the possible consequences should the hazard occur, and how to avoid the hazard.  
PN: 4189

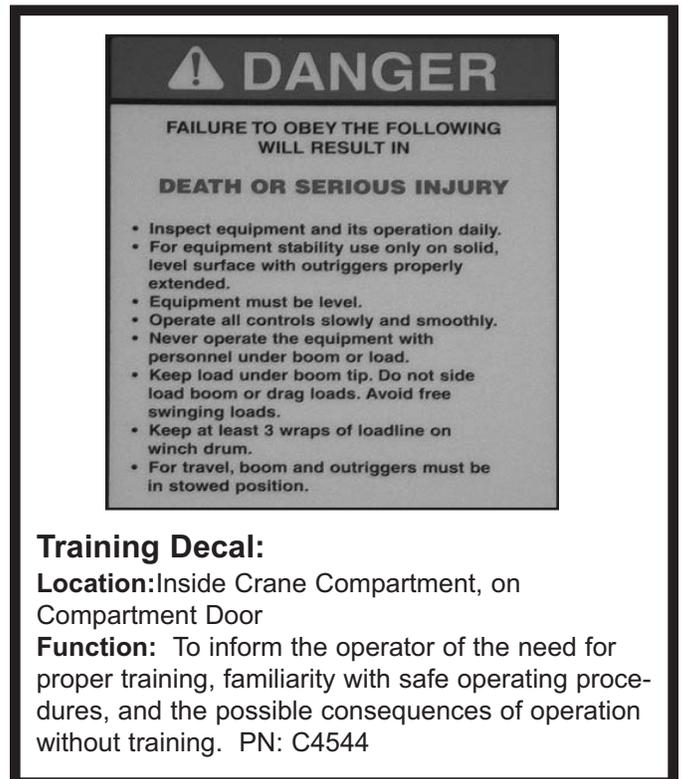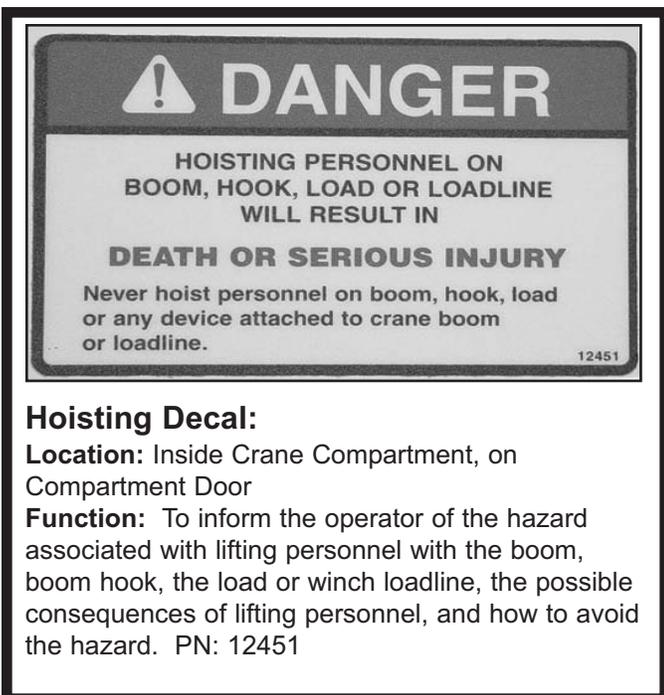

# Decal Placement

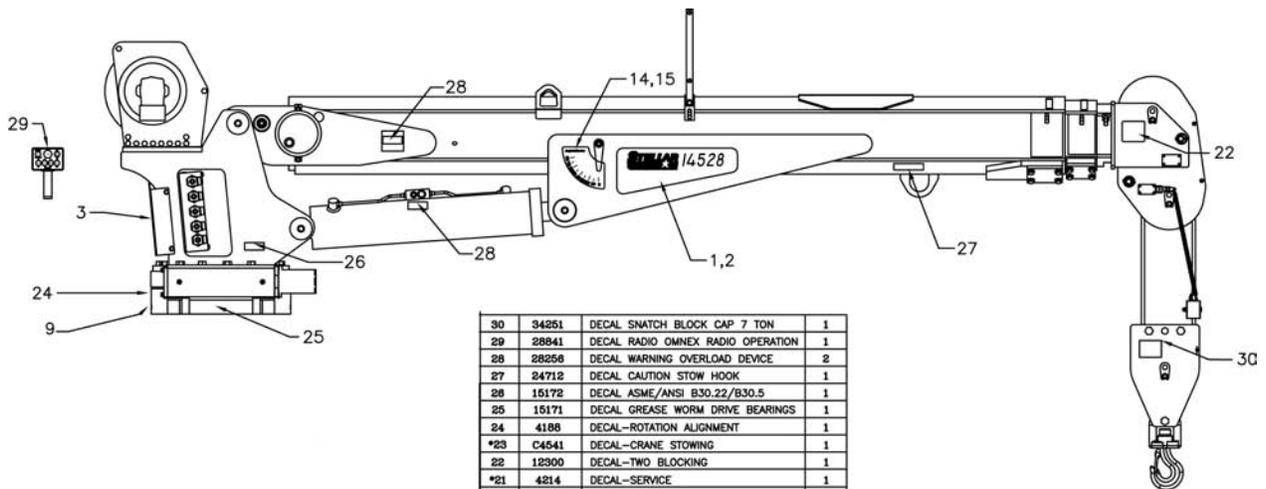

30	34251	DECAL SNATCH BLOCK CAP 7 TON	1
29	28841	DECAL RADIO OMNEX RADIO OPERATION	1
28	28256	DECAL WARNING OVERLOAD DEVICE	2
27	24712	DECAL CAUTION STOW HOOK	1
26	15172	DECAL ASME/ANSI B30.22/B30.5	1
25	15171	DECAL GREASE WORM DRIVE BEARINGS	1
24	4188	DECAL-ROTATION ALIGNMENT	1
*23	C4541	DECAL-CRANE STOWING	1
22	12300	DECAL-TWO BLOCKING	1
*21	4214	DECAL-SERVICE	1
*20	C0568	DECAL-DIESEL	2
*19	12452	DECAL MANUAL EXT	1
*18	C5911	DECAL-STELLAR 2x4.5	3
*17	C5910	DECAL-STELLAR 4x9.5	1
*16	12451	DECAL HOISTING PERSONNEL	1
15	D1197	DECAL-ANGLE INDICATOR SS	1
14	D1196	DECAL-ANGLE INDICATOR CS	1
*13	C1179	DECAL-ELECTROCUTION 4.5x7.5	2
*12	C5918	DECAL-DANGER MOVING O.R.	2
*11	C4795	DECAL-DANGER O.R.	2
*10	4190	DECAL-DANGER	1
09	9188	DECAL-ROTATE/GREASE	1
*08	4189	DECAL-DANGER	1
07	4186	DECAL-ELECTROCUTION 2x2.75	1
*06	C4544	DECAL-DANGER	1
*05	C4540	DECAL-DANGER	1
*04	C4545	DECAL-ELECTROCUTION 5x13	4
*03	28204	DECAL CAPACITY	2
02	27163	DECAL IDENTIFICATION SS	1
01	27164	DECAL IDENTIFICATION CS	1
<b>ITEM</b>	<b>PART No.</b>	<b>DESCRIPTION</b>	<b>QTY</b>

# Chapter 6 - Installation

1. Use a crane or lifting device capable of lifting the weight of the Stellar crane.

2. Connect straps or chain to lifting rings on Stellar crane. Run tap on threads of base to be sure they are clean.



Use crane or lifting device




3. Use six (6) 1" x 3" #8 bolts and six (6) #8 flat washers.

4. Install a washer on each bolt.

5. Apply Loctite Thread locker #277 to the bolts.


6. Mount crane with rotation motor to the door side of crane compartment. Have someone assist in leveling the crane. Lower the Stellar crane just above crane compartment and start the bolts.



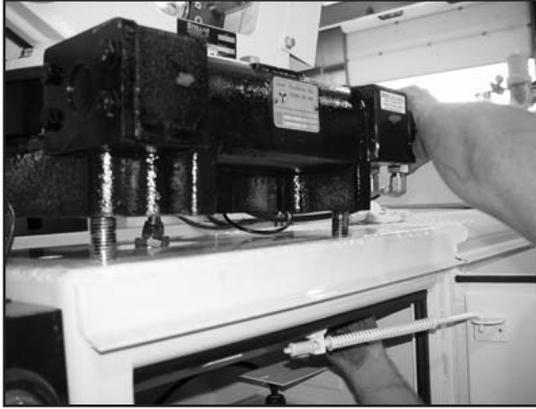

7. Tighten bolts to the correct torque.

8. Remove supporting crane.

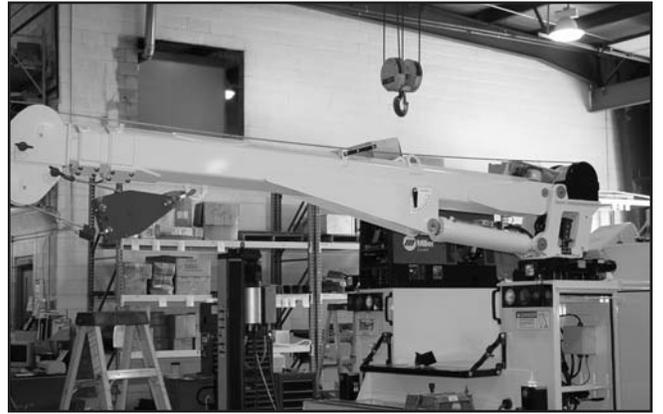


Wiring Harness



9. Hook-up hoses and electrical.

# Hydraulic Installation

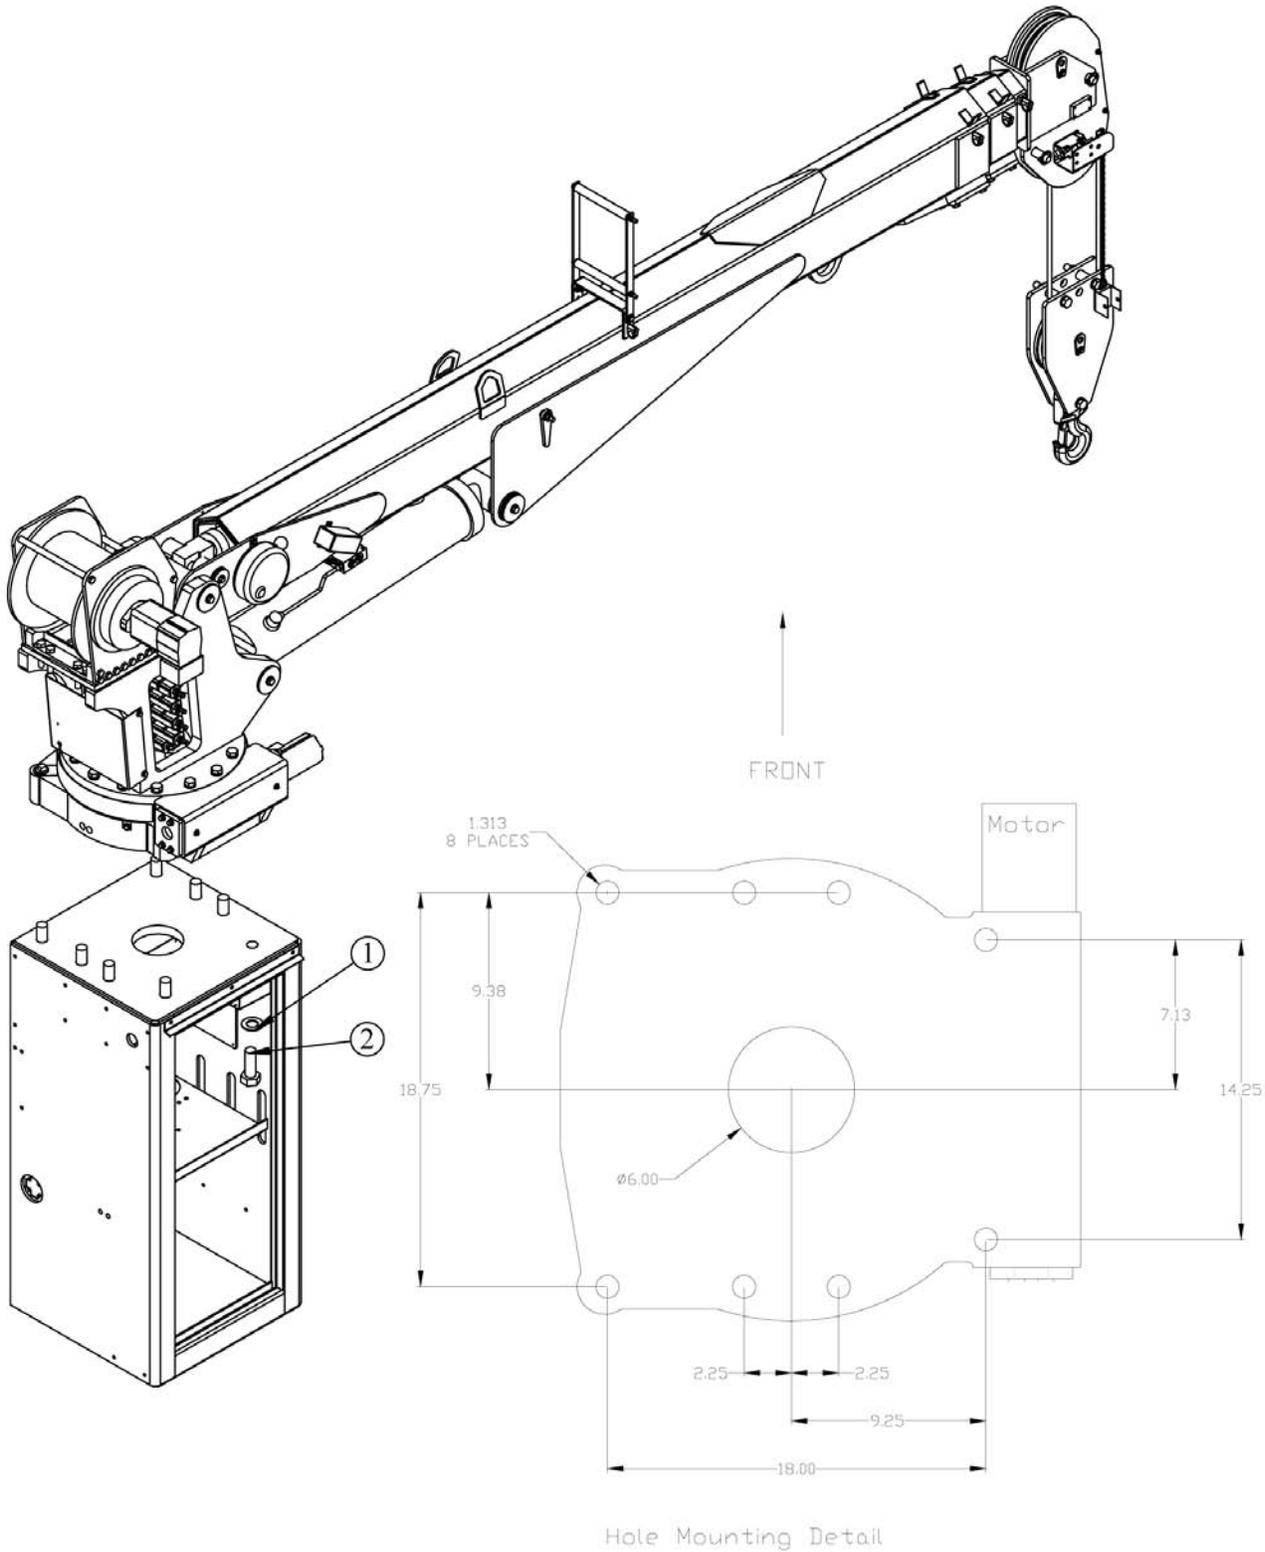

ITEM	PART	DESCRIPTION	QTY.
1	9180	WASHER 1.25 SAE FLAT YELLOW GR8	8
2	16654	CAP SCR 1.25-7X3.50 GR8	8

# Stability Procedure

---

## Definition of Stability for the Stellar Telescopic Crane Products:

A truck is stable until the load cannot be lifted off the ground with the winch, without tipping over the truck.

Every Stellar crane installed must be tested for stability to determine the actual load capacity of the final truck package. The actual test data must be recorded and supplied with the truck at the time of in-service and should be kept with the truck at all times. The following procedure will test the truck package for stability and will provide a stability capacity chart. The load limit information shown on the stability capacity chart is formulated on 85% tipping.

## Set Up:

1. Locate the truck on a test course in position for loading and engage travel brakes.
2. Set outriggers so that they make contact with firm, level footings
3. Operate the crane under partial load to assure operator proficiency and proper machine function.

## 14528 Stability Data

**Max Horizontal Reach:** 336" (From the center of rotation to boom tip)

**Stability Test Weight:** 2950 lbs.

## Test Procedure


1. Rotate the crane into Zone 1 position.
2. With the crane fully retracted and the boom horizontal, winch the test weight off the ground.  
Note: Keep weight within six inches of the ground at all times.
3. Extend the boom outward until full extension has been reached or until the truck becomes unstable (Again, use the winch to keep the weight within six inches of the ground.)
4. If the boom goes full extension without becoming unstable, the crane is termed stable for this zone and 100% can be written in the Zone 1 data box.
5. If the truck becomes unstable prior to going full extension, retract the boom until the truck becomes stable and measure the horizontal reach in this position (center of rotation to boom tip). This is the stable horizontal reach for this zone. Stable horizontal reach divided by Maximum horizontal reach multiplied by 100 equals the percentage of rated capacity for this zone. Use the following formula to determine the percentage of rated capacity:

$$\frac{\text{Stable Horizontal Reach}}{\text{Max Horizontal Reach}} \times 100 = \text{Percentage of Rated Capacity}$$

Record this number in the data box for Zone 1. This is the revised capacity due to stability for this zone.


6. Repeat this procedure for each zone until the worksheet is completed.
7. This is the revised capacity based on stability of this package.

# STABILITY CHART

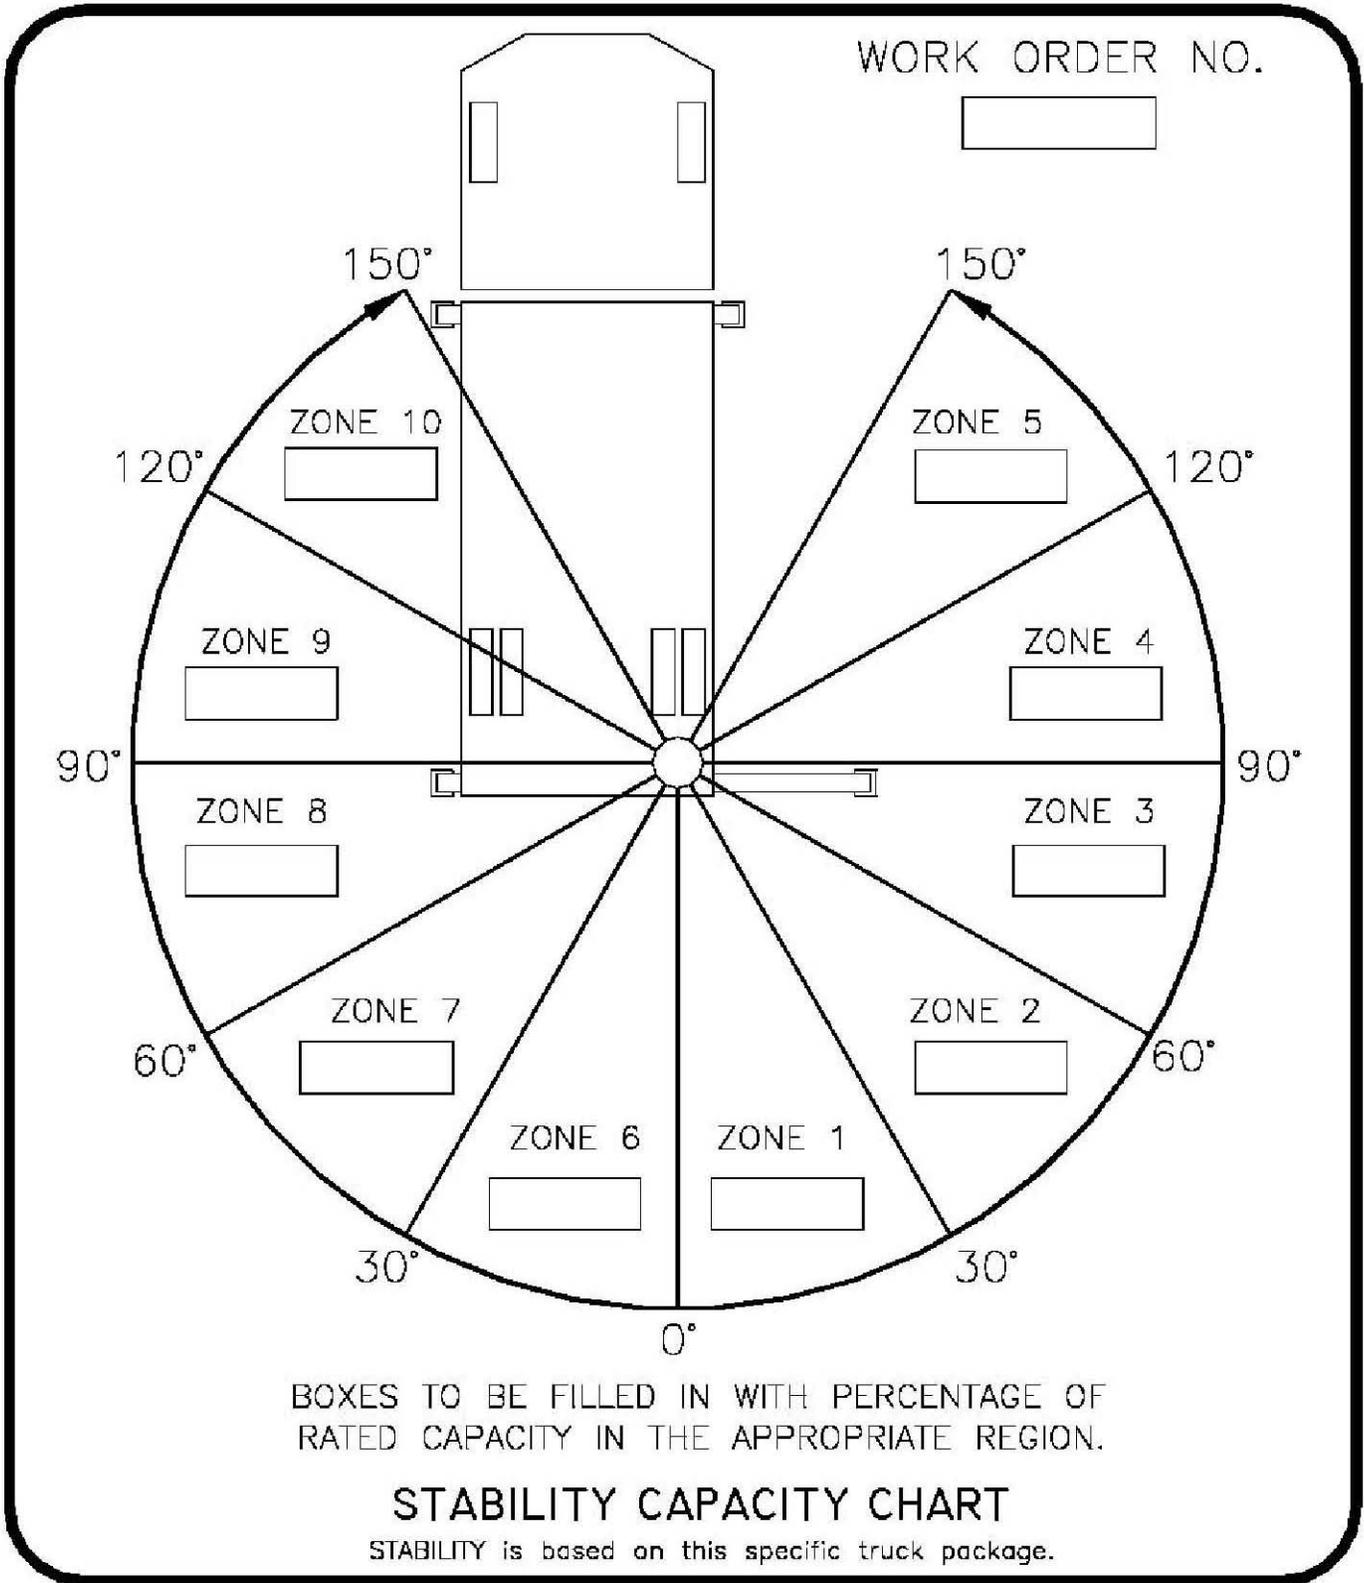


# Chapter 7 - Assembly Drawings

## Base Assembly

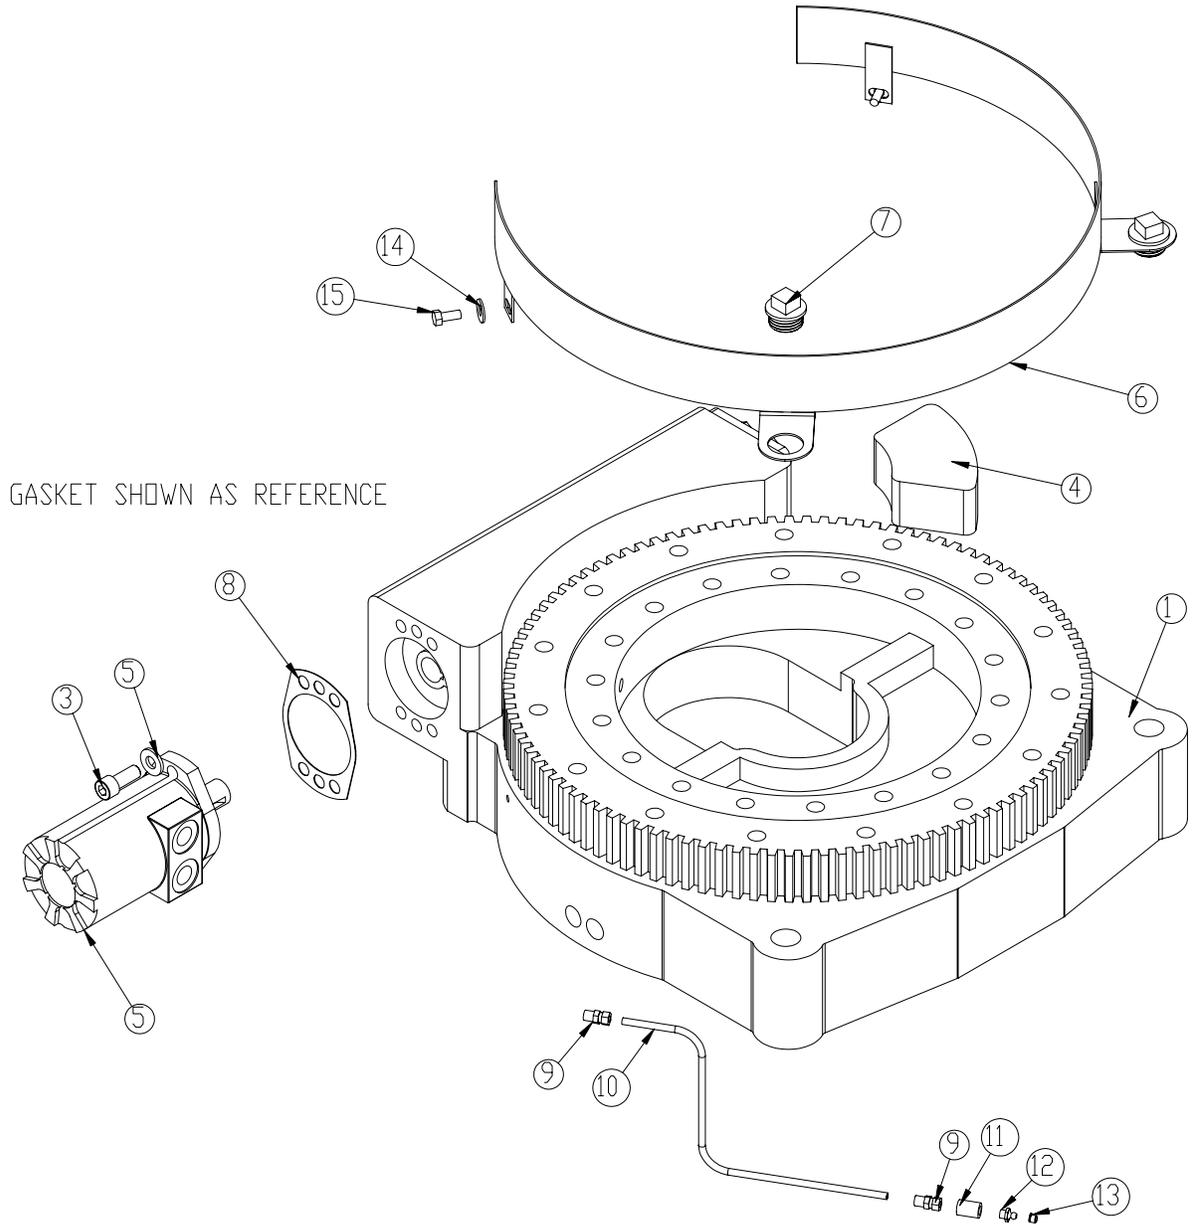


ITEM	PART	DESCRIPTION	QTY.	ITEM	PART	DESCRIPTION	QTY.
1	25140	BEARING SWING DRIVE CAST BASE 14528	1	9	D1345	FTG CPRSN 0.12NPT/0.25 TUBE	2
2	D0790	WASHER 0.50 FLAT GR8	2	10	D1810	TBE AIR SAEJ844 TYPE A .25	1
3	D1295	CAP SCR 0.50-13X1.50 SH	2	11	C2256	FTG COUPLER PIPE 0.13	1
4	26207	STOP 14528 400 SLIDE	1	12	c1592	ZERK 1/8 NPT STRAIGHT	1
5	26206P	MOTOR HYD ROSS GKS200	1	13	C4808	CAP PLASTIC (RED)	1
6	24558	GUARD TTB 14528 CRANE	1	14	0343	WASHER 0.31 USS FLAT ZINC	2
7	26774	CAP SCR 1.25-7X0.63 PLASTIC	2	15	0420	CAP SCR 0.31-18X0.75 HHGR5	2
8	21151	GASKET MOTOR 008-10056-1	1				

# Mast Assembly

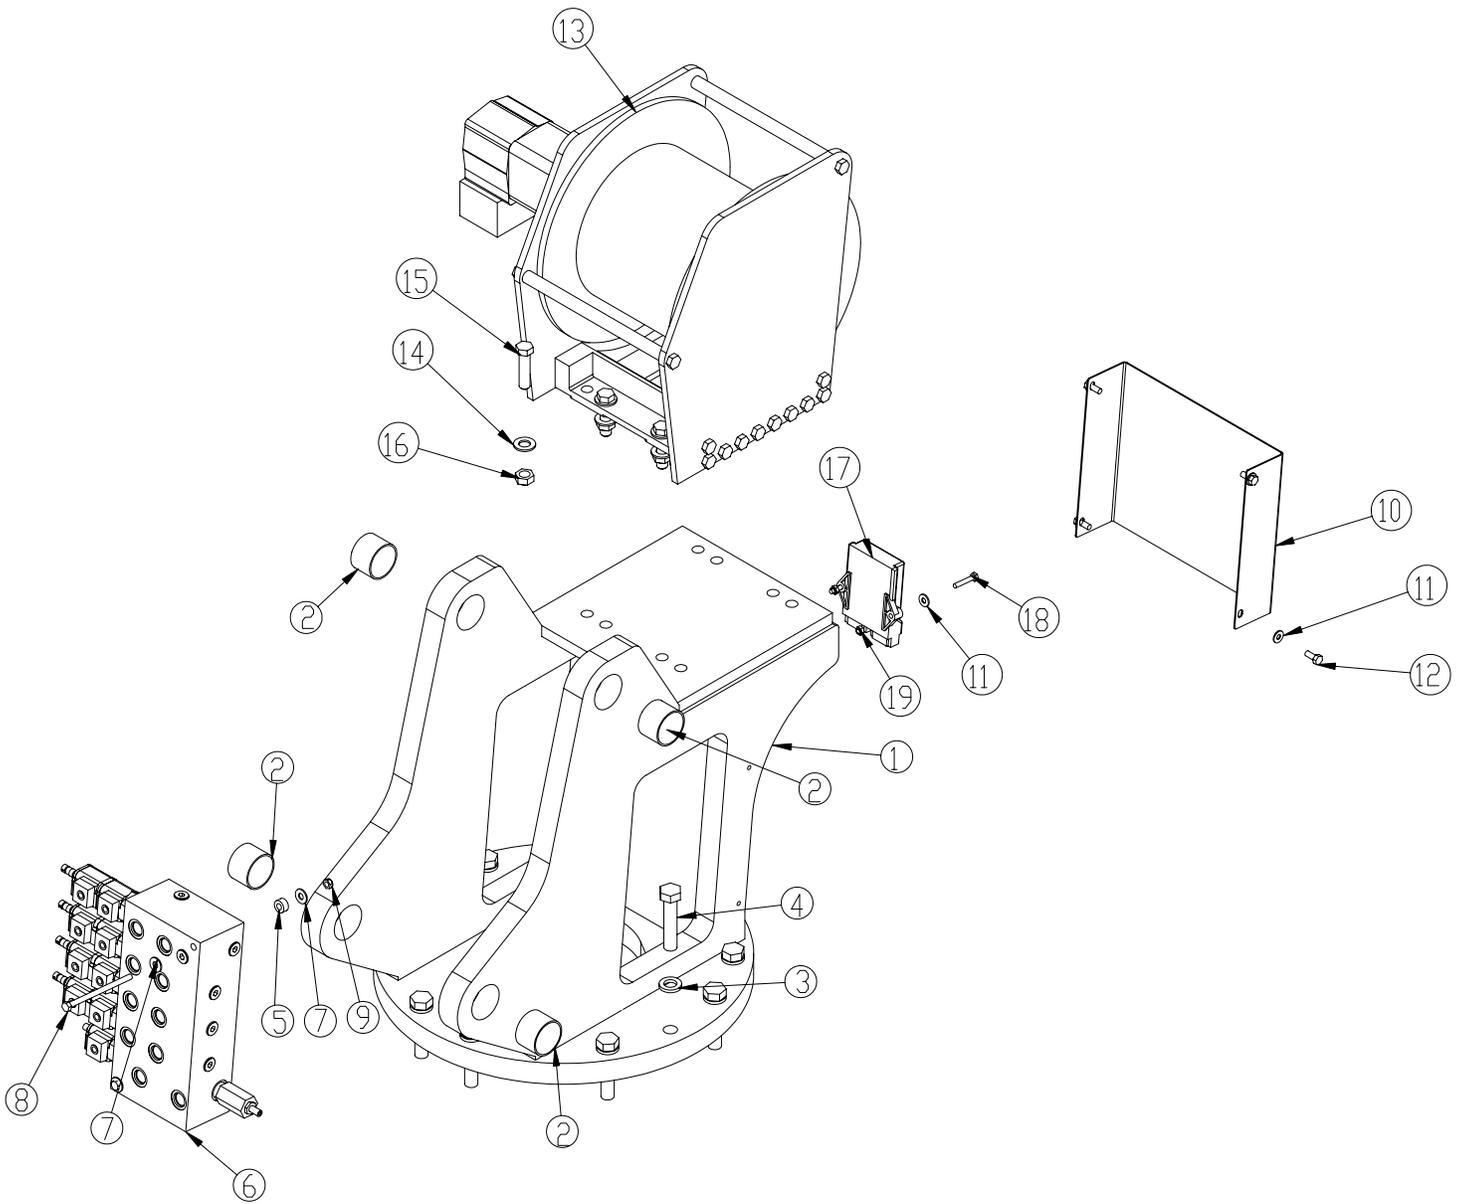


ITEM	PART	DESCRIPTION	QTY.	ITEM	PART	DESCRIPTION	QTY.
1	24548	MAST 14528	1	11	0340	WASHER 0.25 FLAT	6
2	4380	BUSHING 32DXR24 2.00X1.50 GARLOCK	4	12	0420	CAP SCR 0.31-18X0.75 HHGR5	4
3	C6219	WASHER 0.75 SAE FLAT YELLOW GR8	13	13	26775P	WINCH 7000 TULSA 707W	1
4	4975	CAP SCR 0.75-10X3.50 HHGR8 ZY	13	14	C5902	WASHER 0.63 SAE FLAT YELLOW GR8	8
5	29567	COLLAR 0.38X0.69X0.75	4	15	D1034	CAP SCR 0.63-11X3.00 HHGR8 ZY	8
6	26209	VB 4 SECT ELECT W/PROP STERLING12GPM	1	16	24868	NUT 0.63-11 HH NYLOC	8
7	0343	WASHER 0.31 USS FLAT ZINC	4	17	28836	RECEIVER RADIO CONTROL 6 FCTN OMNEX	1
8	C0934	CAP SCR 0.31-18X5.00 HHGR5	2	18	0220	CAP SCR 0.25-20 X 1.50 HHGR5	2
9	0342	NUT 0.31-18 HH NYLOC	2	19	0333	NUT 0.25-20 HHGR5 NYLOC	2
10	26210	COVER 14528 MAST	1				

# Main Boom (Before 9-1-05)

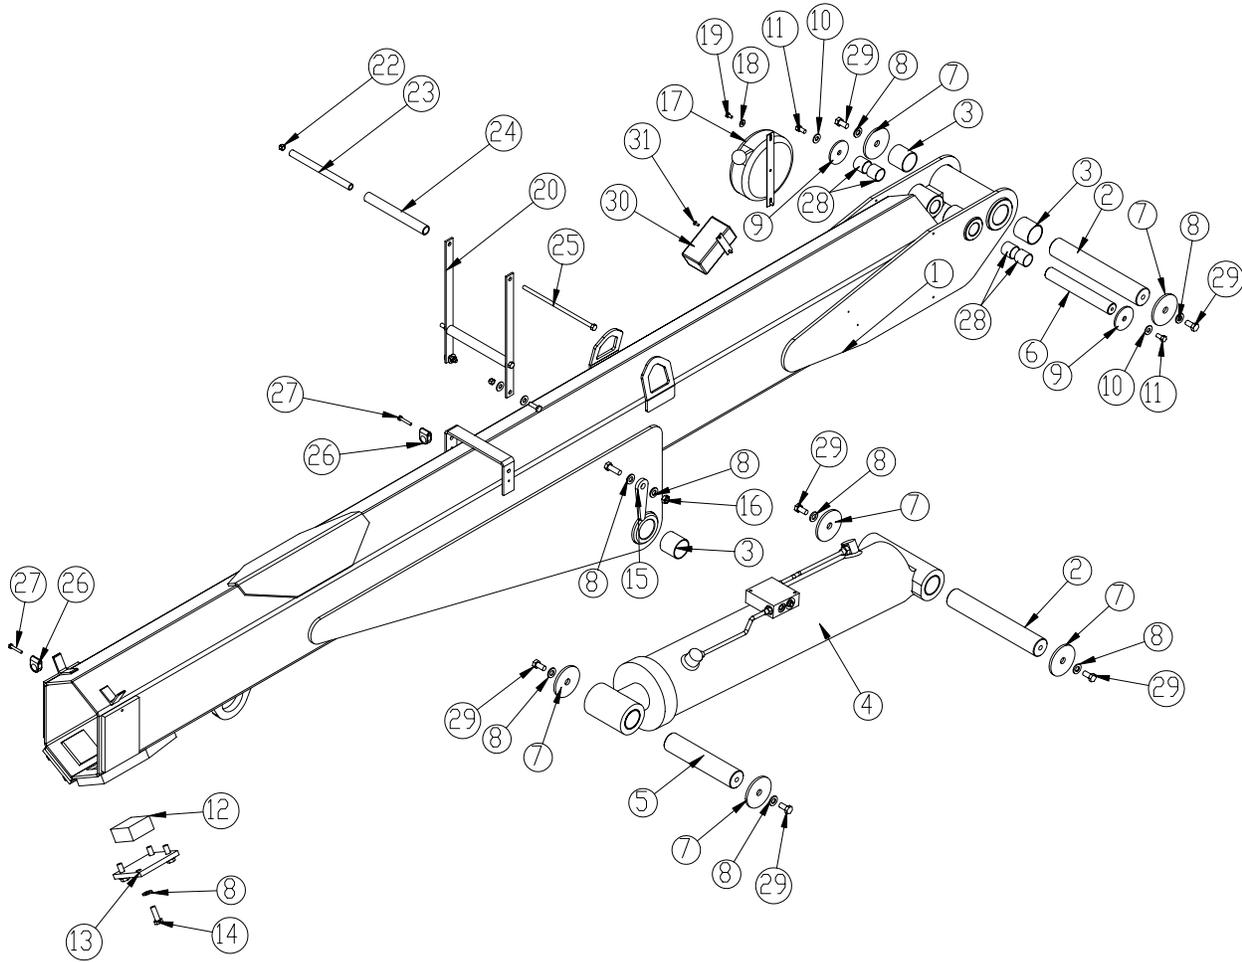


ITEM	PART	DESCRIPTION	QTY.	ITEM	PART	DESCRIPTION	QTY.
1	24392	BOOM INNER 14528	1	17	19166	CORD REEL 5728	1
2	13364	PIN 2.00X12.69 D&T	2	18	0340	WASHER 0.25 FLAT	2
3	4381	BUSHING 32DXR32 2.00X2.00 GARLOCK	4	19	0478	CAP SCR 0.25-20X0.50 HHGR5	2
4	26197	CYLINDER ASM 14528 INNER	1	20	26752	BRKT ROPE GUIDE 9620	2
5	26213	PIN 2.00X9.63 D&T	1	21	0335	CAP SCR 0.38-16X1.25 HHGR5	2
6	26214	PIN 1.25X9.19 D&T	1	22	0347	NUT 0.38-16 HH NYLOC	4
7	8377	PIN CAP 0.56X3.50X0.25 SS	6	23	26753	SPACER ROPE GUIDE 14528	2
8	D0790	WASHER 0.50 FLAT GR8	18	24	26754	PIPE 0.75X8.50 PVC	2
9	7403	PIN CAP 0.44X2.50X.252	2	25	26755	CAP SCR 0.38-16X10.00 HHGR5	2
10	C6353	WASHER 0.38 FLAT GR8	6	26	0337	HOSE CLAMP LN 4190 PP	2
11	9843	CAP SCR 0.38-16X0.75 HHGR8	2	27	0220	CAP SCR 0.25-20 X 1.50 HHGR5	2
12	26215	WEAR PAD 3.00X3.00X1.50	2	28	0249	BUSHING QSI-2022-20 1.25X1.25	4
13	26751	PLATE WEAR PAD SUPPORT 14528	2	29	10172	CAP SCR 0.50-13X1.00 HHGR8 ZY	6
14	10548	CAP SCR 0.50-13X1.50 HHGR8	8	30	28833	LOAD MOMENT INDICATOR CERG	1
15	D1194	PLATE ANGLE INDICATOR	2	31	D1711	CAP SCR #10-24X0.50 BTNHD SS	2
16	C6106	NUT 0.50-13 HHGR5 NYLOC	2				

# Main Boom (After 9-1-05)

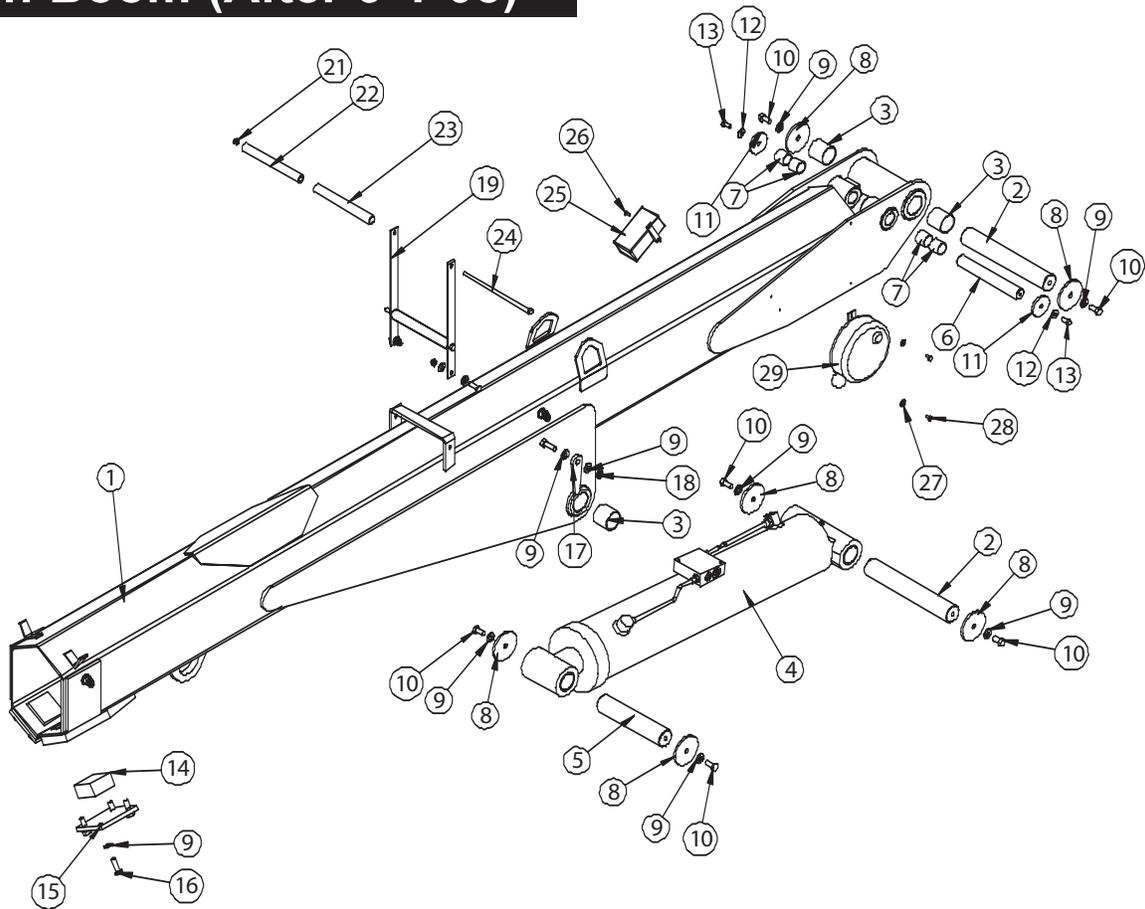


ITEM	PART	DESCRIPTION	QTY.
1	34772	BOOM INNER 14528	1
2	13364	PIN 2.00X 12.69 D&T	2
3	4381	BUSHING 32DXR32 2.00X 2.00 GARLOCK	4
4	26197	CYLINDER ASM 14528 INNER	1
5	26213	PIN 2.00X 9.63 D&T	1
6	26214	PIN 1.25X 9.19 D&T	1
7	0249	BUSHING QSI-2022-20 1.25X 1.25	4
8	8377	PIN CAP 0.56X 3.50X .25	6
9	D0790	WASHER 0.50 FLAT GR8	18
10	10172	CAP SCR 0.50-13X 1.00 HHGR8 ZY	6
11	7403	PIN CAP 0.44X 2.50X .252	2
12	C6353	WASHER 0.38 FLAT GR8	6
13	9843	CAP SCR 0.38-16X 0.75 HHGR8	2
14	26215	WEAR PAD 3.00X 3.00X 1.50	2
15	26751	PLATE WEAR PAD SUPPORT 14528	2
16	10548	CAP SCR 0.50-13X 1.50 HHGR8	8
17	D1194	PLATE ANGLE INDICATOR	2
18	C6106	NUT 0.50-13 HHGR5 NYLOC	2
19	26752	BRKT ROPE GUIDE 14528	2
20	0335	CAP SCR 0.38-16X 1.25 HHGR5	2
21	0347	NUT 0.38-16 HH NYLOC	4
22	26753	SPACER ROPE GUIDE 14528 UHMW	2
23	26754	PIPE 0.75X 8.50 PVC	2
24	26755	CAP SCR 0.38-16X 10.00 HHGR5	2
25	28833	LOAD MOMENT INDICATOR CERG	1
26	D1711	CAP SCR #10-24X 0.50 BTNHD SS	2
27	0340	WASHER 0.25 FLAT	2
28	0478	CAP SCR 0.25-20X 0.50 HHGR5	2
29	19166	CORD REEL 5728	1

# Extension Boom Assembly (Before 9-1-05)

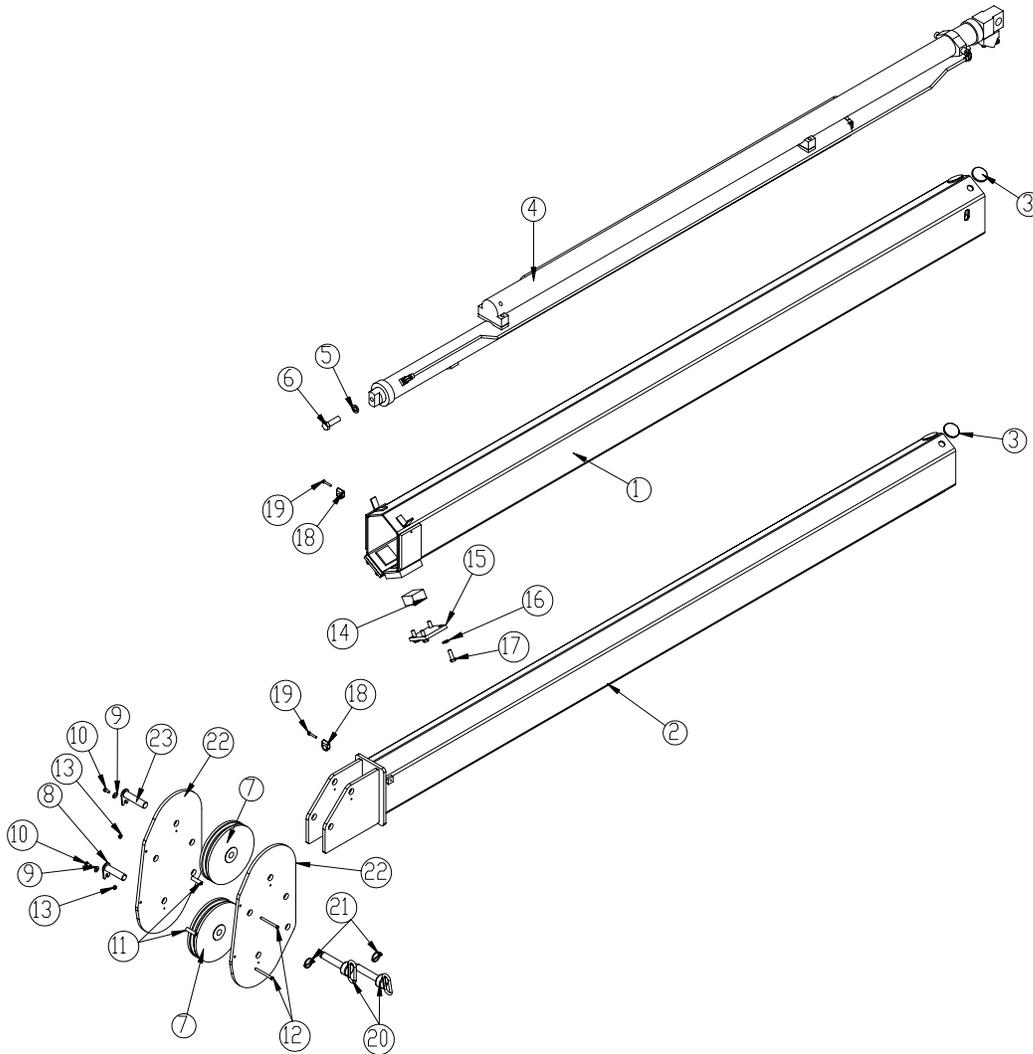


ITEM	PART	DESCRIPTION	QTY.	ITEM	PART	DESCRIPTION	QTY.
1	24395	EXT BOOM 1ST 14528	1	13	0342	NUT 0.31-18 HH NYLOC	2
2	24400	BOOM 2ND EXT 14528	1	14	26758	WEAR PAD 2.50X2.50X1.50 NYLATRON	2
3	9991	WEAR PAD 0.25X2.00 RND NYLATRON	4	15	26759	PLATE WEAR PAD SUPPORT 14528	2
4	26756	CYLINDER ASM 14528 EXT	1	16	D0790	WASHER 0.50 FLAT GR8	8
5	C6219	WASHER 0.75 SAE FLAT YELLOW GR8	1	17	10548	CAP SCR 0.50-13X1.50 HHGR8	8
6	4974	CAP SCR 0.75-10X2.50 HHGR8 ZY	1	18	0337	HOSE CLAMP LN 4190 PP	2
7	24557	SHEAVE 14528 10.00 DIA .50R/1.94 THK	2	19	0220	CAP SCR 0.25-20 X 1.50 HHGR5	2
8	13399	PIN TEAR DROP 1.00X3.81	1	20	12824	PIN HITCH 1.00X4.50	2
9	0343	WASHER 0.31 USS FLAT ZINC	2	21	5753	PIN 0.19X1.56 LYNCH	2
10	0420	CAP SCR 0.31-18X0.75 HHGR5	2	22	24556	PLATE SHEAVE MOUNTING 14528	2
11	11936	SPACER BOOM TIP 3820	2	23	13400	PIN TEAR DROP 1.00X4.38	1
12	0490	CAP SCR 0.31-18X3.50 HHGR5	2				

# Extension Boom Assembly (After 9-1-05)

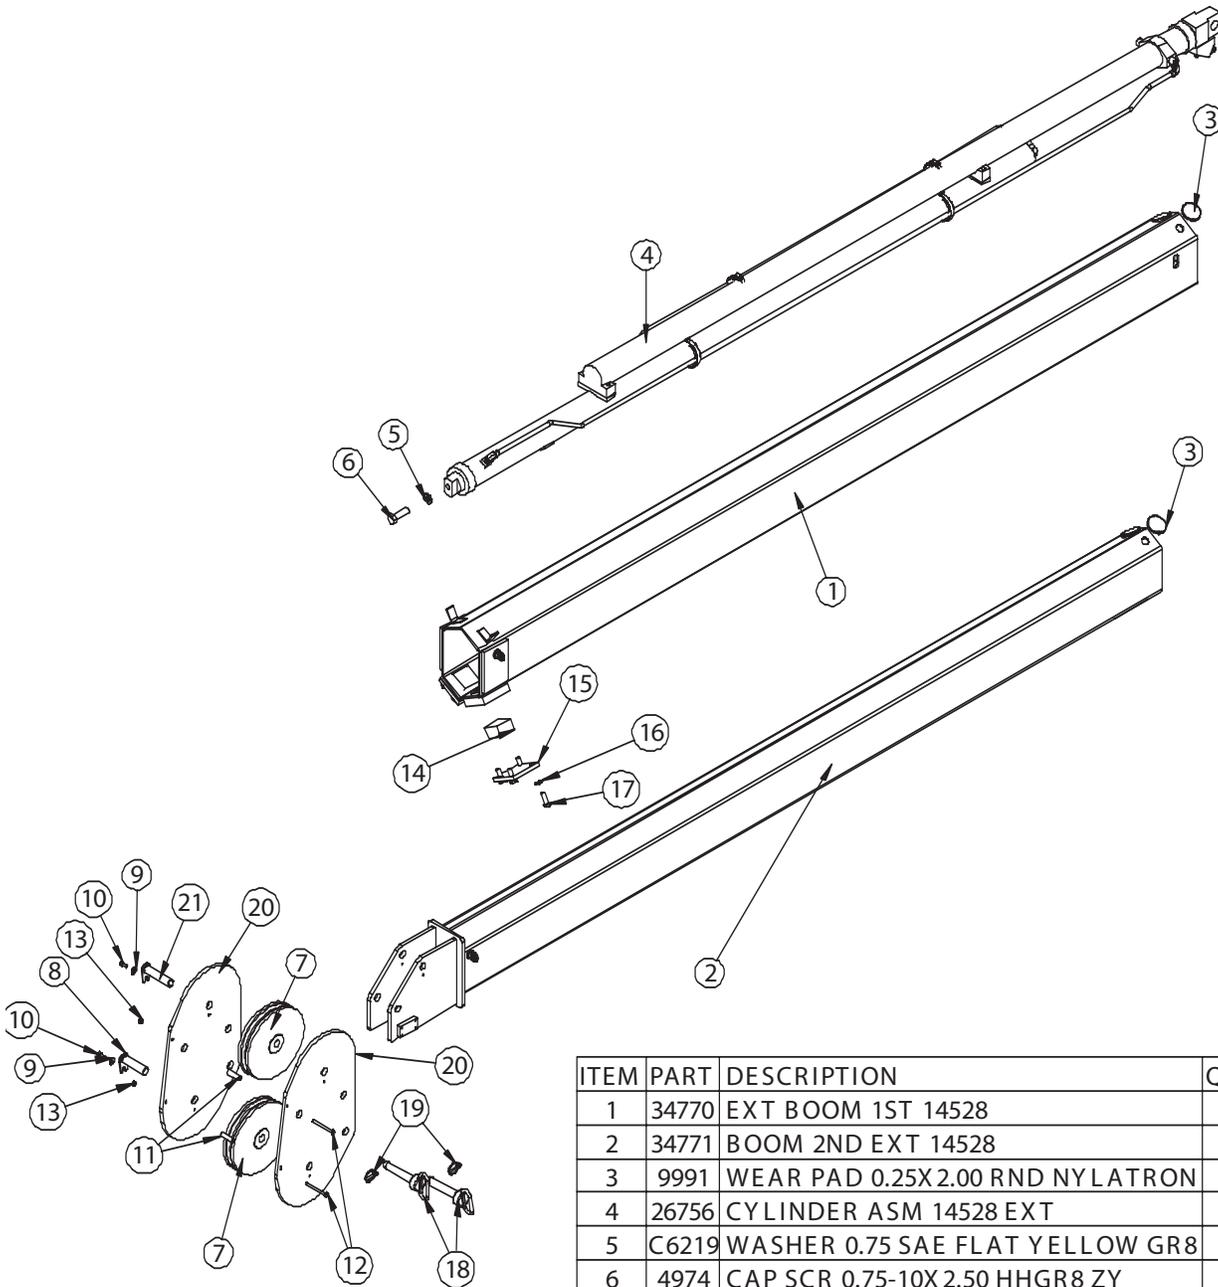

ITEM	PART	DESCRIPTION	QTY.
1	34770	EXT BOOM 1ST 14528	1
2	34771	BOOM 2ND EXT 14528	1
3	9991	WEAR PAD 0.25X2.00 RND NYLATRON	4
4	26756	CYLINDER ASM 14528 EXT	1
5	C6219	WASHER 0.75 SAE FLAT YELLOW GR8	1
6	4974	CAP SCR 0.75-10X2.50 HHGR8 ZY	1
7	24557	SHEAVE 14528 10.00 DIA .50R/1.94 THK	2
8	13399	PIN TEAR DROP 1.00X3.81	1
9	0343	WASHER 0.31 USS FLAT ZINC	2
10	0420	CAP SCR 0.31-18X0.75 HHGR5	2
11	27719	SPACER BOOM TIP 6620 UHMW	2
12	0490	CAP SCR 0.31-18X3.50 HHGR5	2
13	0342	NUT 0.31-18 HH NYLOC	2
14	26758	WEAR PAD 2.50X2.50X1.50 NYLATRON	2
15	26759	PLATE WEAR PAD SUPPORT 14528	2
16	D0790	WASHER 0.50 FLAT GR8	8
17	10548	CAP SCR 0.50-13X1.50 HHGR8	8
18	12824	PIN HITCH 1.00X4.50	2
19	5753	PIN 0.19X1.56 LYNCH	2
20	24556	PLATE SHEAVE MOUNTING 14528	2
21	13400	PIN TEAR DROP 1.00X4.38	1


# Main Cylinder Assembly

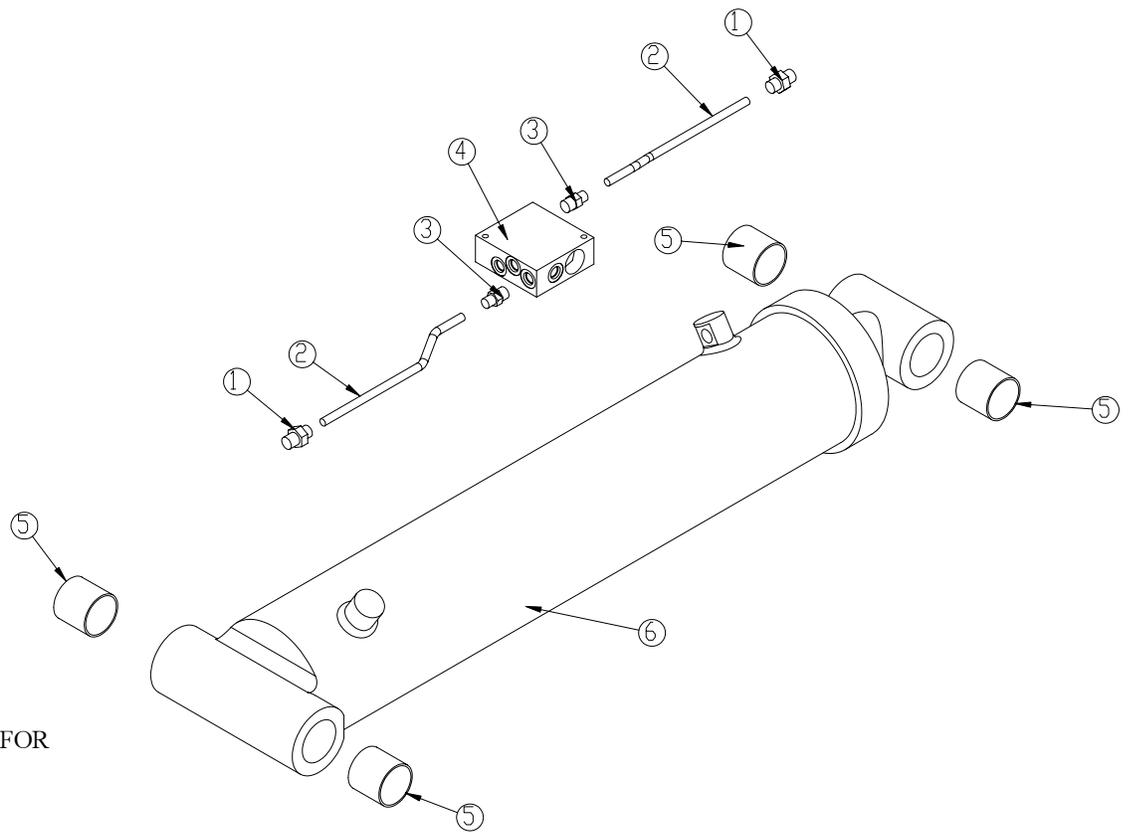

\*CYLINDER BUSHINGS FOR REFERENCE ONLY


ITEM	PART	DESCRIPTION	QTY.
1	C1854	FTG ADAPT 6-8 F5OLO-S	2
2	26212	TUBE ASM 0.38X9.88 MAIN CYL 6620	2
3	0279	FTG ADAPT 6-F5OLO-S	2
4	16154	MANIFOLD DOUBLE T11A 3500 PSI	1
5	0066	BUSHING QSI-3235-32	4
6	26198P	CYLINDER INNER 6.00X25.75	1

# Cylinder Extension Assembly

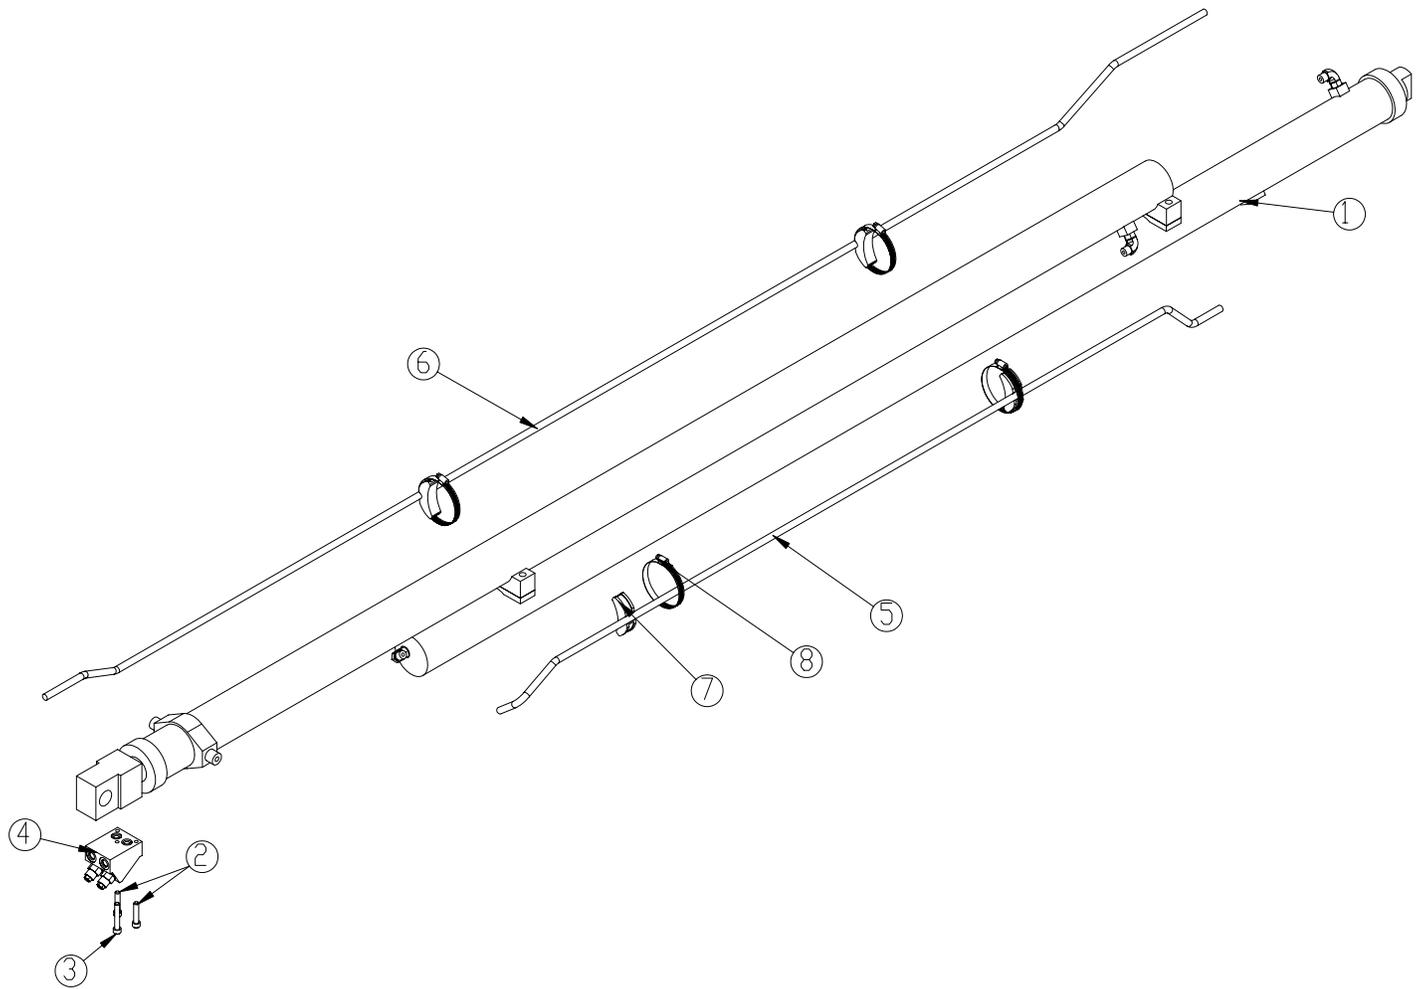


ITEM	PART	DESCRIPTION	QTY.
1	24703	CYLINDER EXT 14528 2 STAGE 3.0/3.0	1
2	11882	CAP SCR 0.38-16X1.75 SH ZC	2
3	14601	CAP SCR 0.38-16X2.25 SH ZC	1
4	28840	MANIFOLD ASM14528 EXT CBBB-LJN-XVO	1
5	28842	TUBE ASM 0.50 X 72.69 EXT CYL 14528	1
6	28843	TUBE ASM 0.50X 119.75 EXT CYL 14528	1
7	18701	CLAMP PORT TUBE ZR518	4
8	24729	HOSE CLAMP #52 3.00 - 3.75	4

# Cable & Hook Assembly (Before 9-1-05)

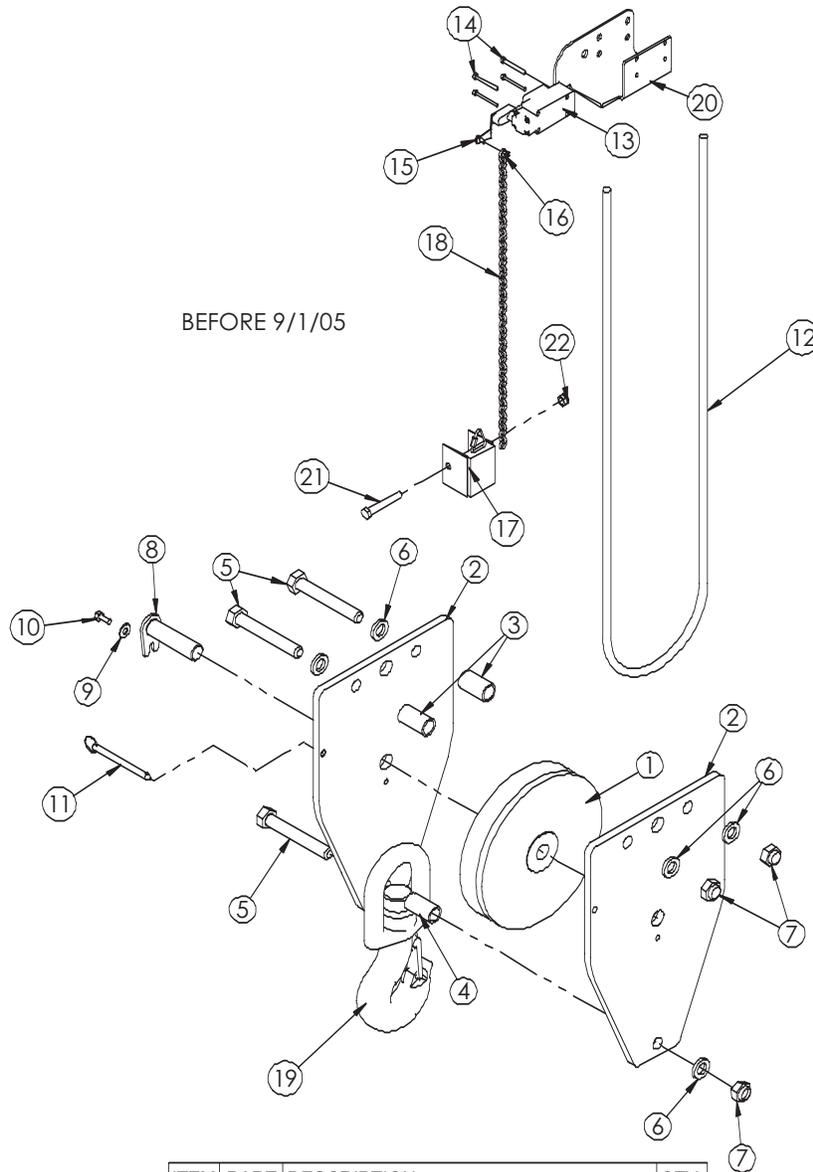

ITEM	PART	DESCRIPTION	QTY.
1	24557	SHEAVE 14528 10.00 DIA .50R/1.94 THK	1
2	24559	PLATE SNATCH BLOCK 14528	2
3	27811	SPACER 9620 SNATCH BLOCK UHMW	2
4	13394	SPACER 9620 SNATCH BLOCK	1
5	C1030	CAP SCR 0.75-10X5.00 HHGR8	3
6	C6219	WASHER 0.75 SAE FLAT YELLOW GR8	6
7	C0538	NUT 0.75-10 HHGR8 NYLOC	3
8	13399	PIN TEAR DROP 1.00X3.81	1
9	0343	WASHER 0.31 USS FLAT ZINC	1
10	0420	CAP SCR 0.31-18X0.75 HHGR5	1
11	13436	PIN .38X4.00 QUICK RELEASE	1
12	26761	WIRE ROPE .50 6X19 IWRC-XIP 120FT	1
13	11938	SWITCH LIMIT A2B FURNAS 3SE3170	1
14	33749	SCREW #10-24X1.75 SHGR8 ZINC	4
15	D1711	CAP SCR #10-24X0.50 BTNHD SS	1
16	C4956	NUT #10-24 HH NYLOC SS	1
17	19994	WEIGHT 3315 ATB	1
18	18454	Chain 0.105 X 19.00	1
19	26762	HOOK 7 TON SWIVEL CROSBY 1028632	1
20	33081	COVER ANTI 2 BLOCK	1
21	0530	CAP SCR 0.38-16X2.75 HHGR5	1
22	0347	NUT 0.38-16 HH NYLOC	1


# Cable & Hook Assembly (After 9-1-05)

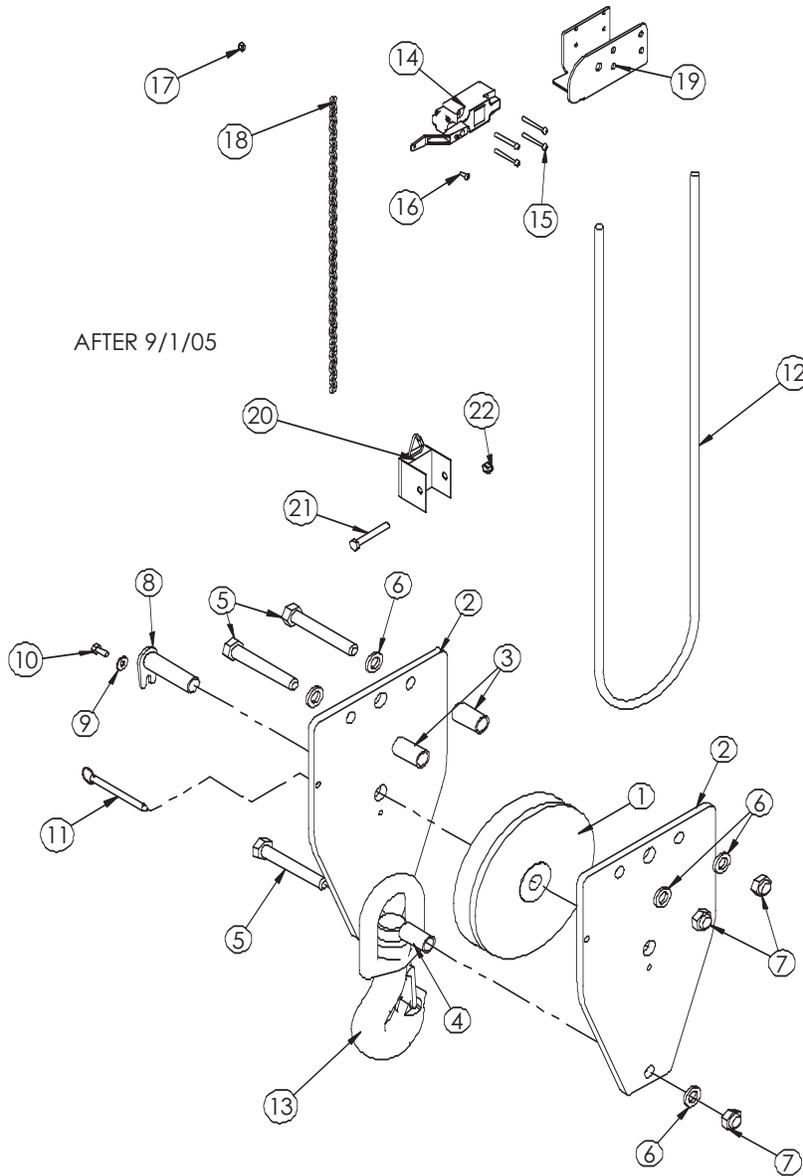


AFTER 9/1/05

ITEM	PART	DESCRIPTION	QTY.
1	24557	SHEAVE 14528 10.00 DIA .50R/1.94 THK	1
2	24559	PLATE SNATCH BLOCK 14528	2
3	27811	SPACER 9620 SNATCH BLOCK UHMW	2
4	13394	SPACER 9620 SNATCH BLOCK	1
5	C1030	CAP SCR 0.75-10X5.00 HHGR8	3
6	C6219	WASHER 0.75 SAE FLAT YELLOW GR8	6
7	C0538	NUT 0.75-10 HHGR8 NYLOC	3
8	13399	PIN TEAR DROP 1.00X3.81	1
9	0343	WASHER 0.31 USS FLAT ZINC	1
10	0420	CAP SCR 0.31-18X0.75 HHGR5	1
11	13436	PIN .38X4.00 QUICK RELEASE	1
12	26761	WIRE ROPE .50 6X19 IWRC-XIP 120FT	1
13	26762	HOOK 7 TON SWIVEL CROSBY 1028632	1
14	11938	SWITCH LIMIT A2B FURNAS 3SE3170	1
15	33749	SCREW #10-24X1.75 SHGR8 ZINC	4
16	D1711	CAP SCR #10-24X0.50 BTNHD SS	1
17	C4956	NUT #10-24 HH NYLOC SS	1
18	18454	Chain 0.105 X 19.00	1
19	34354	ANTI 2 BLOCK COVER LH	1
20	19994	WEIGHT 3315 ATB	1
21	0530	CAP SCR 0.38-16X2.75 HHGR5	1
22	0347	NUT 0.38-16 HH NYLOC	1

## WIRE ROPE / SHEAVE CONFIGURATIONS

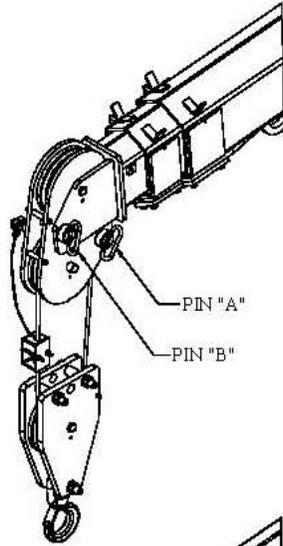


STANDARD 2 PART LINE  
SHEAVE FLIPPED DOWN  
CAPACITIES AS SHOWN ON  
LOAD CHART

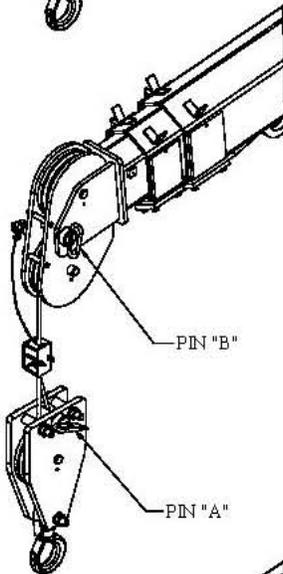

SINGLE PART LINE  
SHEAVE FLIPPED DOWN






- 1.) REMOVE PIN A FROM BOOM TIP
- 2.) ROUTE WIRE ROPE THROUGH SNATCH BLOCK
- 3.) PIN WIRE ROPE TO SNATCH BLOCK AS SHOWN WITH PIN "A"

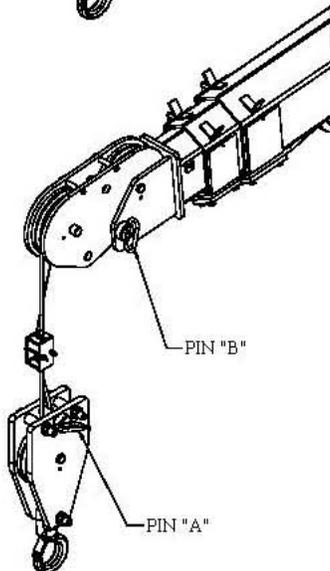

SINGLE PART LINE  
SHEAVE FLIPPED UP

- 1.) REMOVE PIN B
- 2.) FLIP SHEAVE
- 3.) INSERT PIN B WITH SHEAVE IN UP POSITION


# Chapter 8 - Hydraulics - Electrical

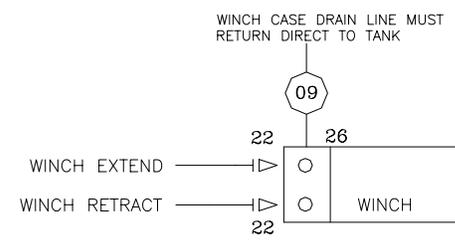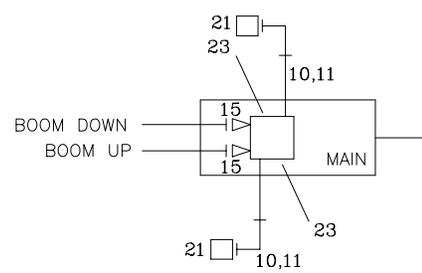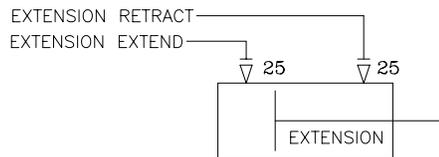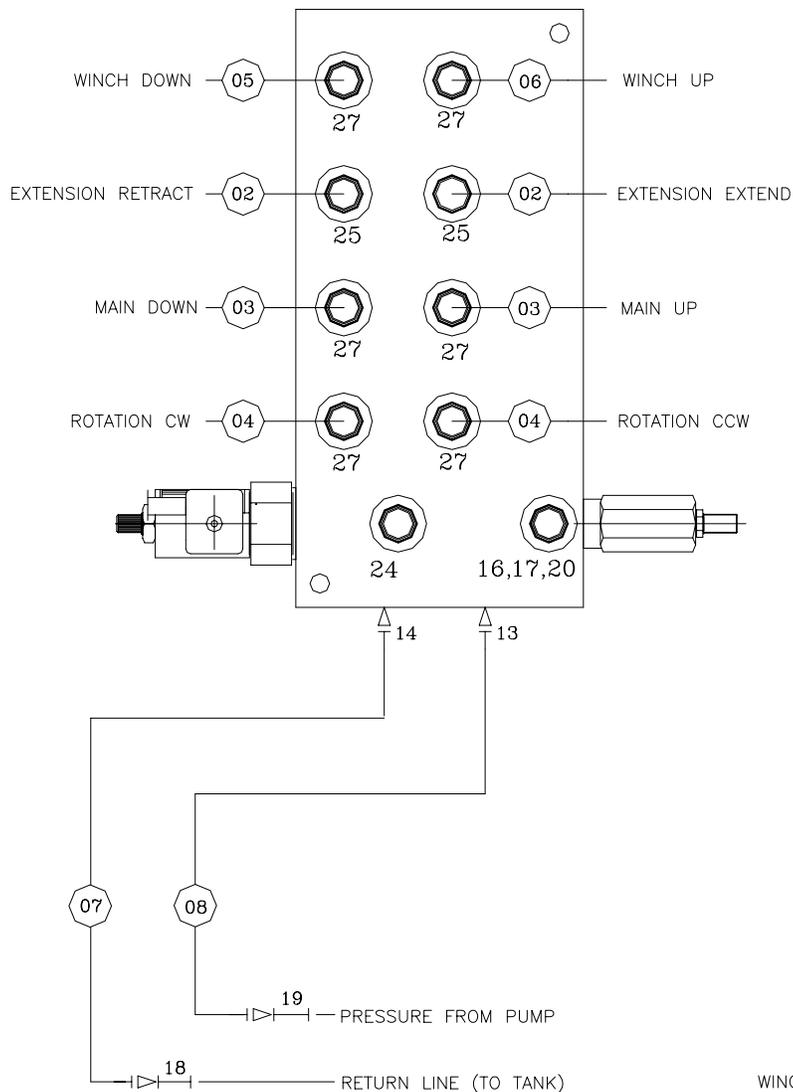

14	14354	FTG MF/MSTR 90 12-10 C50LO-S	1	28			
13	C1175	FTG ADAPT 8 V50LO-S	1	27	C1854	FTG ADAPT 6-8 F50LO-S	6
12	D1302	FTG ST TH ELB 90 DEG 6-10 C50LO	2	26	D1291	FTG ADAPT 4-F50LO-S	1
11	3861	FTG ML FM O-RING 90 DEG	2	25	1554	FTG ADAPT 8-F50LO-S	4
10	15111	FTG ADAPT MSTH/FSTH 6-4-F50G5	2	24	D1535	PLUG STR HOLLOW HEX 0.50 8-HP50N	1
09	31058	HOSE-HYD .25 X 64	1ref	23	9803	VALVE C-BAL	2REF
08	25022	HOSE-HYD .50 X 5	1ref	22	C4227	FTG MF/MSTR 90 8-12 C50LO-S	2
07	28484	HOSE-HYD .75 X 5	1ref	21	28485	TRANSDUCER PRESSURE 5000 PSI	2
06	28483	HOSE-HYD .38 X 26	1ref	20	12159	FTG ADAPT O-RING FMP 8-1/4 F50G-S	1
05	28482	HOSE-HYD .38 X19	1ref	19	12172	FTG SWIVEL 0.50 FS/FS PS81 JMJM-8-8	1
04	28481	HOSE-HYD .38 X 40	2ref	18	28383	FTG SWIVEL 0.75 FS/FS PS81 JMJM-12-12	1
03	28385	HOSE-HYD .38 X30	2ref	17	6397	GAUGE OIL LF 2.5" 0-5000 CBM	1
02	28384	HOSE-HYD .50 X 20	2ref	16	C5908	FTG 0.25 ML ELL	1
01	24553	HOSE KIT,14528 CRANE (incl:2-11)	1	15	0279	FTG ADAPT 6 F50LO-S	2
ITEM	PART No.	DESCRIPTION	QTY	ITEM	PART No.	DESCRIPTION	QTY

# Valve Bank

**P/N 26209**

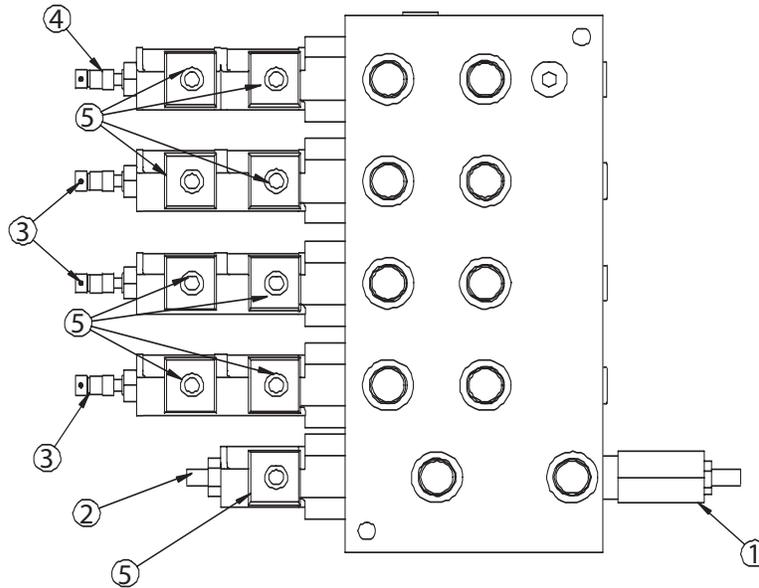


## Valve Identification


Valve Item #3 P/N 31077-G0657A1

Valve Item #4 P/N 31078-G06591


ITEM	PART	DESCRIPTION	QTY
1	31075	RELIEF VALVE 26209	1
	25368	SEAL KIT 25367	
2	31076	VALVE FLW CTRL PRP/JP06C3150N 0-12	1
	31080	SEAL KIT 31076	
3	31077	VALVE SOLND 3 POS 4 WAY TAND G06571	3
4	31078	VALVE SOLND 3 POS 4 WAY OPEN G06591	1
	31526	SEAL KIT 31077/31078	
5	25370	COIL 12VDC PACKARD MALE 24685/24690	9

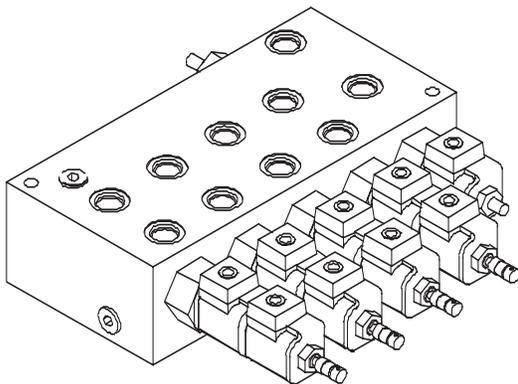

HYDRAULIC SCHEMATIC

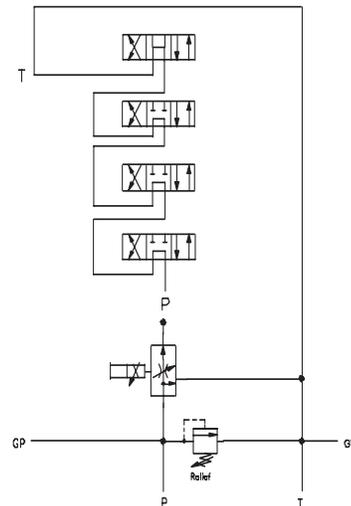


# Control Kit

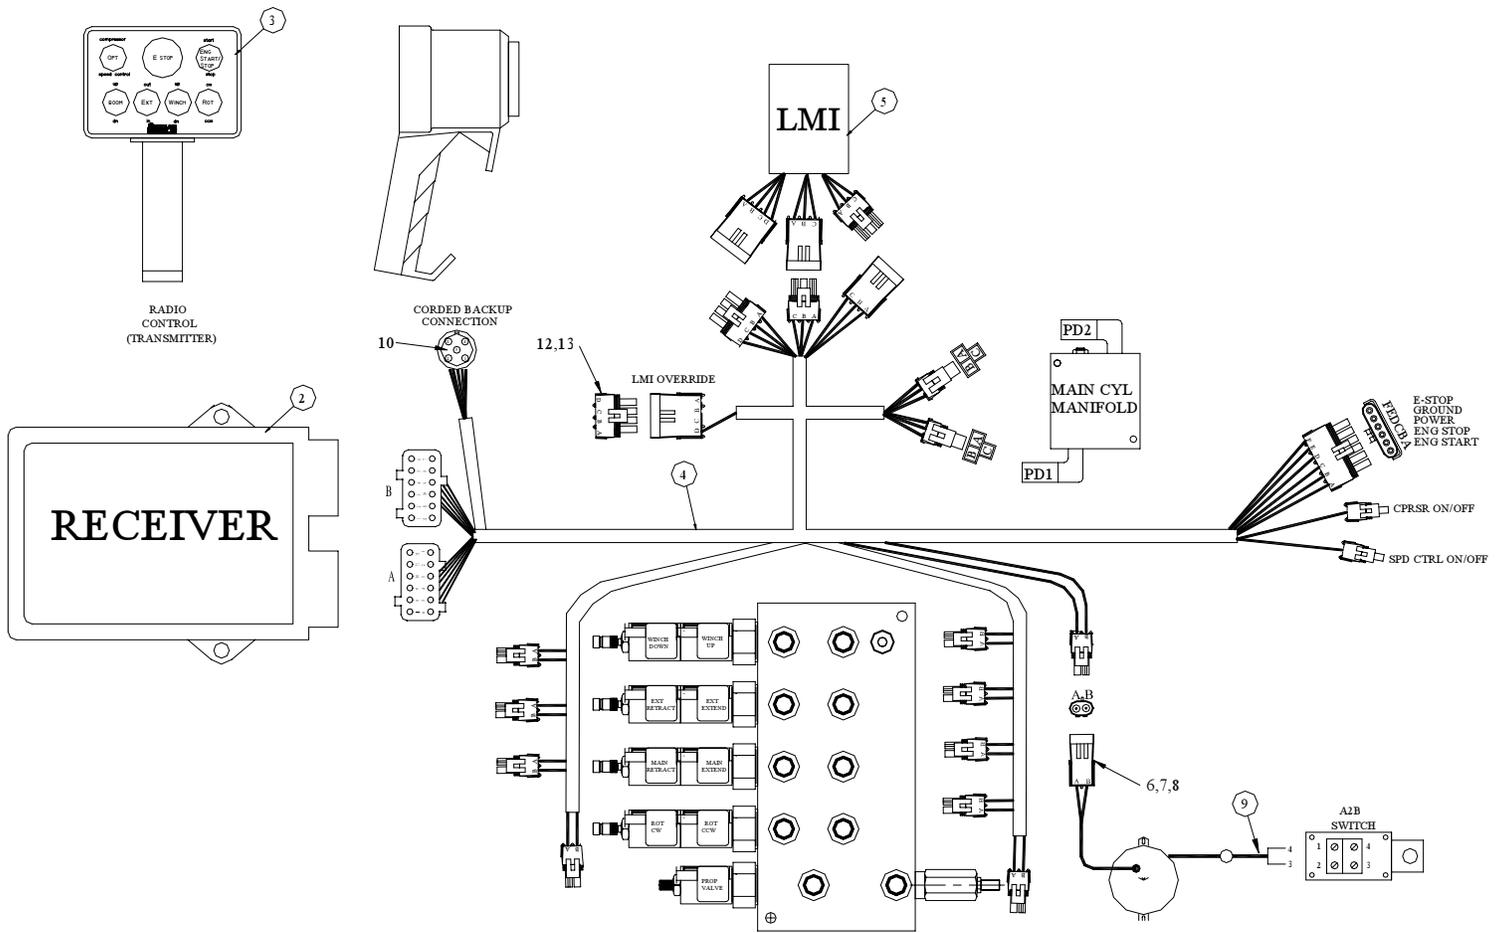

14			
13	9757	PLUG CAVITY 39010 PACKARD	4
12	8385	CONNECT 4 PIN TOWER PACKARD	1
11	28832	CABLE BACKUP OMNEX RADIO	1
10	18611	SCREW #6-32X0.38 HH MACH SELF TAP	1
09	10965	CABLE GROMMET	1
08	10978	CONTACT M/TERM SHROUD	2
07	8384	CABLE SEAL	2
06	9752	CONNECT 2 PIN SHROUD	1
05	28833	LOAD MOMENT INDICATOR 14528	1
04	28495	WIRE HARNESS RADIO/VB	1
03	28837	TRANSMITTER - RADIO (PART OF 1)	REF
02	28836	RECEIVER - RADIO (PART OF 1)	REF
01	28831	RADIO CONTROLLER ASSEMBLY	1
ITEM	PART No.	DESCRIPTION	QTY

# Hydraulic System

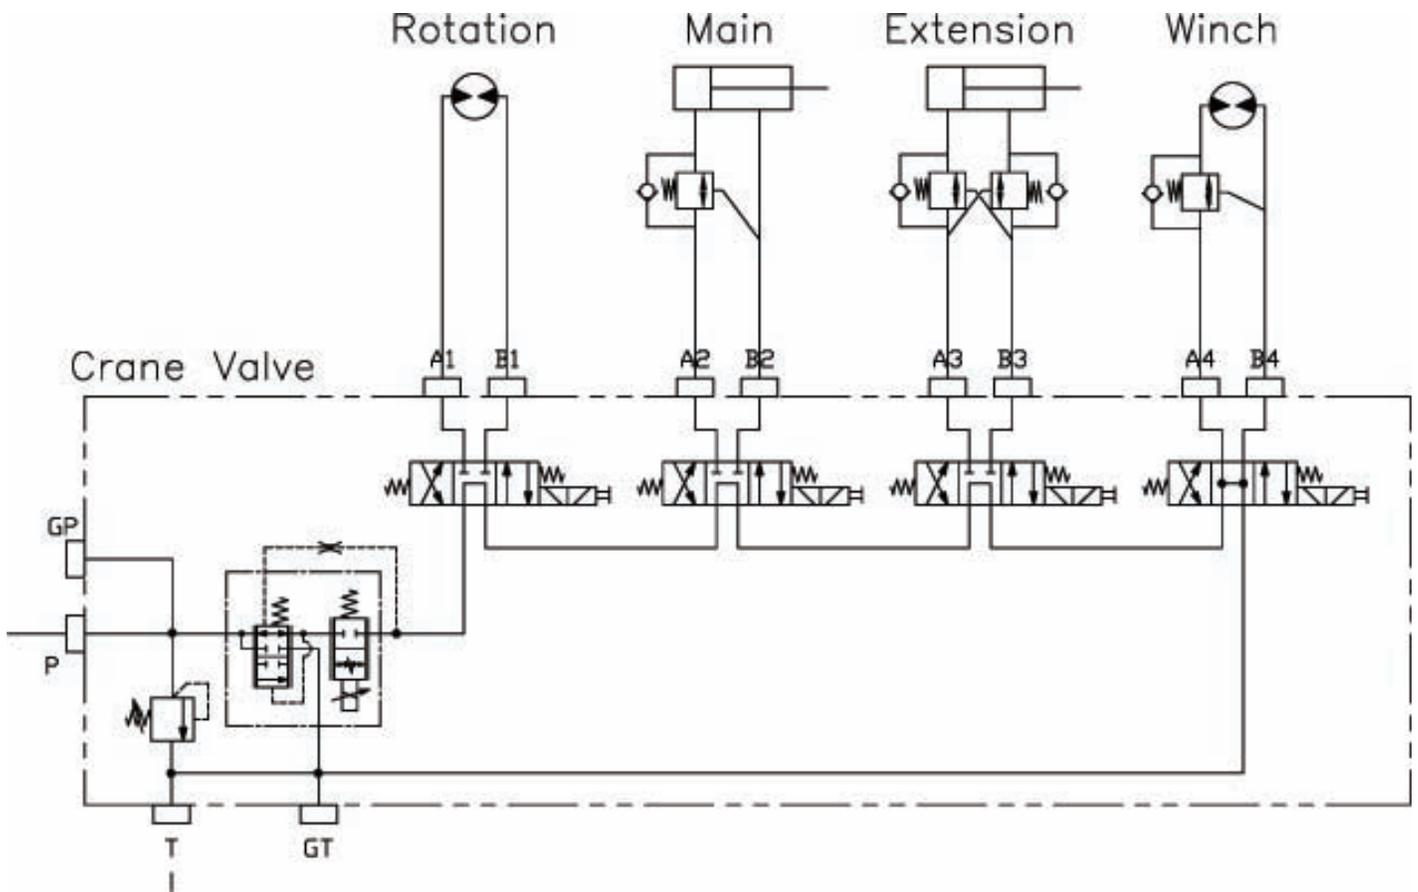

# Chapter 9 - Replacement Parts

PART#	DESCRIPTION	SUGGESTED QTY
C6069	HYDRAULIC SWING MOTOR	1
25367	RELIEF VALVE	1
25368	SEAL KIT - RELIEF VALVE	1
24960	FLOW CONTROL VALVE	1
25369	SEAL KIT - FLOW CONTROL VALVE	1
25371	SOLENOID VALVE TAND G04571	2
25372	SOLENOID VALVE OPEN G04591	1
25373	SEAL KIT - SOLENOID VALVE	2
25370	COIL - 12VDC	1
13080	MANIFOLD ASM - MAIN CYLINDER	
9803	C-BALANCE VALVE	1
11991	PLUG - C-BALANCE	1
14115	MANIFOLD ASM - EXTENSION CYLINDER	
14390	O'RING - MANIFOLD ASM EXT. CYLINDER	2
4587	PRESSURE SWITCH	1
6397	HYD PRESSURE GUAGE	1
C2027	O'RING - # 4 FACE SEAL	4
C2028	O'RING - # 6 FACE SEAL	4
C2029	O'RING - # 8 FACE SEAL	4
D1245	O'RING - # 4 SAE	4
D1246	O'RING - # 6 SAE	4
D1247	O'RING - # 8 SAE	4
12158	TUBE ASM - MAIN CYLINDER	1
14442	TUBE ASM - EXTENSION CYLINDER	1
14443	TUBE ASM - EXTENSION CYLINDER	1
4381	BUSHING 2.00"x2.00"	2
#0068	BUSHING	2
13395	WEAR PAD 3.00"X3.00"X1.00"	2
13396	WEAR PAD 2.50"X2.50"X1.00"	2
8377	PIN CAP .56 X 3.50 X .25	2
7403	PIN CAP .44 X 2.50 X .25	2
D0790	WASHER 0.50 FLAT GR8	4
10172	CAP SCR. 0.50-13 X 1.00"	4
15889	SHEAVE	1
15997	WIRE ROPE	1
12824	HITCH PIN 1.00" X 4.50"	1
13436	QUICK RELEASE PIN .38 X 4.00"	1
11938	LIMIT SWITCH	1
11544	CORD REEL	1
12280	3.6V BATTERY	1
19994	ANTI - 2 BLOCK WEIGHT	1

**Call 800-321-3741 to Order**

# Chapter 10 - Troubleshooting

**This chapter will list a number of potential problems that may occur while operating the crane. Most problems are easily solved using the solutions portion of this chapter. If problems persist, please contact Customer Service at Stellar Industries 1-800-321-3741.**

**Problem: Crane will not operate.**

**Solutions:**

- Make sure that the parking brake is engaged.
- Make sure that the PTO is engaged.
- Make sure that there is 12V power going to the radio receiver. If there is no power going to the receiver, trace back to the power source and check for a blown fuse or loose ground connection. Refer to radio remote troubleshooting guide at the end of this chapter.
- Make sure that the transmitter batteries are fully charged. (Rechargeable batteries are good for 11 months or 200 charges)
- Make sure that the hydraulic pump is operating at its rated flow or GPMs. Check the flow by using the flow meter to determine the GPMs. It is possible that the hydraulic pump is getting weak. If this is suspected, contact Stellar Customer Service.

**Problem: Crane will operate manually but will not operate electrically.**

**Solutions:**

- Make sure that there is 12V power going to the radio receiver. If there is no power going to the receiver, trace back to the power source and check for a blown fuse or loose ground connection. Refer to radio remote troubleshooting guide at the end of this chapter.
- Make sure that the parking break is engaged.
- Make sure that the parking break switch is working properly. Check the parking break switch by performing a continuity test. If the switch is defective, simply replace it.

**Problem: Not all crane functions operate using the radio remote transmitter.**

**Solutions:**

- Make sure that the toggle switch is working properly. If the switch is defective, simply replace it.
- Make sure that there is power going from the valve bank coil solenoid or to the function that will not operate. If no power is going to the coil solenoid, check wiring connections on wire harness plug connector for broken wires, loose connection or poor crimp. If power is going to the solenoid valve, it may not be opening to allow hydraulic oil to the function that is not operating. Remove stem valve, thoroughly clean, lubricate, and reinstall valve. Do not over tighten. If the valve will not close, simply replace it.

**Problem: Two functions operate at the same time while only toggling one function.**

**Solutions:**

- Make sure that the solenoid valves are all in the center position.
- Determine the function that is operating on its own. Check to see if there is power going to the solenoid valve from a function that should not be operating. If voltage is present at the solenoid valve without operating the function, the toggle switch has failed and is stuck in the "on" function. If no voltage is present, the solenoid valve may be partially open. Remove the stem valve, thoroughly clean, lubricate, and reinstall the valve. Do not over tighten. If valve will not close, simply replace it.

**Problem: Winch brake will not hold.**

**Solutions:**

- Check to see if the back pressure on the return line of the winch is greater than 50 psi. Try operating a function other than the winch. Operate the function both ways and then stop. Now operate the winch. If the brake still does not hold, contact Customer Service at Stellar.

**Problem: Winch will not hold load.****Solutions:**

- Make sure that the object being lifted does not exceed the rated capacity of the winch. Refer to the capacity chart. If the object is within the rated capacity, reposition the truck and try to lift the object without using the crane boom extensions.
- Make sure that the relief valve on the winch is set correctly. Readjust the relief valve if necessary.

**Problem: Crane only operates at full speed.****Solutions:**

- Check to see if there is 12V power constantly going to the proportional valve. If 12 volts are showing up at the proportional valve without pulling on the transmitter trigger, the handle/trigger assembly may be defective. If 8 volts are showing at the proportional valve, it is possible that the valve is stuck open and will not close. Remove the valve, clean it thoroughly and reinstall. Do not over tighten. If the problem persists, replace the proportional valve.
- Check to see if the manual override on the proportional valve is turned out. Turn the manual override on the flow valve in.

**Problem: Crane operates slowly.****Solutions:**

- Make sure that the crane is receiving the recommended GPMs to operate.
- Check the level of hydraulic fluid in the reservoir. Add fluid as needed.
- Check to see if the valve bank orifice is plugged. If so, replace the orifice. Call Stellar Customer Service for instructions.
- Make sure the proportional valve is receiving 12V power when fully engaging the transmitter trigger. If there is not 12V power while pulling the trigger, check for loose connections inside the transmitter or replace the handle trigger assembly. If the proportional valve is receiving 12 volts, loosen the solenoid holding nut and check to see if the solenoid coil is magnetizing. If no polarity is present, replace the coil. If coil is magnetizing, remove the stem valve, thoroughly clean, lubricate, and reinstall the valve.

**Problem: Winch “Up”, Main Cylinder “Down”, and Extension Cylinder “Out” are the only functions that don’t operate.****Solutions:**

- Make sure that the unit 2-block weight and chain on the end of the boom are straight so they slide easily along the wire rope cable.
- Make sure that the limit switch is working properly. Disconnect the two wires connected to the limit switch and tie them together. If all functions operate, replace the limit switch.
- Make sure that the cord for the cord reel is undamaged. Check the continuity of the cord. Disconnect the cord reel from the crane harness and bypass the harness connection. If the crane operates properly, replace cord reel.

**Problem: Cylinder drifts outward or downward.****Solutions:**

- Check to see if there is air in the hydraulic system. Operate all cylinders connected to the hydraulic system. Start with the extension cylinder, then operate the main boom, winch, rotation, and ending with the hydraulic outriggers, if installed. When operating, extend each cylinder halfway out, retract all the way in, and then extend until the cylinder rod is at the end of its stroke. Operate cylinders slowly so air is pushed thru the system to the reservoir. Repeat this cycle 2-3 times.
- Make sure the holding valves are operating properly. Remove, clean, and then inspect each holding valve. When removing a holding valve, always relieve the pressure inside the cylinder by loosening jam nut of the holding valve and turning set screw inward/clockwise. Count the number of turns until the set screw is seated. When reinstalling the holding valve, make sure the valve is reset by turning the set screw the number of turns it took to relieve the pressure. Finish by tightening the jam nut.
- Check the cylinder rod for scratches. If a scratch is located on the cylinder rod, hydraulic fluid can pass thru and cause a loss of pressure. Replace cylinder rod or cylinder.
- Check to see if the piston seals are damaged. If they show signs of damage, install a new cylinder seal kit.

# Radio Remote Control Troubleshooting

## **Problem:**

### **Transmitter will not operate.**

(Note: Make sure the PTO is fully engaged when troubleshooting problem.)

1. Is the control switch on?
2. Is the emergency brake engaged?
3. Is the battery fully charged?
4. Is the E-Stop button pulled?

### **Check the receiver functions.**

(Note: Remove the receiver cover located on the crane mast)

With the main power switch on, check the following functions:

#### **1. Is the yellow light flashing in the upper left hand corner?**

- a. Yes –
  - i. If the red light in the upper left corner stays on, contact Stellar Customer Service.
  - ii. Check transmitter functions (press a toggle switch on transmitter. Go to 2.)
- a. No –
  - i. Check crane fuse. (Fuse located under chassis hood near solenoid.)

#### **2. Is the green light flashing in the upper left hand corner?**

- a. Yes –
  - i. Check signal functions.
- b. No –
  - i. Check transmitter battery. (Batteries are good for 11 months or 200 charges.)
  - ii. Check battery charger to make sure it is charging properly.
  - iii. Replace the battery.
  - iv. Open transmitter face plate carefully to see if a jumper spade has come off of the frequency electrical post.

#### **3. Are the red LED lights coming on when toggling a function? (LED lights are located below the circuit board, to the right of the 7.5 fuse, toward the back of the receiver.)**

- a. Yes –
  - i. Remove face plate and go to 4.
- b. No –
  - i. Check the 7.5 fuse inside the receiver.

#### **4. Has the internal antenna connection fallen loose from transmitter?**

- a. Yes –
  - i. Reconnect the antenna.
- b. No –
  - i. Contact Customer Service at Stellar.

**Contact Customer Service at Stellar Industries:  
1-800-321-3741**

## Limited Warranty Statement

### for Stellar Tire Service Trucks, Truck-mounted Cranes, & Truck-mounted Compressors ONLY

Stellar Industries, Inc. (Stellar) warrants products designed and manufactured by Stellar to be free from defects in material and workmanship under proper use and maintenance. Products must be installed and operated in accordance with Stellar's written instructions and capacities. The warranty period shall cover the following:

Twelve (12) month warranty on parts,  
Twelve (12) month repair labor, and  
Thirty-six (36) month warranty on all Stellar Crane designed and fabricated parts.

The warranty period shall begin from the date recorded by Stellar as the in-service date. This date will be derived from the completed warranty registration card. In the event a warranty registration card is not received by Stellar, the factory ship date will be used. Stellar's obligation under this warranty is limited to, and the sole remedy for any such defect shall be, the repair and/or replacement (at Stellar's option) of the unaltered part and/or component in question. Stellar after-sales service personnel must be notified by telephone, fax, or letter of any warranty-applicable damage within fourteen (14) days of its occurrence. If at all possible, Stellar will ship the replacement part within 24-hours of notification by the most economical, yet expedient, means possible. Expedited freight delivery will be at the expense of the owner.

Warranty claims must be submitted and shall be processed in accordance with Stellar's established warranty claim procedure. Stellar Service personnel must be contacted prior to any warranty claim. A return materials authorization (RMA) account number must be issued to the claiming party prior to the return of any warranty parts. Parts returned without prior authorization will not be recognized for warranty consideration. All damaged parts must be returned to Stellar freight prepaid; freight collect returns will be refused.

Warranty service will be performed by any Stellar new equipment distributor, or by any Stellar-recognized service center authorized to service the type of product involved, or by the Stellar factory in the event of a direct sale. At the time of requesting warranty service, the owner must present evidence of date of delivery of the product. The owner shall be obligated to pay for any overtime labor requested of the servicing company by the owner, any field service call charges, and any towing and/or transportation charges associated with moving the equipment to the designated repair/service provider.

All obligations of Stellar and its authorized dealers and service providers shall be voided if someone other than an authorized Stellar dealer provides other than routine maintenance service without prior written approval from Stellar. In the case repair work is performed on a Stellar-manufactured product, original Stellar parts must be used to keep the warranty in force. The warranty may also be voided if the product is modified or altered in any way not approved, in writing, by Stellar.

The owner/operator is responsible for furnishing proof of the date of original purchase of the Stellar product in question. Warranty registration is the ultimate responsibility of the owner and may be accomplished by the completion and return of the Stellar product registration card provided with the product. If the owner is not sure of registration, he is encouraged to contact Stellar at the address below to confirm registration of the product in question. This warranty covers only defective material and workmanship. It does not cover depreciation or damage caused by normal wear and tear, accident, mishap, untrained operators, or improper or unintended use. The owner has the obligation of performing routine care and maintenance duties as stated in Stellar's written instructions, recommendations, and specifications. Any damage resulting from owner/operator failure to perform such duties shall void the coverage of this warranty. The cost of labor and supplies associated with routine maintenance will be paid by the owner.

The only remedies the owner has in connection with the breach or performance of any warranty on the Stellar product specified are those set above. In no event will Stellar, the Stellar distributor/dealer, or any company affiliated with Stellar be liable for business interruptions, costs of delay, or for any special, indirect, incidental, or consequential costs or damages. Such costs may include, but are not limited to, loss of time, loss of revenue, loss of use, wages, salaries, commissions, lodging, meals, towing, hydraulic fluid, or any other incidental cost.

All products purchased by Stellar from outside vendors shall be covered by the warranty offered by that respective manufacturer only. Stellar does not participate in, or obligate itself to, any such warranty.

Stellar reserves the right to make changes in design or improvement upon its products without imposing upon itself the same upon its products theretofore manufactured.

This warranty will apply to all Stellar Tire Service Trucks, Truck-mounted Cranes, & Truck-mounted Compressed Air Systems shipped from Stellar's factory after July 1, 2005. The warranty is for the use of the original owner only and is not transferable without prior written permission from Stellar.

**THIS WARRANTY IS EXPRESSLY IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. REMEDIES UNDER THIS WARRANTY ARE LIMITED TO THE PROVISION OF MATERIAL AND SERVICES, AS SPECIFIED HEREIN. STELLAR INDUSTRIES, INC. IS NOT RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.**

