




# Model 6521 Telescopic Crane Owner's Manual

Installation • Assembly Drawings • Parts

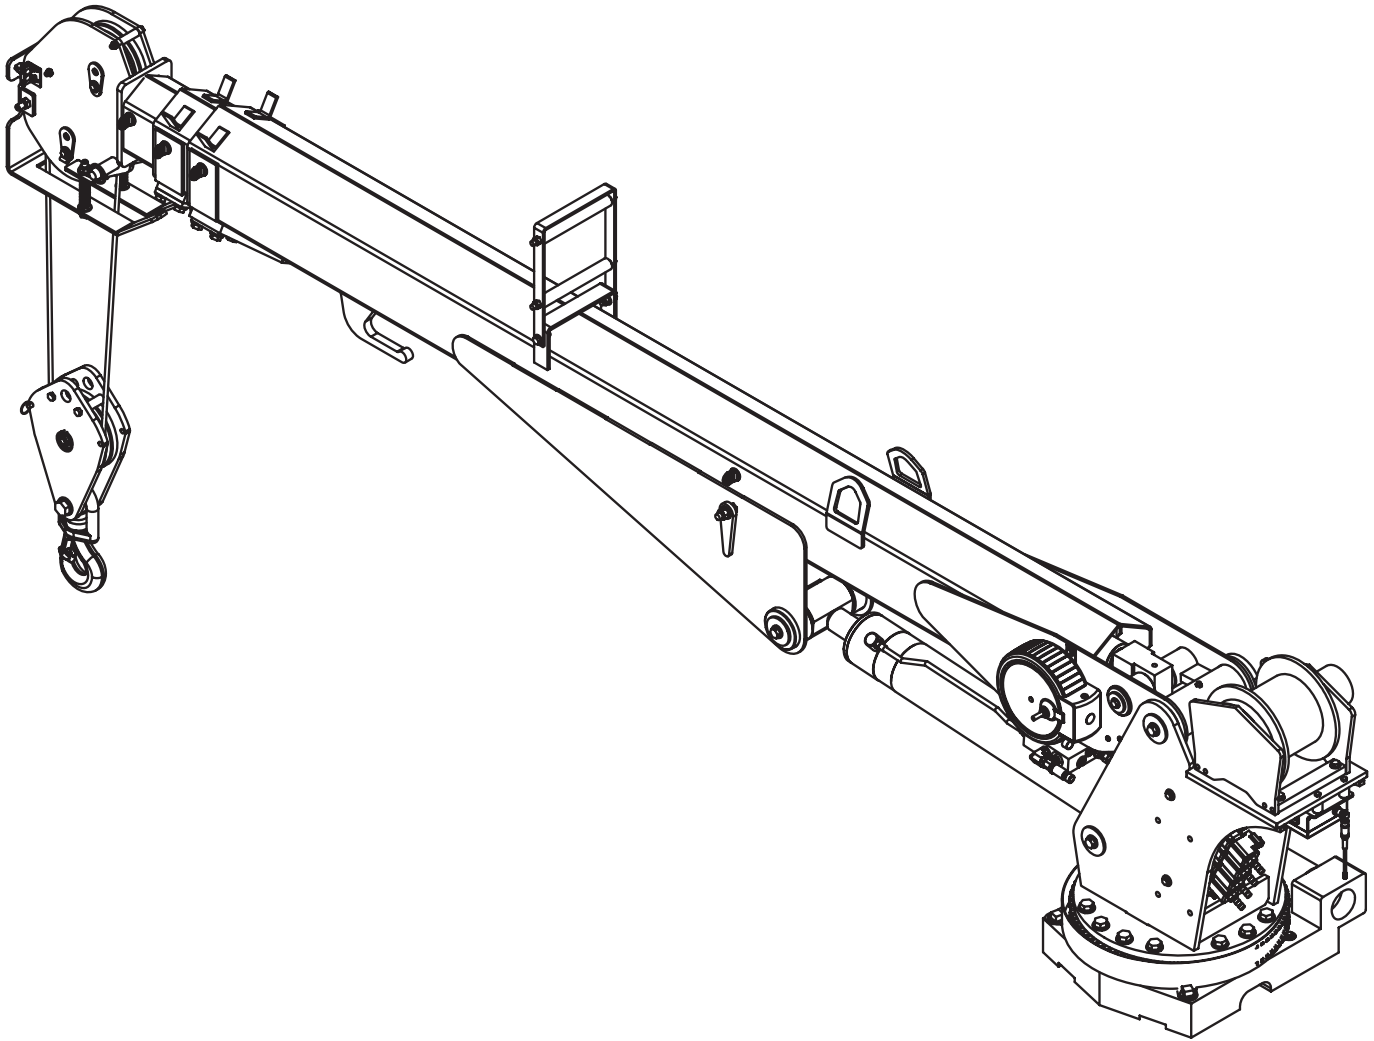

**Notice:** A copy of this manual must remain with the equipment at all times.  
For a printable download copy, please visit: [www.stellarindustries.com](http://www.stellarindustries.com)

**Stellar Industries, Inc.**

**190 State Street**

**PO Box 169**

**Garner, IA 50438**

**800-321-3741**

**Fax: 641-923-2811**

**[www.stellarindustries.com](http://www.stellarindustries.com)**



Subject to Change without Notification.  
© 2018 Stellar Industries, Inc.

Rev 1  
PN 94718

# Model 6521 Manual Revisions

Date of Revision	Section Revised	Description of Revision

**Serial Tag  
Location**

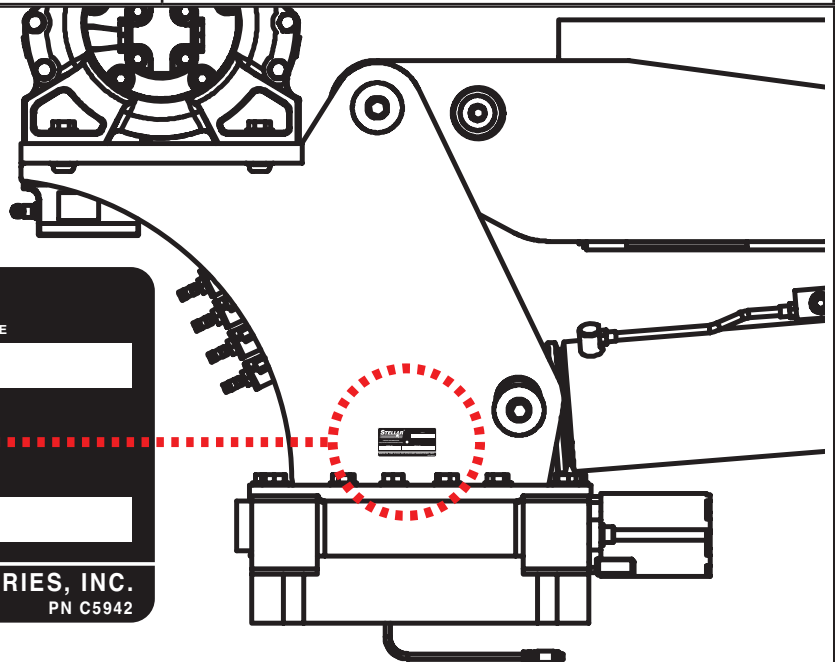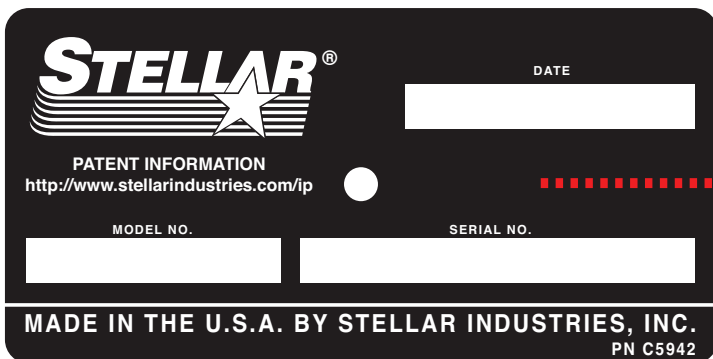

# Table of Contents

---

Introduction.....	iv
<b>Chapter 1 - Specifications.....</b>	<b>1</b>
Model 6521 Specifications .....	1
Capacity Chart - Decal PN 94740.....	2
Dimensional Drawing 1 .....	3
Dimensional Drawing 2.....	4
<b>Chapter 2 - Installation .....</b>	<b>5</b>
General Installation .....	5
Installer Notice.....	5
Torque Data Chart.....	6
Installation Overview .....	7
Control Kit (Cradle CDT Boost) - PN 68446.....	8
Control Kit (Cradle CDT Non-Boost) - PN 94716 .....	9
Control Kit (Cradle 12V CDT Boost) - PN 94717 .....	10
Control Kit (Cradle 12V CDT Non-Boost) - PN 68167.....	11
Wiring Diagram (Electrical Version).....	12
Hydraulic Kit (CDT) - PN 72837.....	13
Hydraulic Kit (12V CDT) - PN 72839 .....	14
Valve Bank - PN 44530 .....	15
Hydraulic Installation .....	16
Hydraulic System .....	17
Face Seal/O-Ring Size Chart .....	18
Stability Procedure .....	19
Crane Load Level Indicator .....	20
Decal Placement - PN 68169 .....	21
<b>Chapter 3 - Assembly Drawings .....</b>	<b>23</b>
Base Assembly - PN 50364 .....	23
Gear Bearing - PN 47869 .....	24
Mast Assembly - PN 72819 .....	25
Main Boom Assembly - PN 72833.....	26
Extension Boom Assembly (2 Hyd) - PN 58290.....	27
Extension Boom Assembly (1 Hyd/1 Manual) - PN 59146.....	28
Main Cylinder Assembly - PN 78434 .....	29
Extension Cylinder Assembly (2 Hyd) - PN 49316 .....	30
Extension Cylinder Assembly (1 Hyd/1 Manual) - PN 57936 .....	31
Cable & Hook Assembly - PN 57597 .....	32
Power Unit Assembly - PN 57939 .....	33
<b>Chapter 4 - Replacement Parts .....</b>	<b>35</b>

# Introduction

A copy of this manual is provided with every crane and can be found in the hard plastic manual case that is installed on the chassis. A copy of this manual shall remain with the crane at all times.

Throughout the manual, three signal words will be used to bring attention to important items:

## **NOTICE**

A NOTICE signal word indicates a practice not related to physical injury.

## **⚠ WARNING**

A WARNING signal word indicates a hazardous situation which, if not avoided, could result in death or serious injury.

## **⚠ DANGER**

A DANGER signal word indicates a hazardous situation which, if not avoided, will result in death or serious injury.

Information contained within this manual does not cover operation, maintenance, or troubleshooting. Please refer to the General Light Duty Crane Manual for details on these items.

This manual is not binding. Stellar Industries, Inc. reserves the right to change, at any time, any or all of the items, components, and parts deemed necessary for product improvement or commercial/production purposes. This right is kept with no requirement or obligation for immediate mandatory updating of this manual.

In closing:

If more information is required or technical assistance is needed, or if you feel that any part of this manual is unclear or incorrect, please contact the Stellar Customer Service Department by phone at 800-321-3741 or email at [service@stellarindustries.com](mailto:service@stellarindustries.com).

**For Technical Questions, Information, Parts, or Warranty, Call Toll-Free at  
800-321-3741**

Hours: Monday - Friday, 8:00 a.m. - 5:00 p.m. CST

Or email at the following addresses:

**Technical Questions, and Information**

[service@stellarindustries.com](mailto:service@stellarindustries.com)

**Order Parts**

[parts@stellarindustries.com](mailto:parts@stellarindustries.com)

**Warranty Information**

[warranty@stellarindustries.com](mailto:warranty@stellarindustries.com)

# Chapter 1 - Specifications


## Model 6521 Specifications

Crane Rating*:	35,000 ft-lbs (4.9 TM)	
Standard Boom Length:	11'0" (3.35 m) from CL of Crane	
Boom Extension:	1st Stage: Hydraulic 60" (152.4 cm) 2nd Stage: Hydraulic 60" (152.4 cm)	
Maximum Horizontal Reach:	21' 0" (6.40 m) from CL of Crane	
Maximum Vertical Lift:	22' 11" (6.99 m) from Crane Base	
Stowed Height (Crane Only):	33" (83.8 cm)	
Required Mounting Space:	20" x 21" (50.8 cm x 53.3 cm)	
Approximate Crane Weight:	6521 (Electric)	2H: 1480 lbs (671 kg) 1H1M: 1365 lbs (619 kg)
	6521 (Hydraulic)	2H: 1390 lbs (631 kg) 1H1M: 1275 lbs (578 kg)
	Controls: Radio control standard for all functions.	
	Wire Rope:	5/16" (0.79 cm) 6X19 IWRC-DGXIP X 90' (27.73 m)
Boom Elevation:	-10° to +80°	
Winch Specifications		
Line Pull Speed:	70 ft/min (21.34 m/min)	
Max. Single Part Line:	3,000 lbs (1,360 kg)	
Max. Double Part Line:	6,000 lbs (2,720 kg)	
Rotation (Worm Gear):	400° Power	
Lifting Capacity**:	6,000 lbs @ 5'10" (2,720 kg @ 1.78 m)	
	1,680 lbs @ 21' (760 kg @ 6.40 m)	
Power Supply:	12V Power Unit:	2 gpm @ 3,000 psi (7.6 lpm @ 207 bar)
	PTO & Pump:	8 gpm @ 3,000 psi (30.3 lpm @ 207 bar)

\*Crane rating in Boost Mode. Normal crane rating is 30,000 ft-lbs (4.15 TM).

\*\*Maximum capacities in Boost Mode.


# Capacity Chart - Decal PN 94740

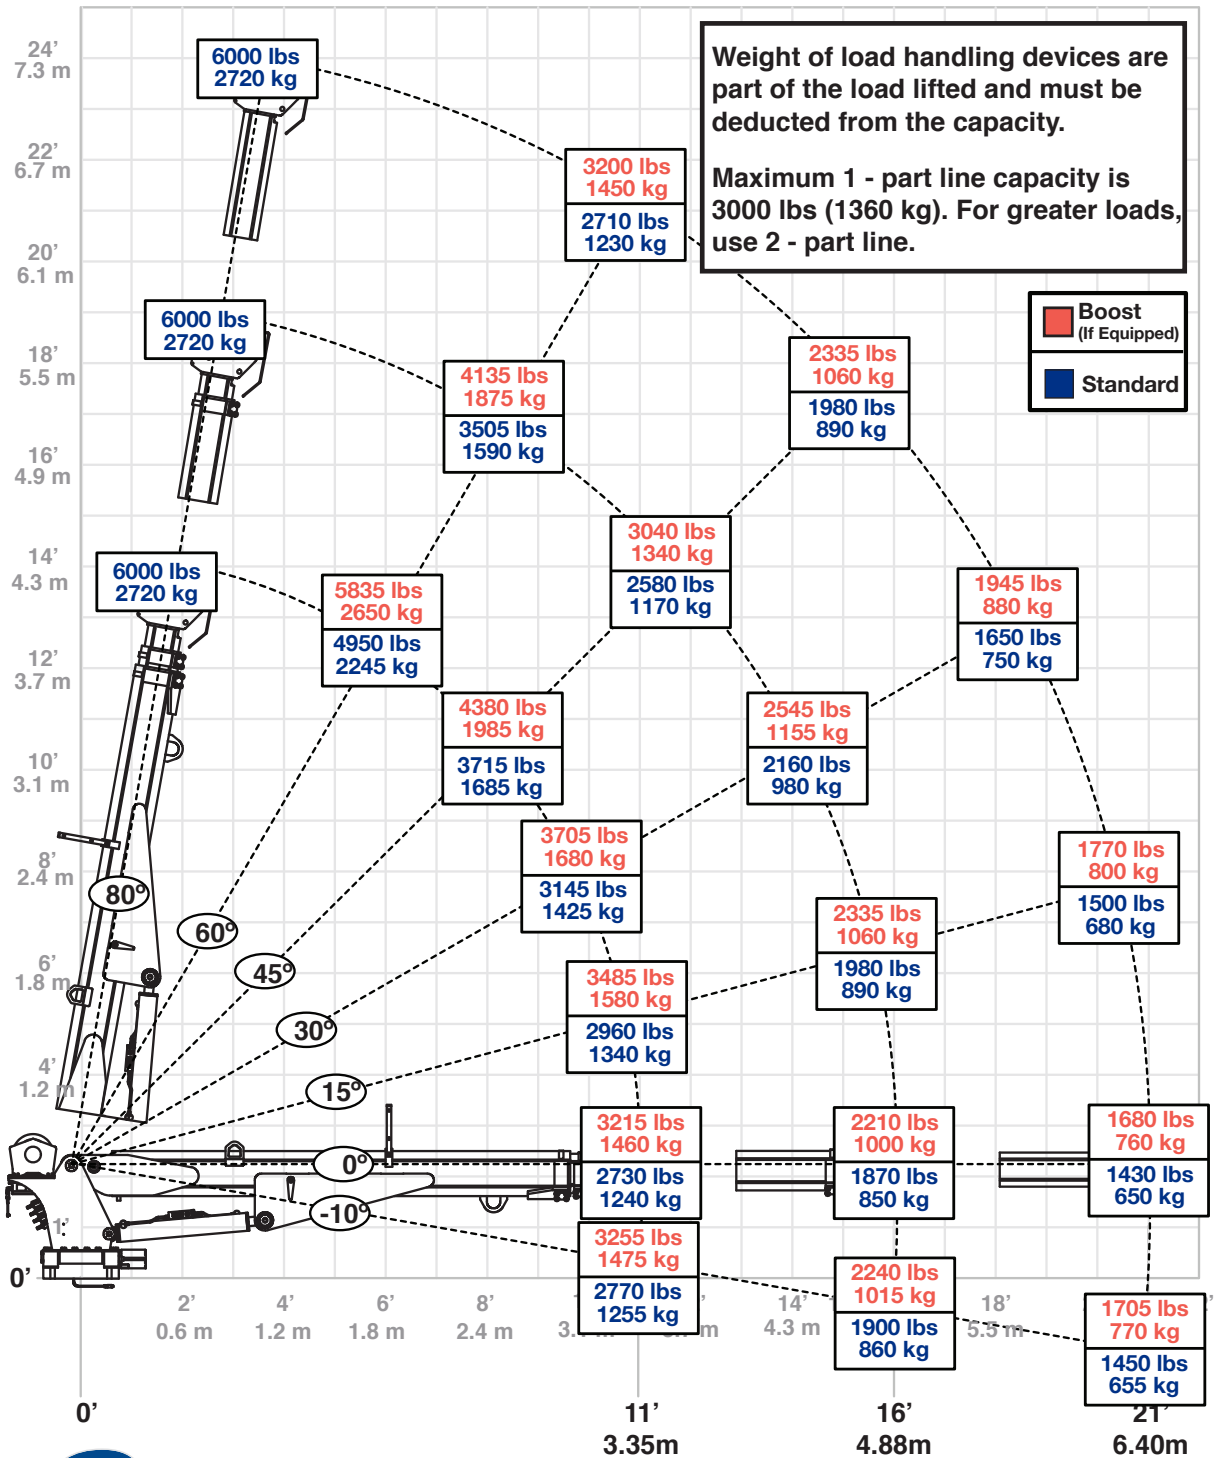


# 6521

PN 94740 - Rev A

# Dimensional Drawing 1

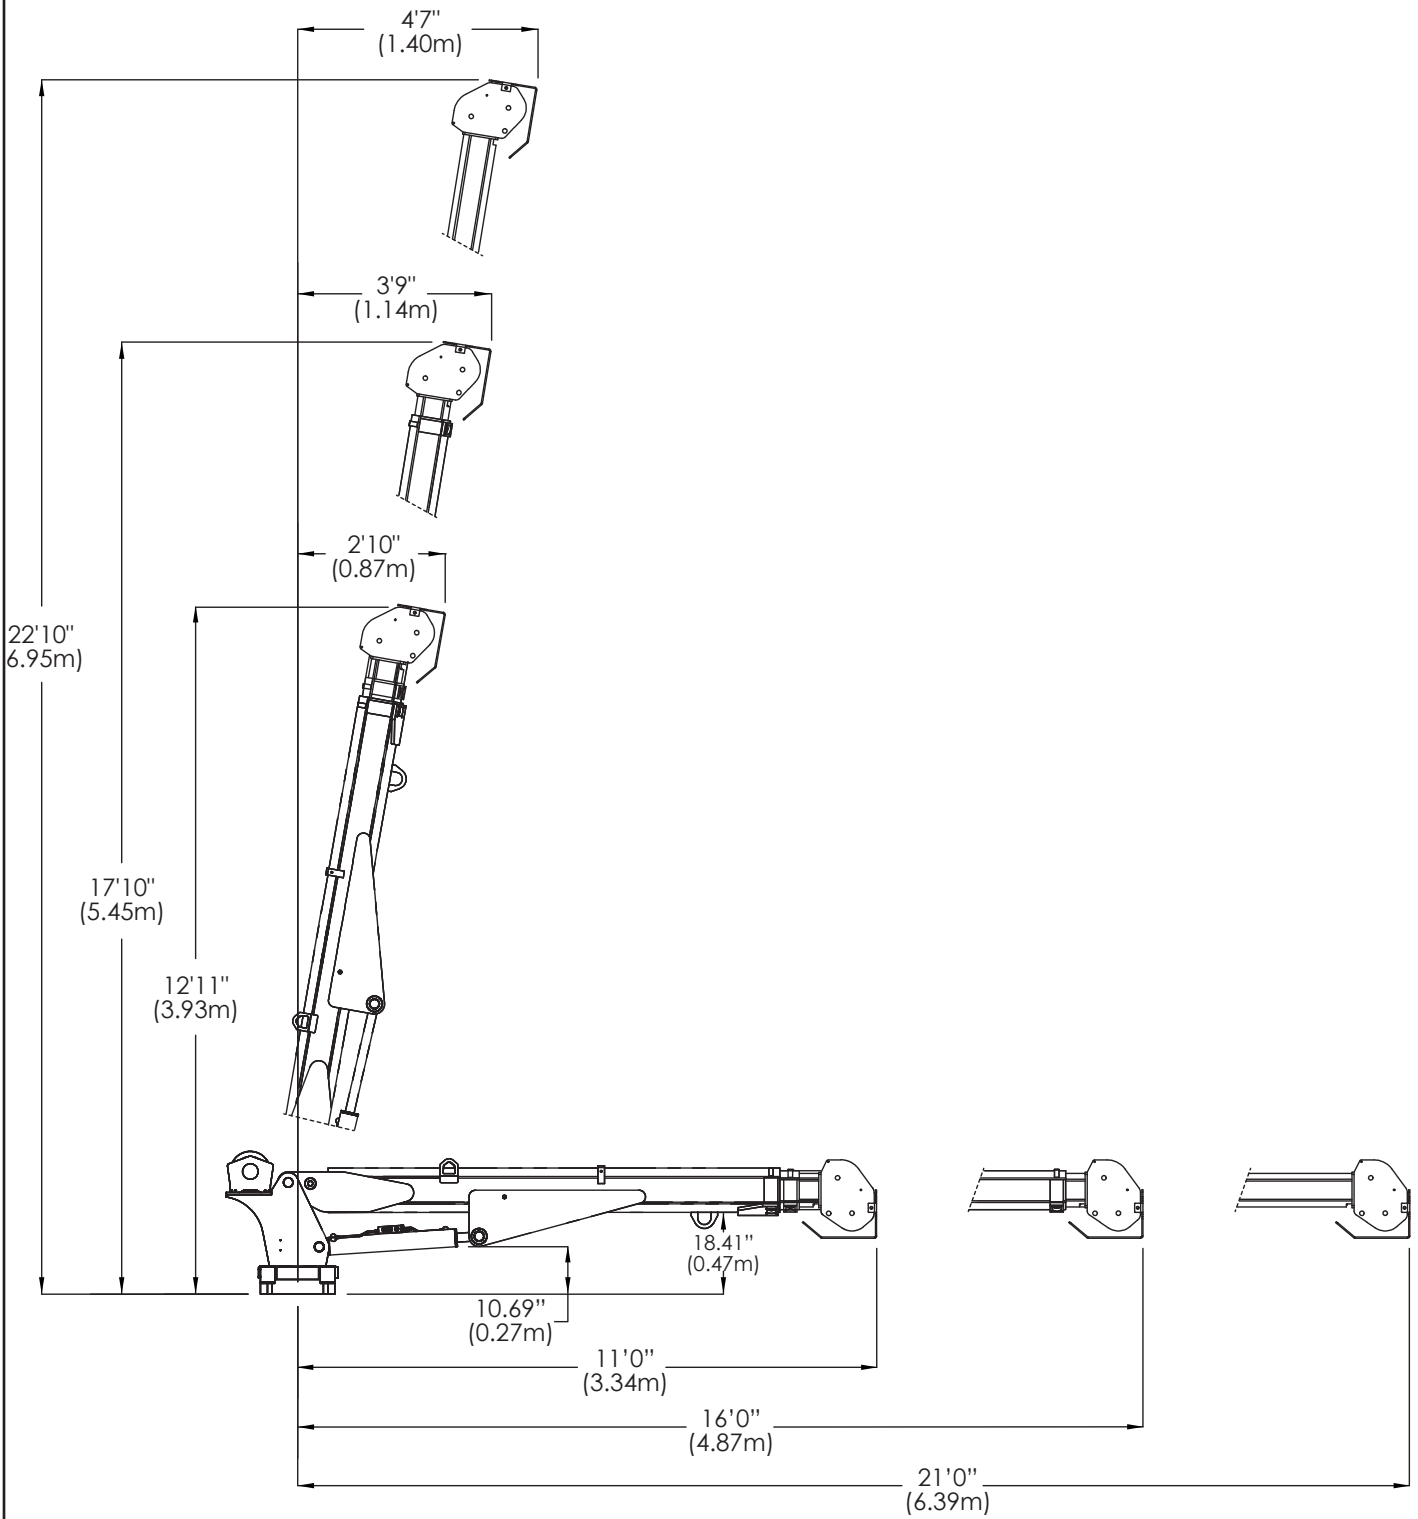

# Dimensional Drawing 2

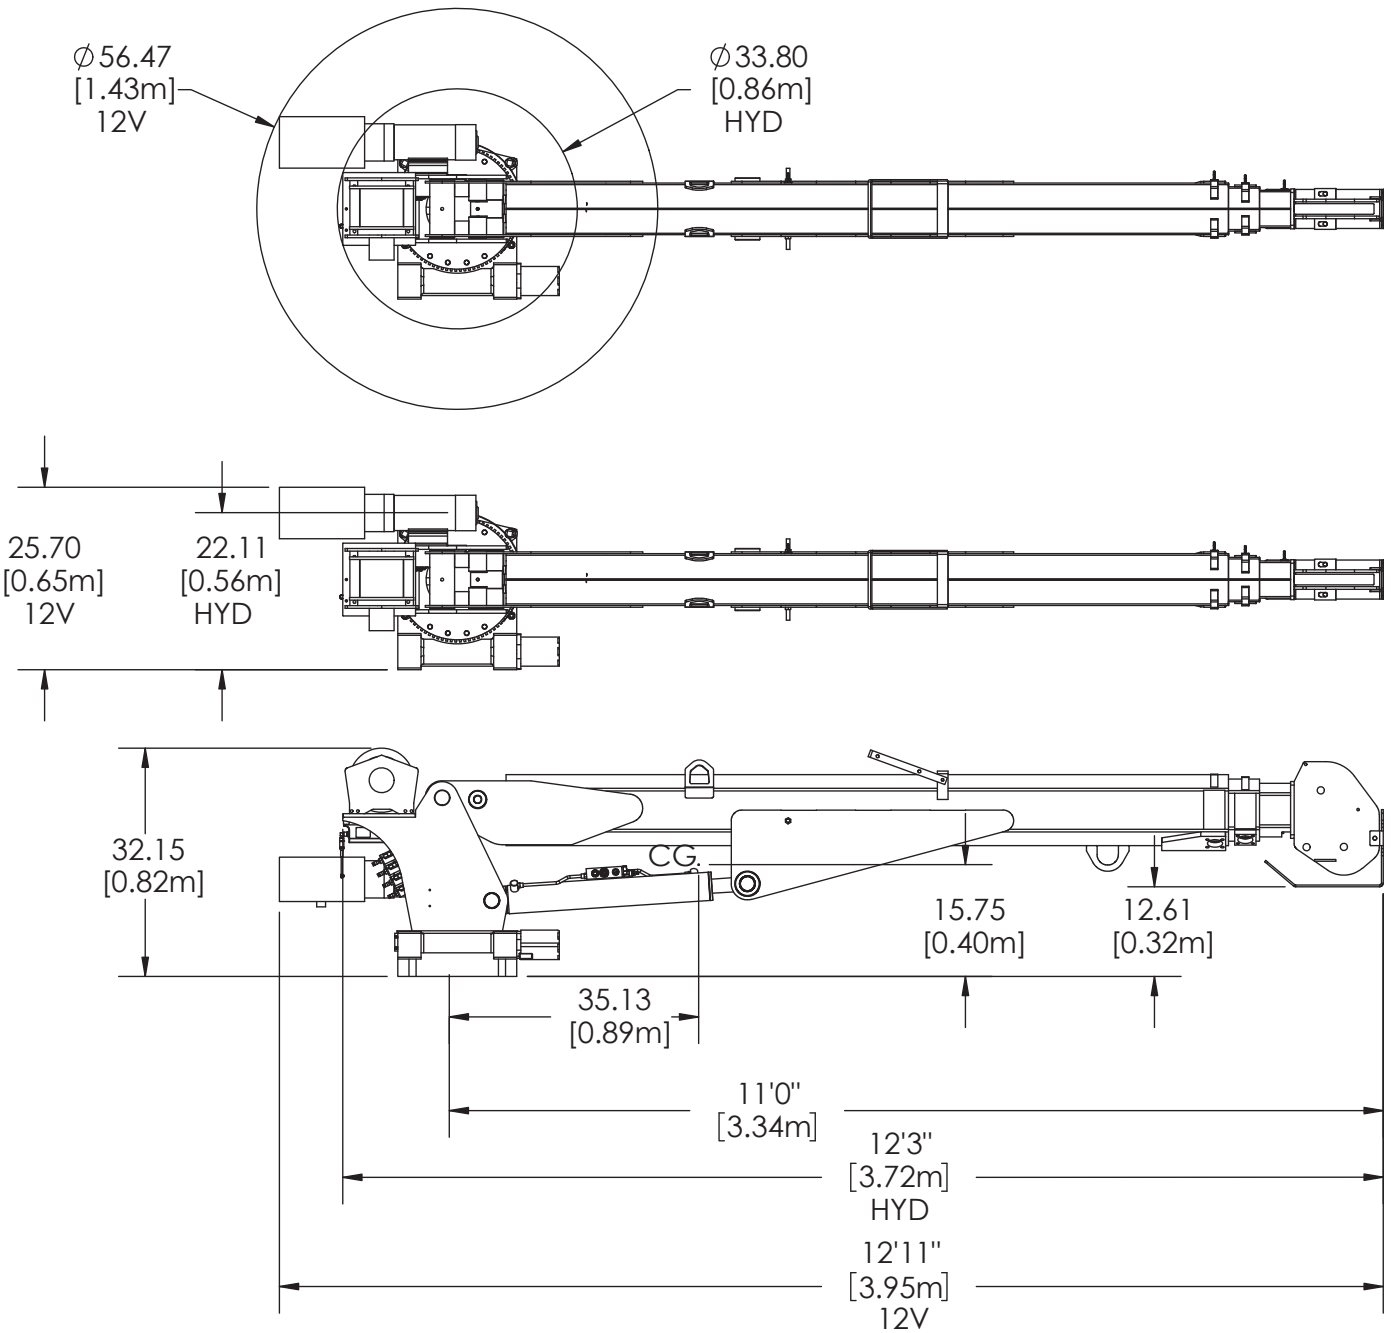



# Chapter 2 - Installation

## General Installation

This chapter is designed to serve as a general guide for the installation of a Stellar® 6521 Crane on a Stellar® Service Body. Each installation is considered unique so certain portions of this chapter may or may not apply to your direct application. If a question should arise during the installation process, please contact Stellar® Customer Service at (800) 321 3741.

This crane is designed for use with a Stellar® Service Body installed on a vehicle that meets the minimum chassis requirements of the crane. It is the installer's responsibility to assure that the crane is mounted on a platform that will support the maximum crane rating of this crane.

**⚠ WARNING** Do not install this crane on a body not capable of handling the loads imposed on it. Failure to do so may result in serious injury or death.

**NOTICE** When installing welder units to the service bodies, it is highly recommended that a surge protector is installed on the chassis batteries to protect the crane radio receiver, wiring and other electronic devices from an unexpected electrical spike or surge. Failure to do so could result in extensive damage to the service body and crane electrical circuit.

## Installer Notice

According to Federal Law (49 cfr part 571), each final-stage manufacturer shall complete the vehicle in such a manner that it conforms to the standards in effect on the date of manufacture of the incomplete vehicle, the date of final completion, or a date between those two dates. This requirement shall, however, be superseded by any conflicting provisions of a standard that applies by its terms to vehicles manufactured in two or more stages.

Therefore, the installer of Stellar® Cranes and Bodies is considered one of the manufacturers of the vehicle. As such a manufacturer, the installer is responsible for compliance with all applicable federal and state regulations. They are required to certify that the vehicle is in compliance with the Federal Motor Vehicle Safety Standards and other regulations issued under the National Traffic and Motor Vehicle Safety Act.

Please reference the Code of Federal Regulations, title 49 - Transportation, Volume 5 (400-999), for further information, or visit <http://www.gpoaccess.gov/nara/index.html> for the full text of Code of Federal Regulations.

## Torque Data Chart




When using the torque data in the chart, the following rules should be observed:

- Bolt manufacturer's particular specifications should be consulted when provided.

- Flat washers of equal strength must be used.

- All torque measurements are given in foot-pounds. To convert to inch-pounds, multiply by 12.


- Torque values specified are for bolts with residual oils or no special lubricants applied. If special lubricants of high stress ability, such as Never-Seez compound graphite and oil, molybdenum disulphite, colloidal copper or white lead are applied, multiply the torque values in the charts by the factor .90. The use of Loctite does not affect the torque values listed above.

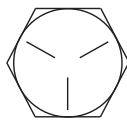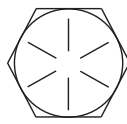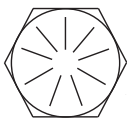		GRADE 5		GRADE 8		GRADE 9
						
Size (DIA-TPI)	Bolt DIA (Inches)	Plain (Ft-Lb)	Plated (Ft-Lb)	Plain (Ft-Lb)	Plated (Ft-Lb)	Plated (Ft-Lb)
5/16-18	0.3125	17	13	25	18	22
3/8-16	0.3750	31	23	44	33	39
7/16-14	0.4375	49	37	70	52	63
1/2-13	0.5000	75	57	105	80	96
9/16-12	0.5625	110	82	155	115	139
5/8-11	0.6250	150	115	220	160	192
3/4-10	0.7500	265	200	375	280	340
7/8-9	0.8750	395	295	605	455	549
1-8	1.000	590	445	910	680	823
1 1/8-7	1.1250	795	595	1290	965	1167
1 1/4-7	1.2500	1120	840	1815	1360	1646
1 3/8-6	1.3750	1470	1100	2380	1780	2158
1 1/2-6	1.500	1950	1460	3160	2370	2865

- Torque values for socket-head capscrews are the same as for Grade 8 capscrews.
- Do not use these values if a different torque value or tightening procedure is given for a specific application. Torque values listed are for general use only. Check tightness of fasteners periodically.
- Sheer bolts are designed to fail under predetermined loads. Always replace shear bolts with identical grade.
- Fasteners should be replaced with the same or higher grade. If higher grade fasteners are used, these should only be tightened to the strength of the original.
- Tighten plastic insert or crimped steel-type lock nuts to approximately 110 percent of the dry torque values shown in the chart below, applied to the nut, not to the bolt head. Tighten toothed or serrated-type lock nuts to the full torque value. *Note: "Lubricated" means coated with a lubricant such as engine oil, or fasteners with phosphate and oil coatings. "Dry" means plain or zinc plated without lubrication. Tighten lubricated bolts to approximately 80% of dry bolts.*


## Installation Overview

1. Determine that the mounting location for the 6521 crane is at least 18" x 20" (45.7 x 50.8 cm).
2. Use the detail below to drill 1.06" diameter holes into the mounting plate. Run tap on the threads of the base to be sure they are clean.
3. Use a crane or lifting device capable of lifting the weight of the Stellar® crane. The Stellar 6521 weighs approximately 1400 lbs (635 kg). **Note: cranes are shipped with rotation positioned at 200 degrees of 400 degree system.** This will allow for easy installation of the crane and permanent connection of all hydraulic and electrical components prior to repositioning into the crane saddle.
4. Connect straps or chain from the lifting device to the lifting rings on the 6521.
5. Use four (4) 1" x 3" #8 bolts and four (4) #8 flat washers.
6. Install a washer on each bolt.
7. Apply Loctite Thread locker #277 to the bolts.
8. Using the lifting device, lower the 6521 just above the crane compartment and start the bolts. Have someone assist in leveling the crane. **Note: the rotation motor should be to the door side of crane compartment and the boom should be extended back over the rear bumper.**
9. Secure the crane using the mounting hardware provided. **Note: longer or shorter cap screws may be required – recommended thread engagement into crane base is 1.75" – use grade 8, zinc plated cap screws only.**
10. Torque the cap screws to 680 ft-lbs.
11. Remove supporting crane.
12. Hook-up hydraulics and electrical.

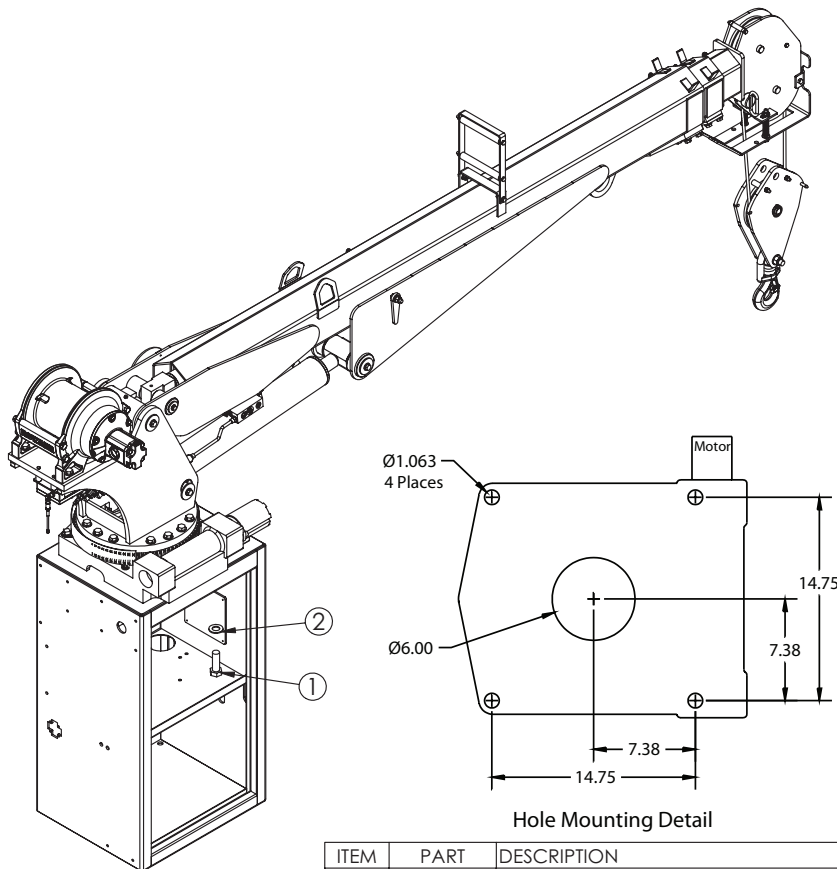

ITEM	PART	DESCRIPTION	QTY.
1	5199	CAP SCR 1.00X8X3.00 HHGR8 ZY	4
2	6538	WASHER 1.00 SAE FLAT YELLOW GR8	4


# Control Kit (Cradle CDT Boost) - PN 68446

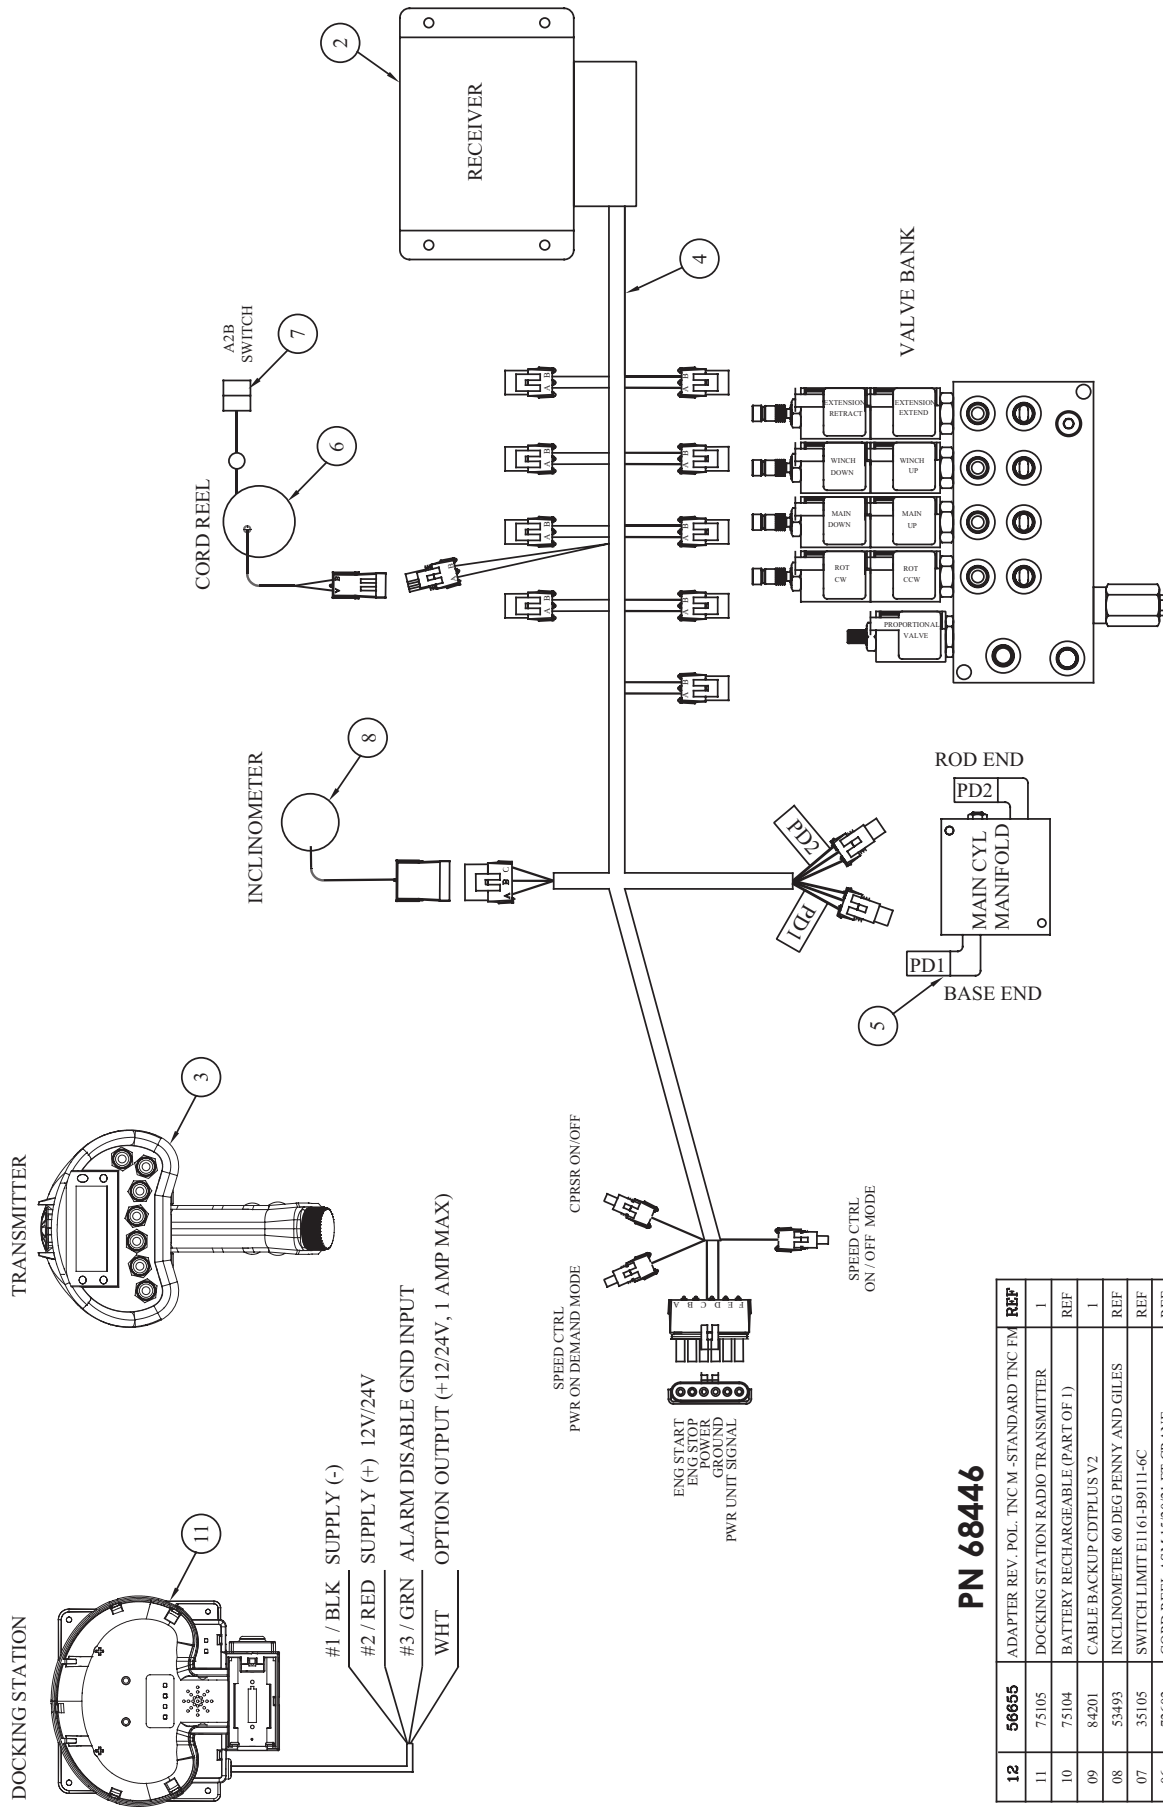

## PN 68446

ITEM	58655	12	REF
	ADAPTER REV. POL. TNC M-STANDARD TNC FM		REF
11	75105	1	DOCKING STATION RADIO TRANSMITTER
10	75104	1	BATTERY RECHARGEABLE (PART OF 1)
09	84201	1	CABLE BACKUP CDTPLUS V2
08	53493	REF	INCLINOMETER 60 DEG PENNY AND GILES
07	35105	REF	SWITCH LIMIT E1161-B9111-6C
06	72602	REF	CORD REEL ASM 15/20/21 FT CRANE
05	28485	2REF	TRANSREDUCER PRESSURE 5000 PSI
04	46307	1	WIRE HARNESS 12621/12628 LMI
03	84200	REF	TRANSMITTER - RADIO (PART OF 1)
02	61067	REF	RECEIVER - RADIO (PART OF 1)
01	68658	1	RADIO CONTROLLER ASSEMBLY
ITEM	PART No.	QTY	DESCRIPTION

# Control Kit (Cradle CDT Non-Boost) - PN 94716

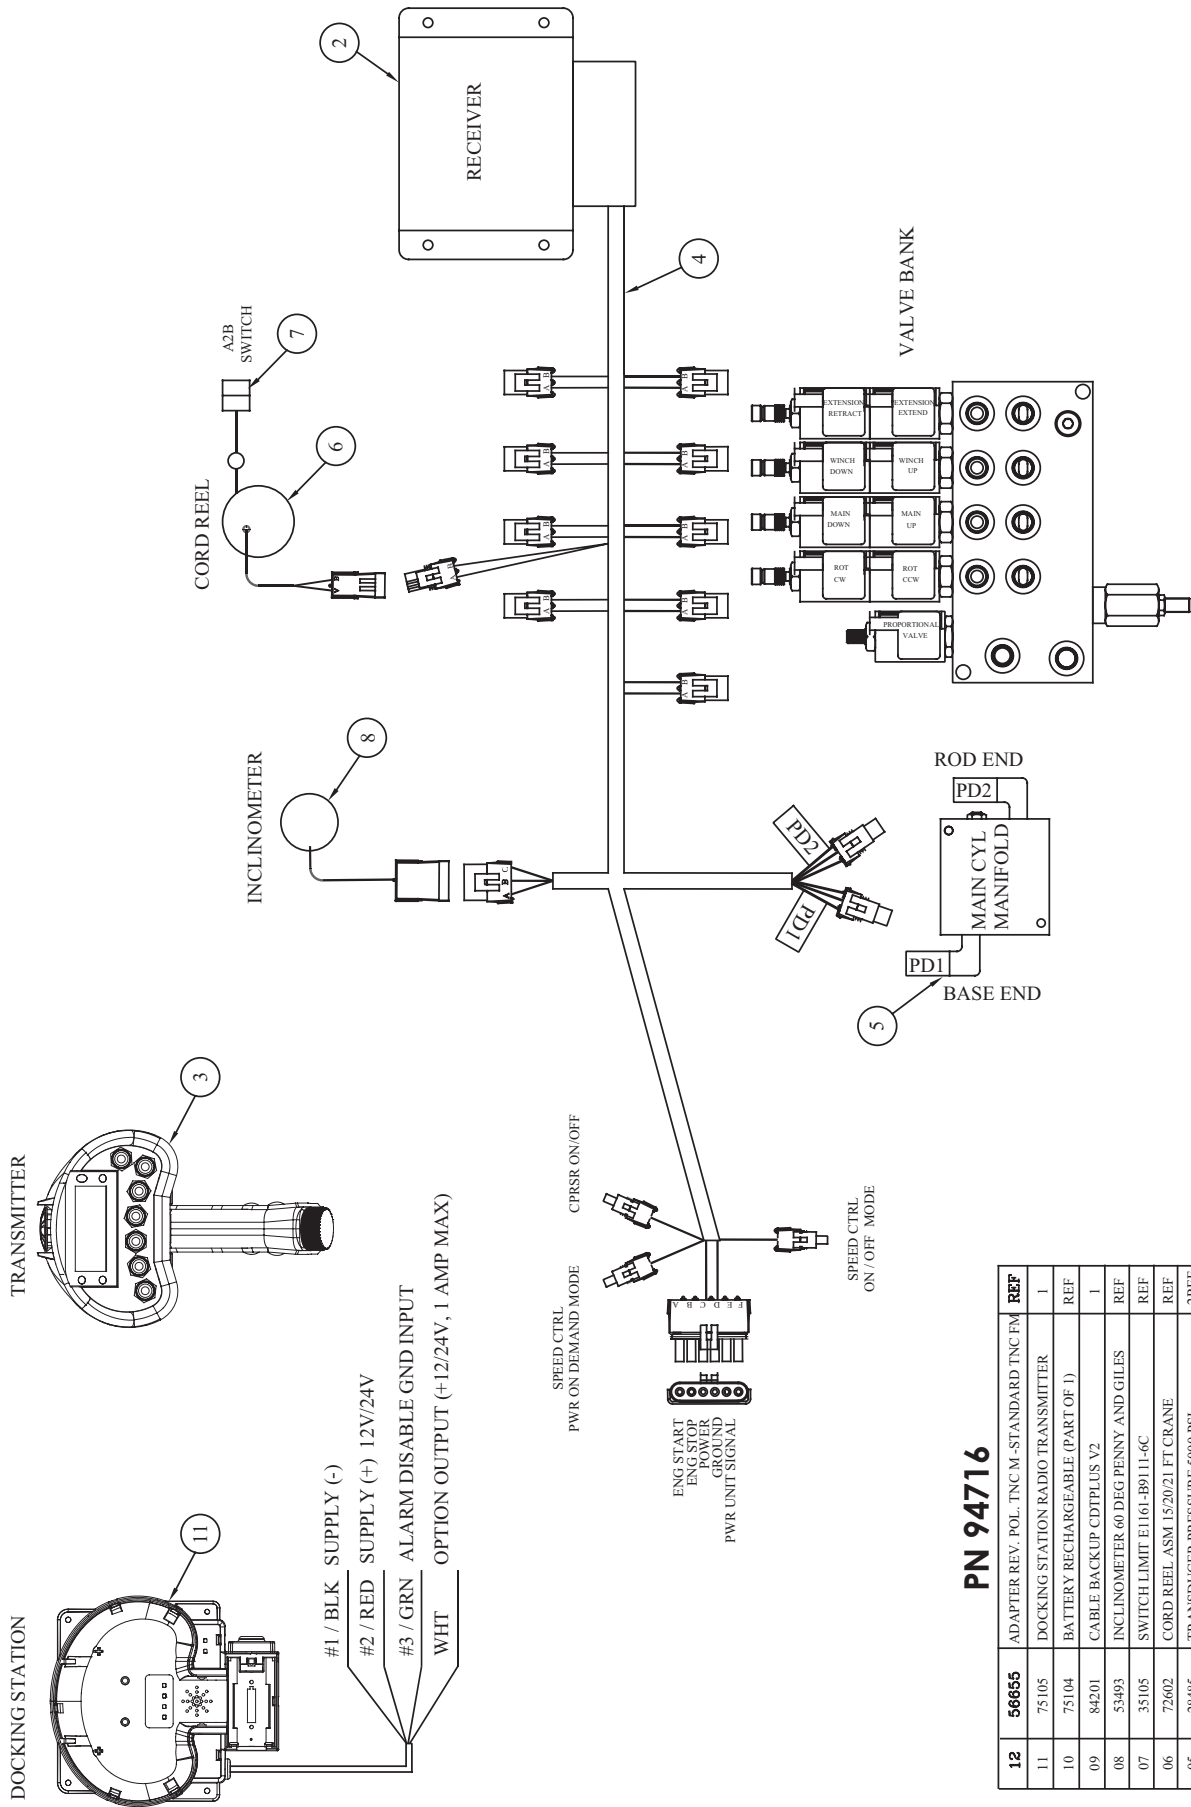


## PN 94716

ITEM	56855	75105	75104	84201	53493	35105	72602	28485	46307	84200	61067	68168	PART No.	DESCRIPTION	QTY																				
12	ADAPTER REV. POL. TNC M-STANDARD TNC FM	REF	1	DOCKING STATION RADIO TRANSMITTER	REF	1	BATTERY RECHARGEABLE (PART OF 1)	REF	1	CABLE BACKUP CDTPLUS V2	REF	1	INCLINOMETER 60 DEG PENNY AND GILES	REF	1	SWITCH LIMIT E1161-489111-6C	REF	1	CORD REEL ASM 15/20/21 FT CRANE	REF	1	TRANSDUCER PRESSURE 5000 PSI	2REF	WIRE HARNESS 12621/12628 LMI	REF	1	TRANSMITTER - RADIO (PART OF 1)	REF	1	RECEIVER - RADIO (PART OF 1)	REF	1	RADIO CONTROLLER ASSEMBLY	REF	1





# Wiring Diagram (Electrical Version)


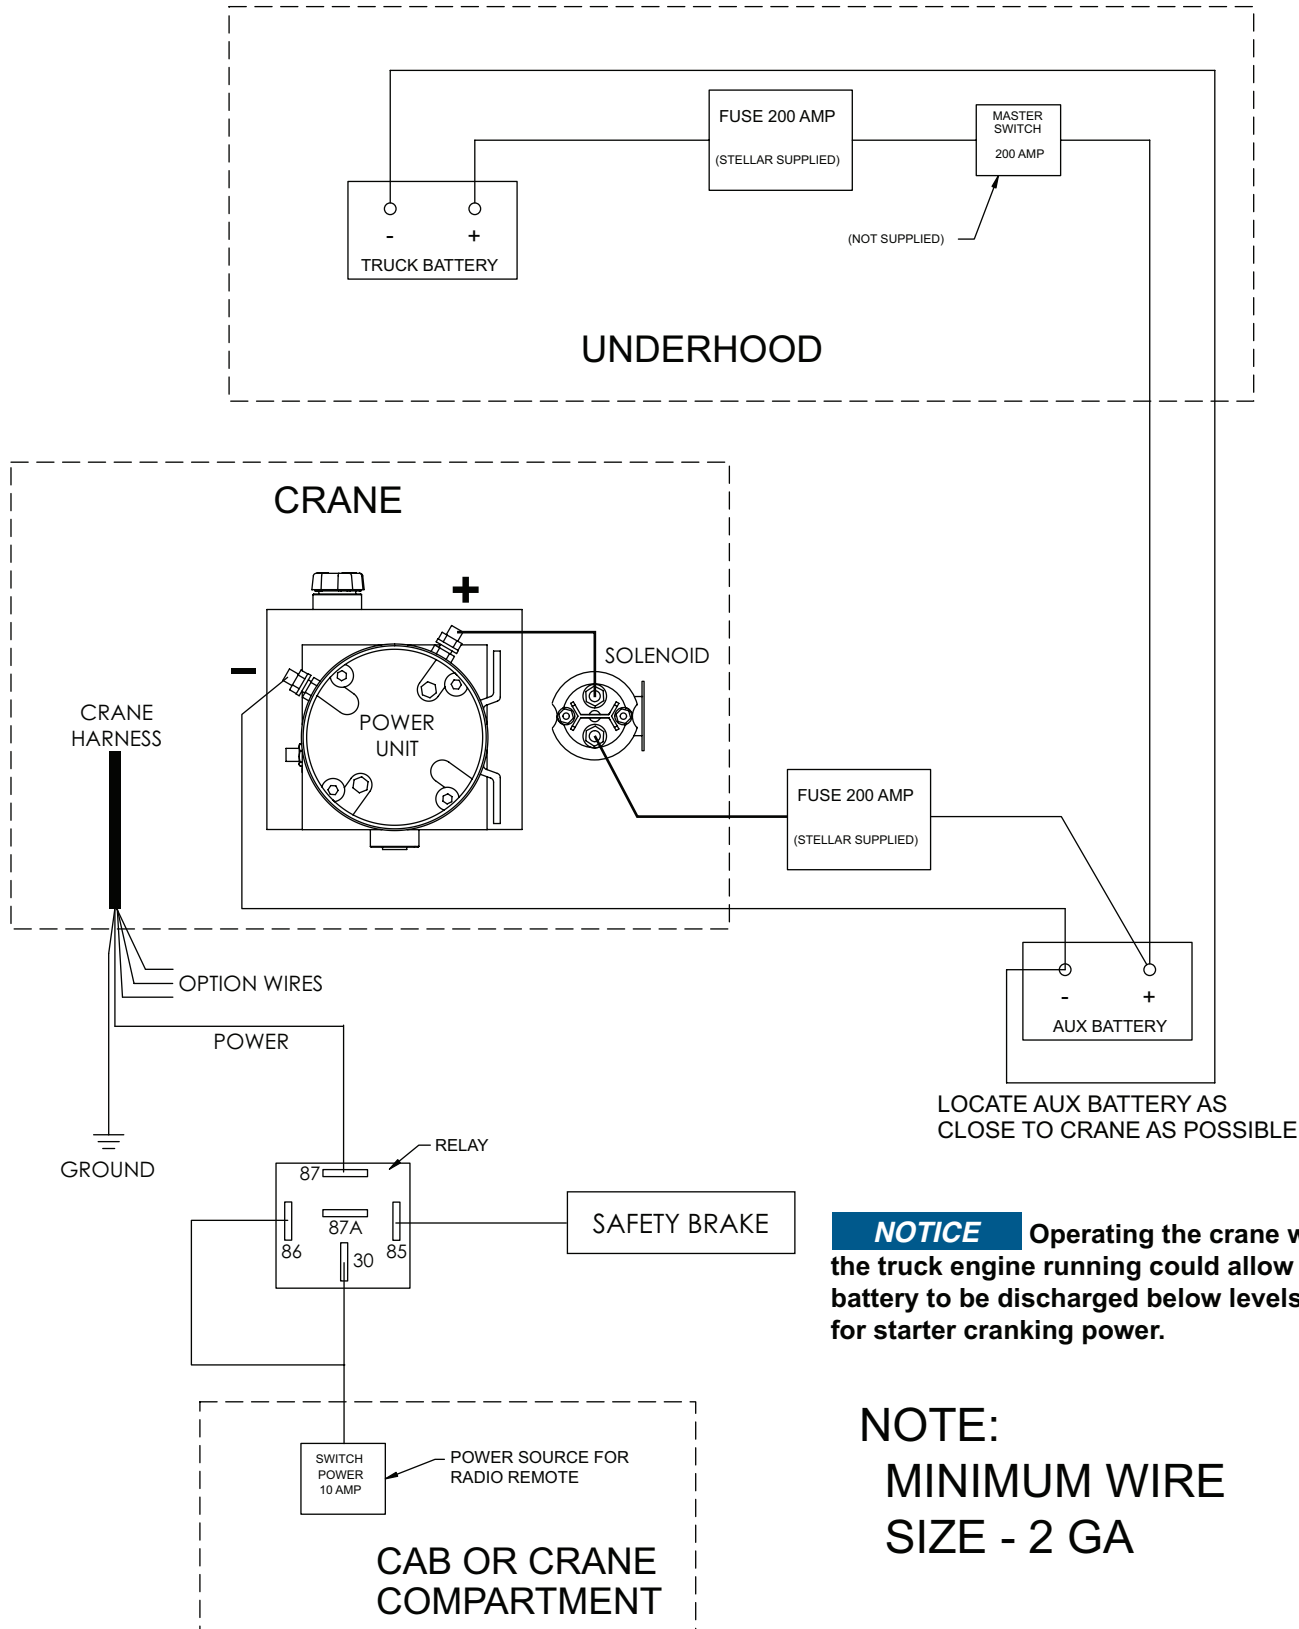


**NOTICE** Operating the crane without the truck engine running could allow the truck battery to be discharged below levels required for starter cranking power.




**NOTE:**  
**MINIMUM WIRE  
 SIZE - 2 GA**



# Hydraulic Kit (CDT) - PN 72837

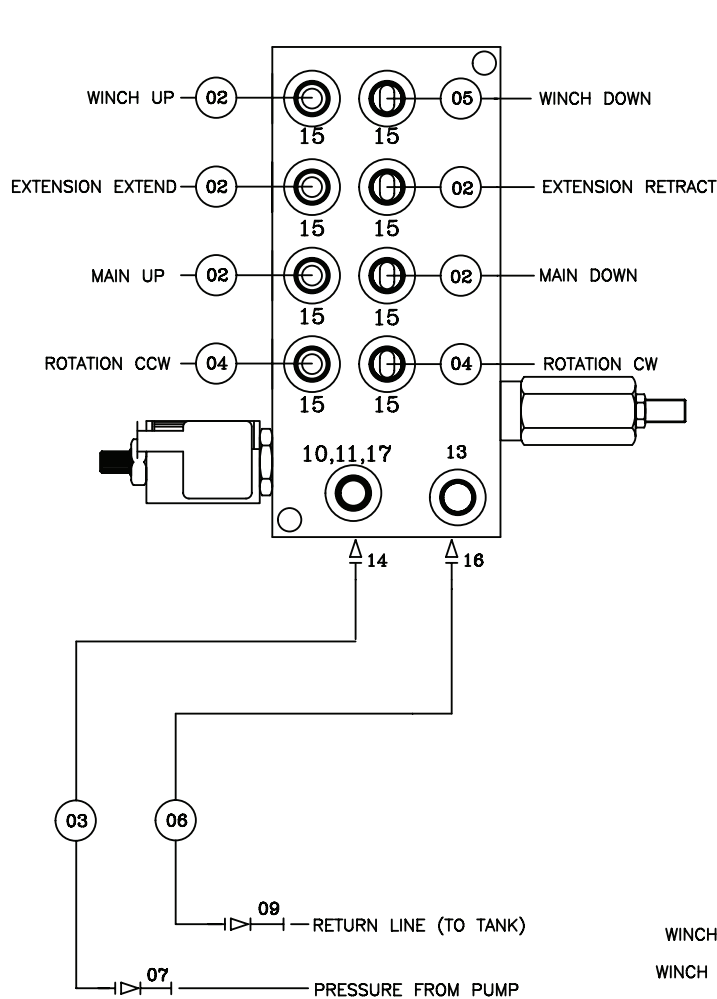

NOTE: USE 32" OF HOSE PROTECTOR P/N 17288 OVER THE ROTATION HOSES

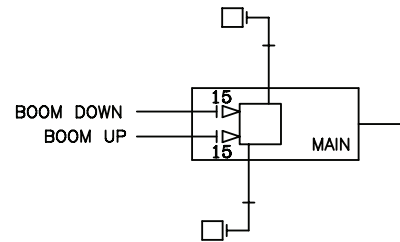
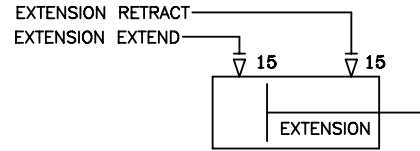


NOTE: USE 12" OF HOSE PROTECTOR P/N 17288 OVER THE 2 WINCH HOSES




## PN 72837

17	39780	GAUGE OIL LF 2.5" 0-5000 CBM	1
16	C1175	FTG ELL 8-V5OLO-S	1
15	0279	FTG ADAPT 6 F5OLO-S	14
14	D1193	FTG ADAPT 6-V5OLO-S	1
13	C4961	PLUG STR HOLLOW HEX 0.38 6-HP50N	1
12	D1302	FTG ADAPT 90 6-10-C5OLO-S	2
11	3861	FTG 90 MSTR/FSTR 6	1
10	15111	FTG ADAPT MSTH/FSTH 6-4-F5OG5	1
09	12172	FTG SWIVEL 0.50 FS/FS PS81 JMJM-8-8	1
08	17288	HOSE PROTECTOR 1.00 AS-B-27	12"
07	12171	FTG SWIVEL 0.38 FS/FS PS81 JMJM-6-6	1
06	45438	HOSE-HYD .50 X 8	1ref
05	59137	HOSE-HYD .38 X 19	1ref
04	13030	HOSE-HYD .38 X 39	2ref
03	45439	HOSE-HYD .38 X 9	1ref
02	13028	HOSE-HYD .38 X 17	5ref
01	72838	HOSE KIT 5521 V2 (incl:2-6)	1
ITEM	PART No.	DESCRIPTION	QTY

# Hydraulic Kit (12V CDT) - PN 72839

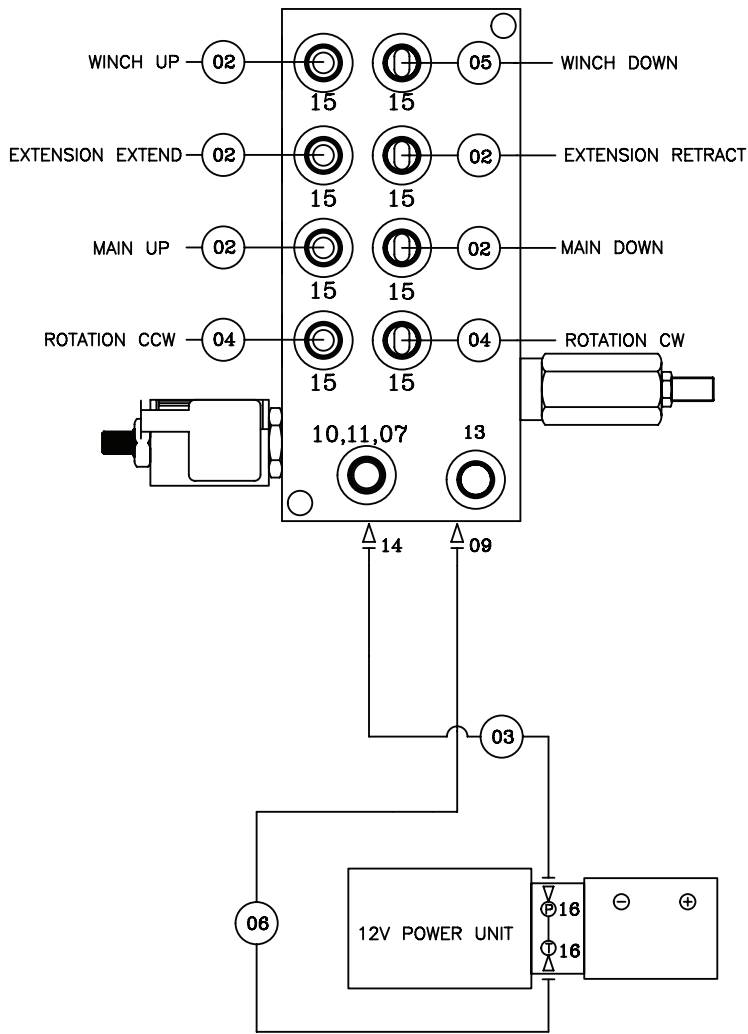

NOTE: USE 32" OF HOSE PROTECTOR P/N 17288 OVER THE ROTATION HOSES

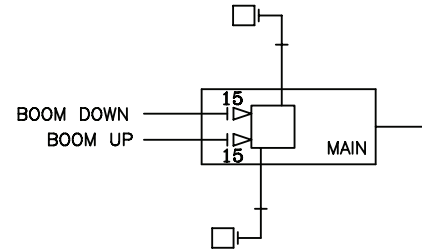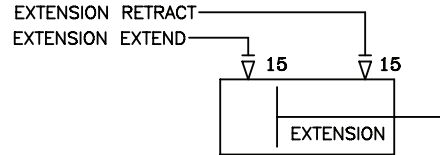


NOTE: USE 12" OF HOSE PROTECTOR P/N 17288 OVER THE 2 WINCH HOSES


## PN 72839

16	C0338	FTG ADAPT 90 6-C50LO-S	2
15	0279	FTG ADAPT 6 F50LO-S	14
14	D1193	FTG ADAPT 6-V50LO-S	1
13	C4961	PLUG STR HOLLOW HEX 0.38 6-HP50N	1
12	D1302	FTG ADAPT 90 6-10-C50LO-S	2
11	3861	FTG 90 MSTR/FSTR 6	1
10	15111	FTG ADAPT MSTH/FSTH 6-4-F50G5	1
09	C1175	FTG ELL 8-V50LO-S	1
08	17288	HOSE PROTECTOR 1.00 AS-B-27	12"
07	39780	GAUGE OIL LF 2.5 0-5000 CBM SAE	1
06	59520	HOSE-HYD .38 X 29	1ref
05	59137	HOSE-HYD .38 X 19	1ref
04	13030	HOSE-HYD .38 X 39	2ref
03	59519	HOSE-HYD .25 X 26	1ref
02	13028	HOSE-HYD .38 X 17	5ref
01	72935	HOSE KIT 5521 12V V2 (incl:2-6)	1
ITEM	PART No.	DESCRIPTION	QTY

# Valve Bank - PN 44530

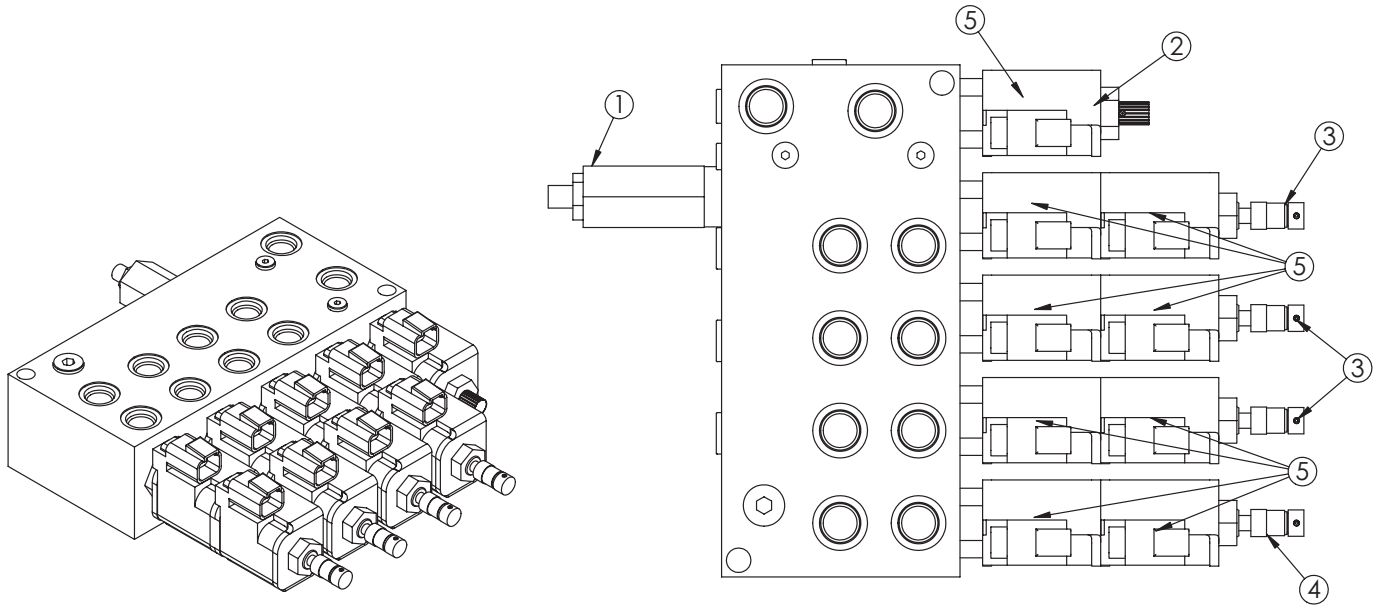

HYDRAULIC SCHEMATIC


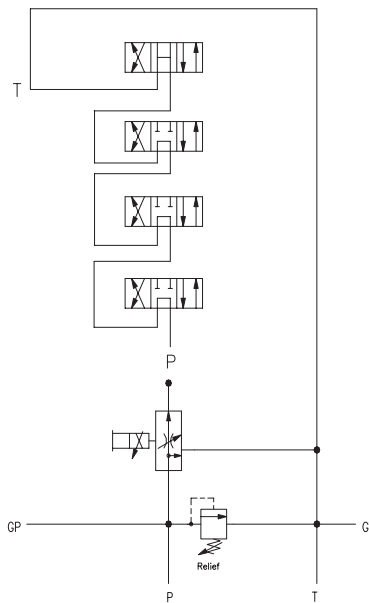


## PN 44530

ITEM	PART	DESCRIPTION	QTY	TORQUE
1	25367	RELIEF VALVE 24685/24690	1	37 FT LBS
	25368	SEAL KIT 25367		
2	24960	VALVE FLW CTRL PRP/JP04C3150N 0-8	1	20-22 FT LBS
	25369	SEAL KIT 24960/25381		
3	25371	VALVE SOLND 3 POS 4 WAY TAND G04571	3	25 FT LBS
4	25372	VALVE SOLND 3 POS 4 WAY OPEN G04591	1	25 FT LBS
	25373	SEAL KIT 25371/25372		
5	44532	COIL 12VDC DUETSCH CAP012H	9	3 FT LBS


# Hydraulic Installation

1. After mounting, locate the pressure and return lines. Note: Pressure line is 3/8" hose; Return line is 1/2" hose. Hoses are terminated using swivel fittings.
2. Install hydraulic lines per diagram below. Note: Stabilizer valve supplies oil to crane using the Power Beyond feature.
3. Install hydraulic reservoir with return filter. Attach pump pressure line to valve, return link to tank.
4. Fill system with hydraulic oil (See Stellar® Lubrication Recommendations for fluid details).

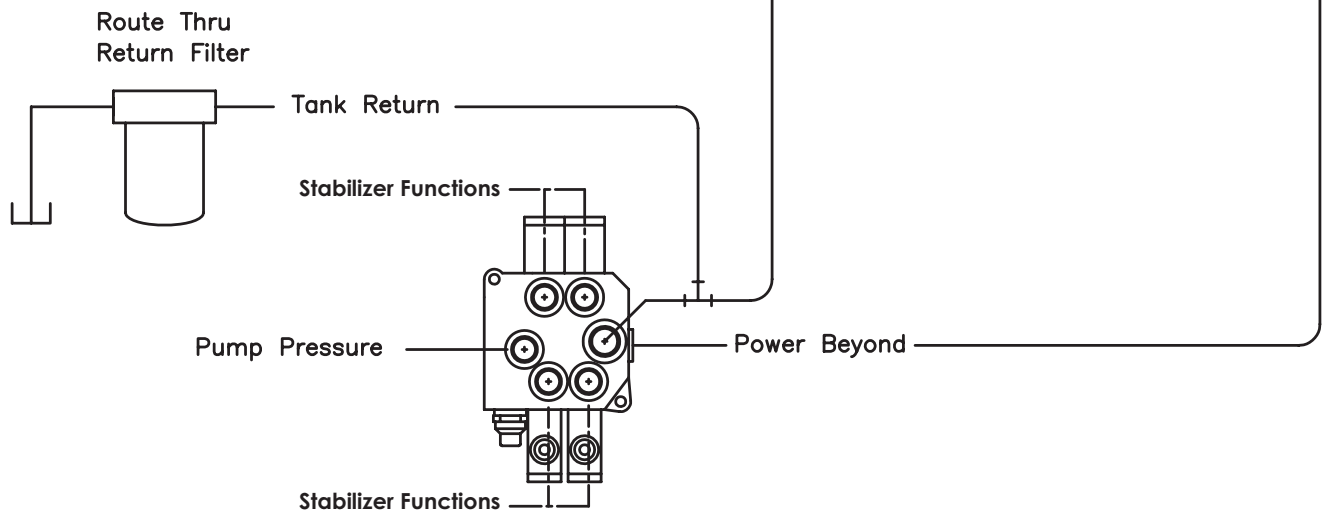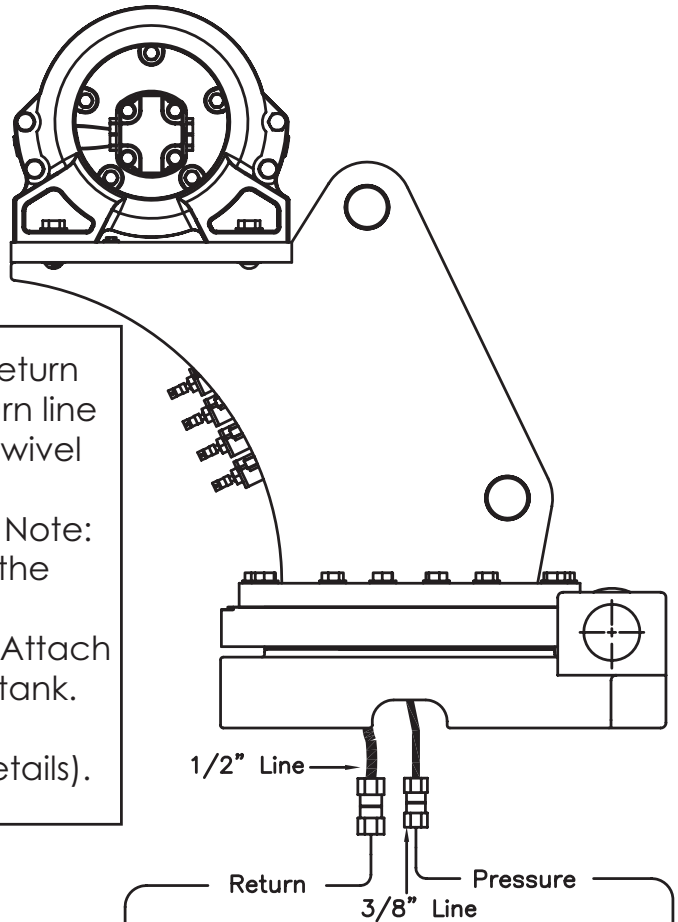


Typical Stabilizer Valve  
with Power Beyond Capabilities

# Hydraulic System

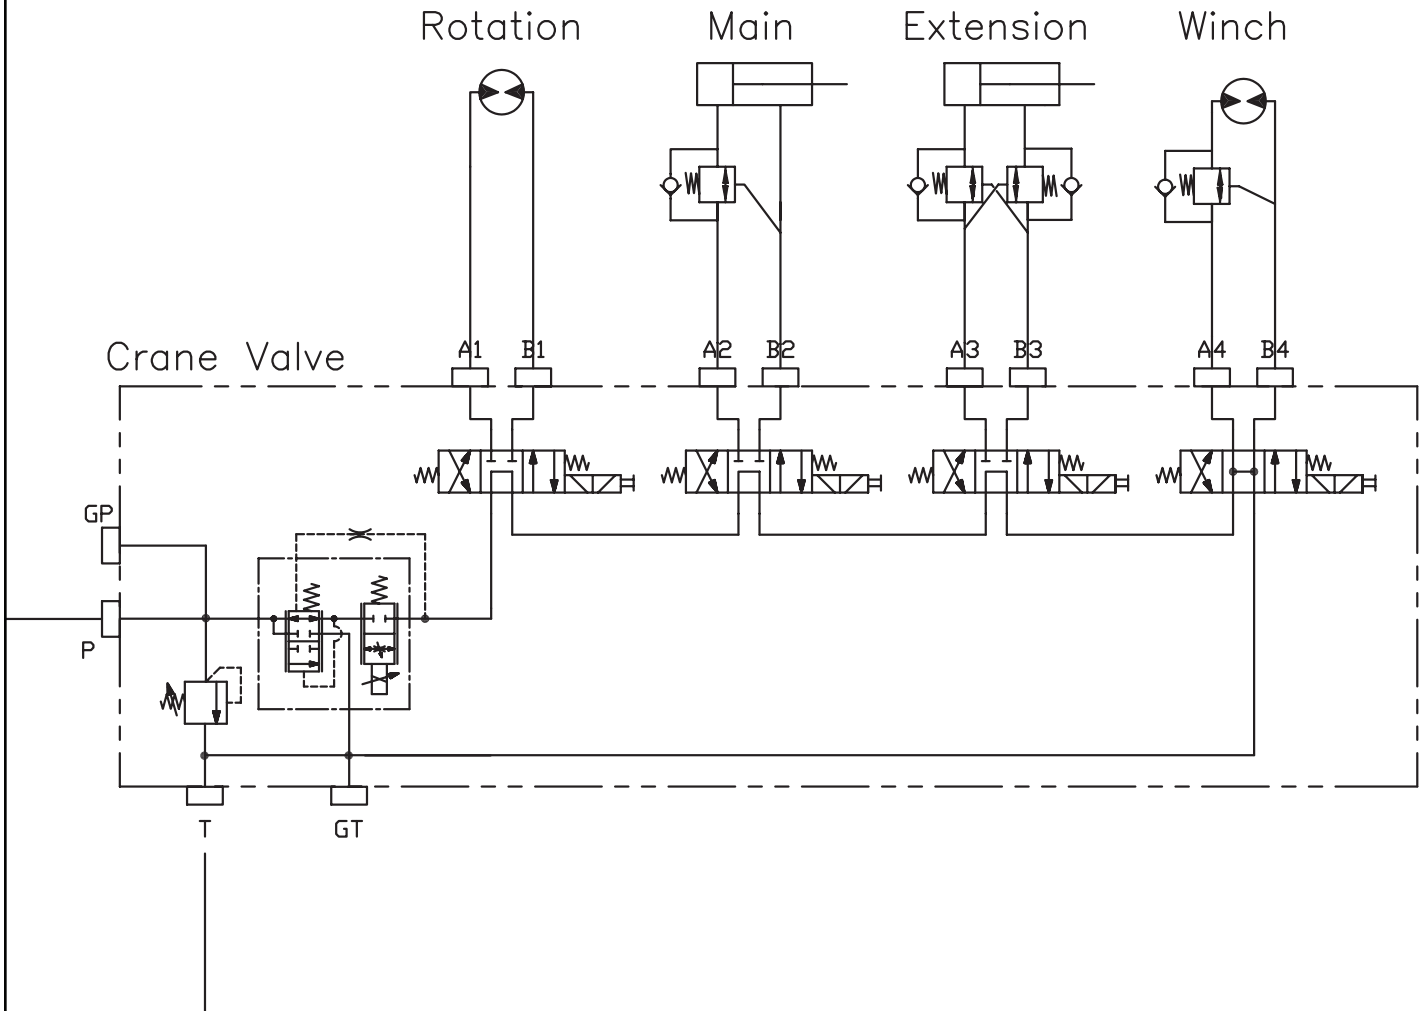

## Face Seal/O-Ring Size Chart

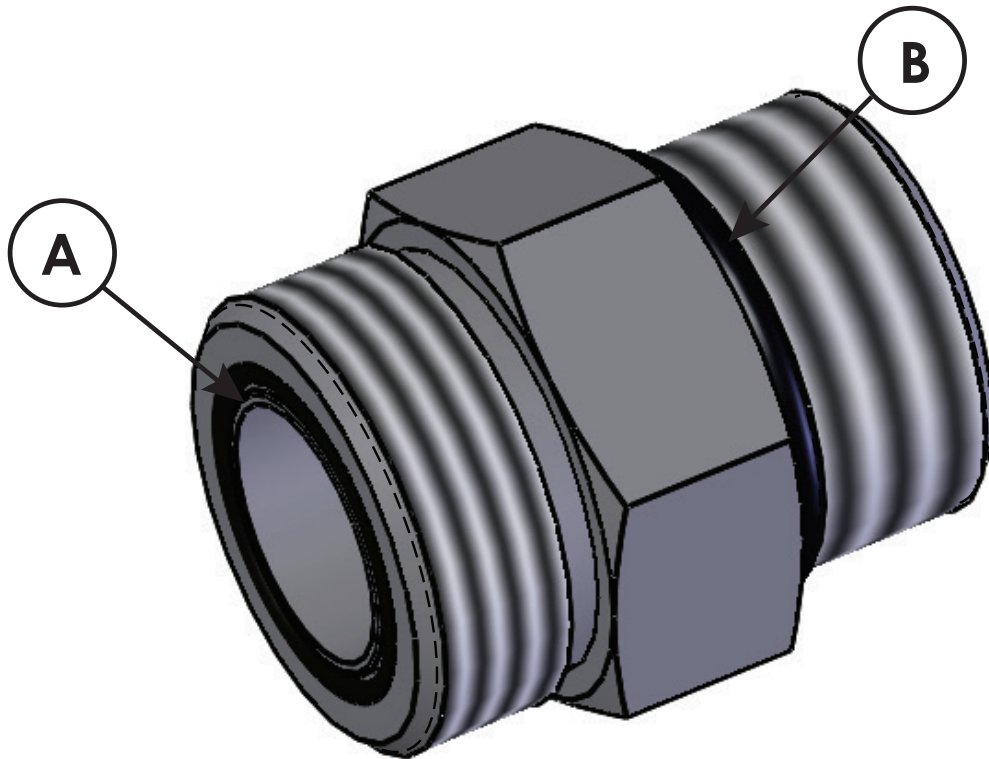

Hose Size	Fitting Size	Face Seal (A) Stellar® PN	O-ring Boss (B) Stellar® PN
1/4"	#4	C2027	D1245
3/8"	#6	C2028	D1246
1/2"	#8	C2029	D1247
5/8"	#10	32223	D1248
3/4"	#12	D1244	D1249
1"	#16		D1250

# Stability Procedure

## Definition of Stability for the Stellar Telescopic Crane Products:

A truck is stable until the load cannot be lifted off the ground with the winch, without tipping over the truck. Every Stellar crane installed must be tested for stability to determine the actual load capacity of the final truck package. The actual test data must be recorded and supplied with the truck at the time of in-service and should be kept with the truck at all times. The following procedure will test the truck package for stability and will provide a stability capacity chart. The load limit information shown on the stability capacity chart is formulated on 85% tipping.

## Set Up:

1. Locate the truck on a test course in position for loading and engage travel brakes.
2. Set stabilizers so that they make contact with firm, level footing.
3. Operate the crane under partial load to assure operator proficiency and proper machine function.
4. Put the radio into Stability Test Mode:
  - A. Push the middle four switches up and hold until "STB" appears on the screen (approximately 5 seconds.)



- B. At this point, the crane will have enough capacity to handle the weight for the stability test.
- C. The radio will timeout of stability mode after 30 minutes or when the E-Stop button is pushed.

*Note: The radio can only be put into stability mode five times. After that, the radio would have to be returned to Stellar to be reprogrammed to allow additional stability testing. All other radio functions will work properly even if stability mode is not available.*

# Stability Procedure Continued...

## 6521 Stability Data


**Max Horizontal Reach:** 252" (From the center of rotation to boom tip)

**Boost Stability Test Weight:** 1980 lbs.

**Non-Boost Stability Test Weight:** 1680 lbs.

## Test Procedure

1. Rotate the crane into Zone 1 position.
2. With the crane fully retracted and the boom horizontal, winch the test weight off the ground. Note: Keep weight within six inches of the ground at all times.
3. Extend the boom outward until full extension has been reached or until the truck becomes unstable (Again, use the winch to keep the weight within six inches of the ground.)
4. If the boom goes full extension without becoming unstable, the crane is termed stable for this zone and 100% can be written in the Zone 1 data box.
5. If the truck becomes unstable prior to going full extension, retract the boom until the truck becomes stable and measure the horizontal reach in this position (center of rotation to boom tip). This is the stable horizontal reach for this zone. Stable horizontal reach divided by Maximum horizontal reach multiplied by 100 equals the percentage of rated capacity for this zone. Use the following formula to determine the percentage of rated capacity:

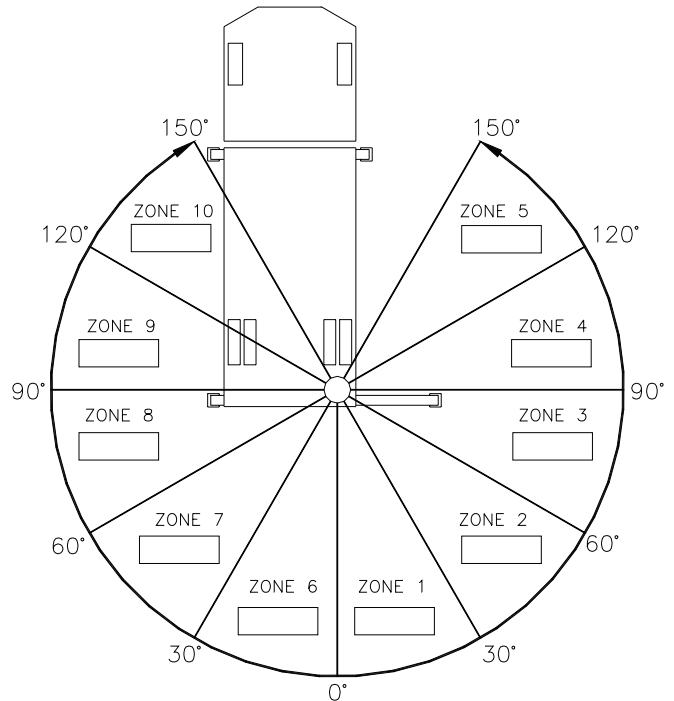

$$\frac{\text{Stable Horizontal Reach}}{\text{Max Horizontal Reach}} \times 100 = \text{Percentage of Rated Capacity}$$

6. Record this number in the data box for Zone 1. This is the revised capacity due to stability for this zone.
7. Repeat this procedure for each zone until the worksheet is completed.
8. This is the revised capacity based on stability of this package.

## Crane Load Level Indicator


Stellar® Cranes are shipped with a load level indicator that is used to determine if the truck is level (side to side) before using the crane to pick/move a load. This level should be installed in the isolated crane compartment of the body. If level indicator is missing or damaged, please contact Stellar Customer Support for a replacement.



PN 76483



# Decal Placement - PN 68169

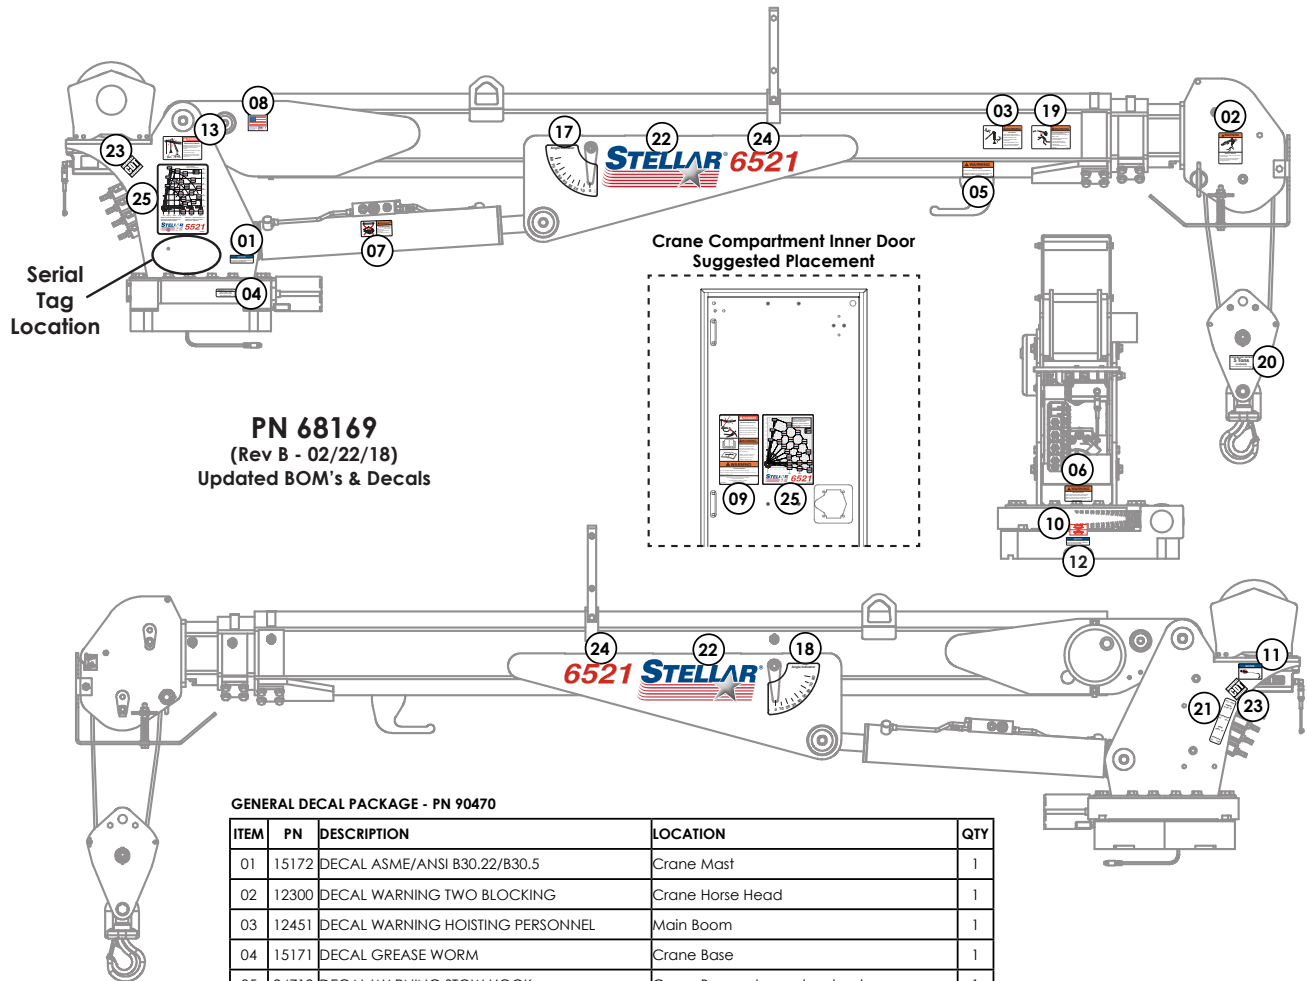

**PN 68169**  
(Rev B - 02/22/18)  
Updated BOM's & Decals

## GENERAL DECAL PACKAGE - PN 90470

ITEM	PN	DESCRIPTION	LOCATION	QTY
01	15172	DECAL ASME/ANSI B30.22/B30.5	Crane Mast	1
02	12300	DECAL WARNING TWO BLOCKING	Crane Horse Head	1
03	12451	DECAL WARNING HOISTING PERSONNEL	Main Boom	1
04	15171	DECAL GREASE WORM	Crane Base	1
05	24712	DECAL WARNING STOW HOOK	Crane Boom above stow hook	1
06	25159	DECAL WARNING MANUAL OVERRIDES	Under Valve Bank	1
07	28256	DECAL WARNING OVERLOAD DEVICE	Main Cylinder	1
08	35234	DECAL STELLAR MADE IN THE USA	Main Boom	1
09	93936	DECAL SAFETY & SERVICE MECH BODY DOOR	Crane Compartment	1
10	4188	DECAL ROTATION ALIGNMENT	Crane Base	1
11	73929	DECAL PRESSURE WASH	Crane Mast	1
12	9188	DECAL ROTATE/GREASE	Crane Base	1
13	C1179	DECAL DANGER ELECTROCUTION SMALL	Crane Mast	1
14*	C4545	DECAL DANGER ELECTROCUTION LARGE	Four corners of the body/chassis	4
15*	C5910	DECAL STELLAR 4x9.5	Suggested: Rear body/tailgate	1
16*	C5911	DECAL STELLAR 2x4.5	Suggested: Side corners of body	3
17	D1196	DECAL ANGLE INDICATOR CS	Main Boom	1
18	D1197	DECAL ANGLE INDICATOR SS	Main Boom	1

## 6521 DECAL PACKAGE - PN 94715


ITEM	PN	DESCRIPTION	LOCATION	QTY
19	12452	DECAL WARNING MANUAL EXT	Main Boom	1
20	38472	DECAL SNATCH BLOCK 5 TON	Snatch Block	1
21	41068	DECAL VB CONTROL MECH CRANE	On side of Crane Mast	1
22	52681	DECAL STELLAR LOGO 6.5 X 18	Main Boom (Both Sides)	2
23	54588	DECAL CDT 2.00 x 2.00	Crane Mast (Both Sides)	2
24	68170	DECAL IDENTIFICATION 6521	Main Boom (Both Sides)	2
25	94740	DECAL CAPACITY 6521	Main Boom and Crane Compartment	2
26*	C4795	DECAL WARNING STABILIZERS	Stabilizers	2

\*Not Shown

**This page intentionally left blank.**

# Chapter 3 - Assembly Drawings

## Base Assembly - PN 50364

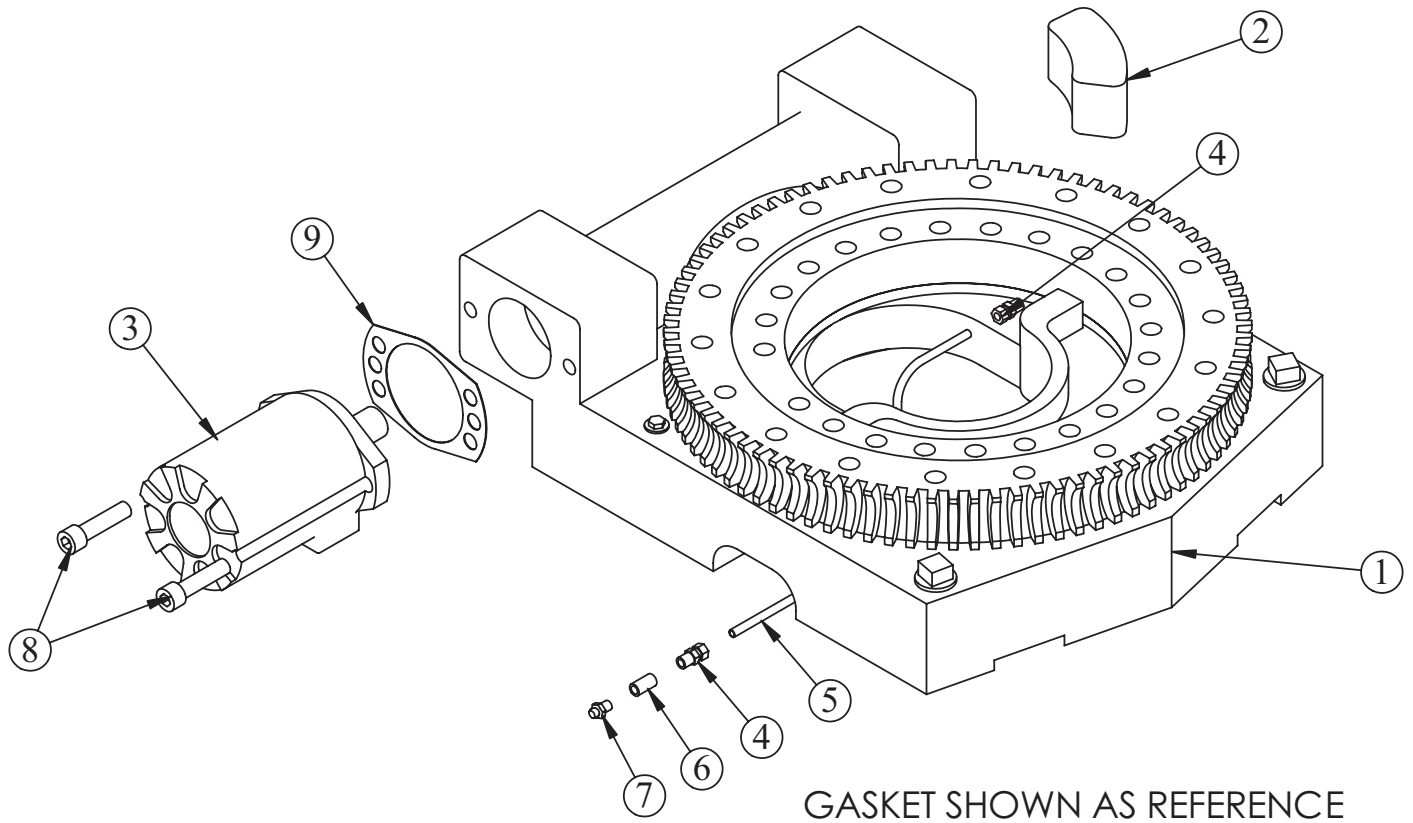


### PN 50364

ITEM	PART	DESCRIPTION	QTY.
1	47869	BEARING SWING DRIVE CAST 6620 GEARTEK	1
2	11542	STOP 6620 400 SLIDE	1
3	C6069	MOTOR HYD ROSS MK080613AAAB	1
4	D1345	FTG CPRSN 0.12NPT/0.25 TUBE	2
5	D1810	TBE AIR SAEJ844 TYPE A .25 (RM)	2.5
6	22161	FTG 2-2 FP-FP COUPLER STRAIGHT BRASS	1
7	56589	ZERK 1/8 NPT STRAIGHT LONG THREAD	1
8	53495	CAP SCR 0.50-13X2.00 SH	2
9	21151	GASKET MOTOR 008-10056-1	1

NOTE: ITEM 1 INCLUDE GUARD & GUARD FASTENERS


# Gear Bearing - PN 47869

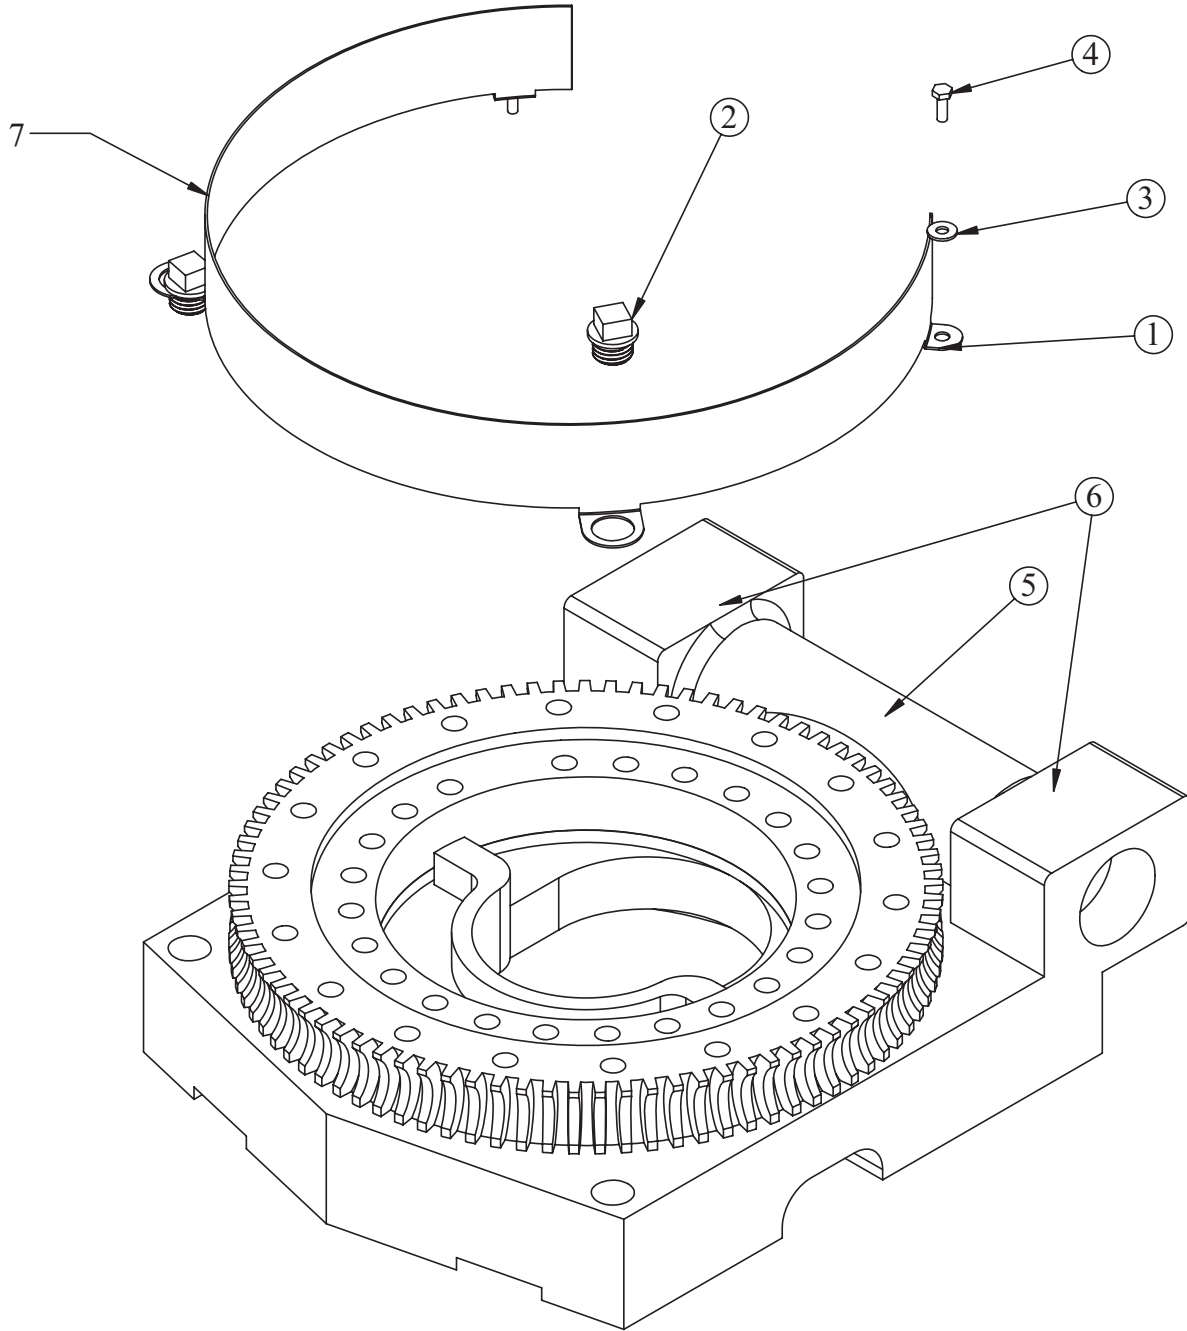

## PN 47869

ITEM	PART	DESCRIPTION	QTY.
1	44551PC	GUARD TTB 6620 CRANE LZR	1
2	13959	CAP SCR 1.00-8 X .63 PLASTIC	2
3	0340	WASHER 0.25 FLAT	2
4	0479	CAP SCR 0.25-20X0.75 HHGR5	2
5	55827	WORM PERFECTION 66/76	1
6	55829	BEARING AND SEAL KIT 66/76 PERFECTION CAST	1
7	20445	TRIM EDGE 0.06X0.56 AL 0.63 BULB	42"

# Mast Assembly - PN 72819

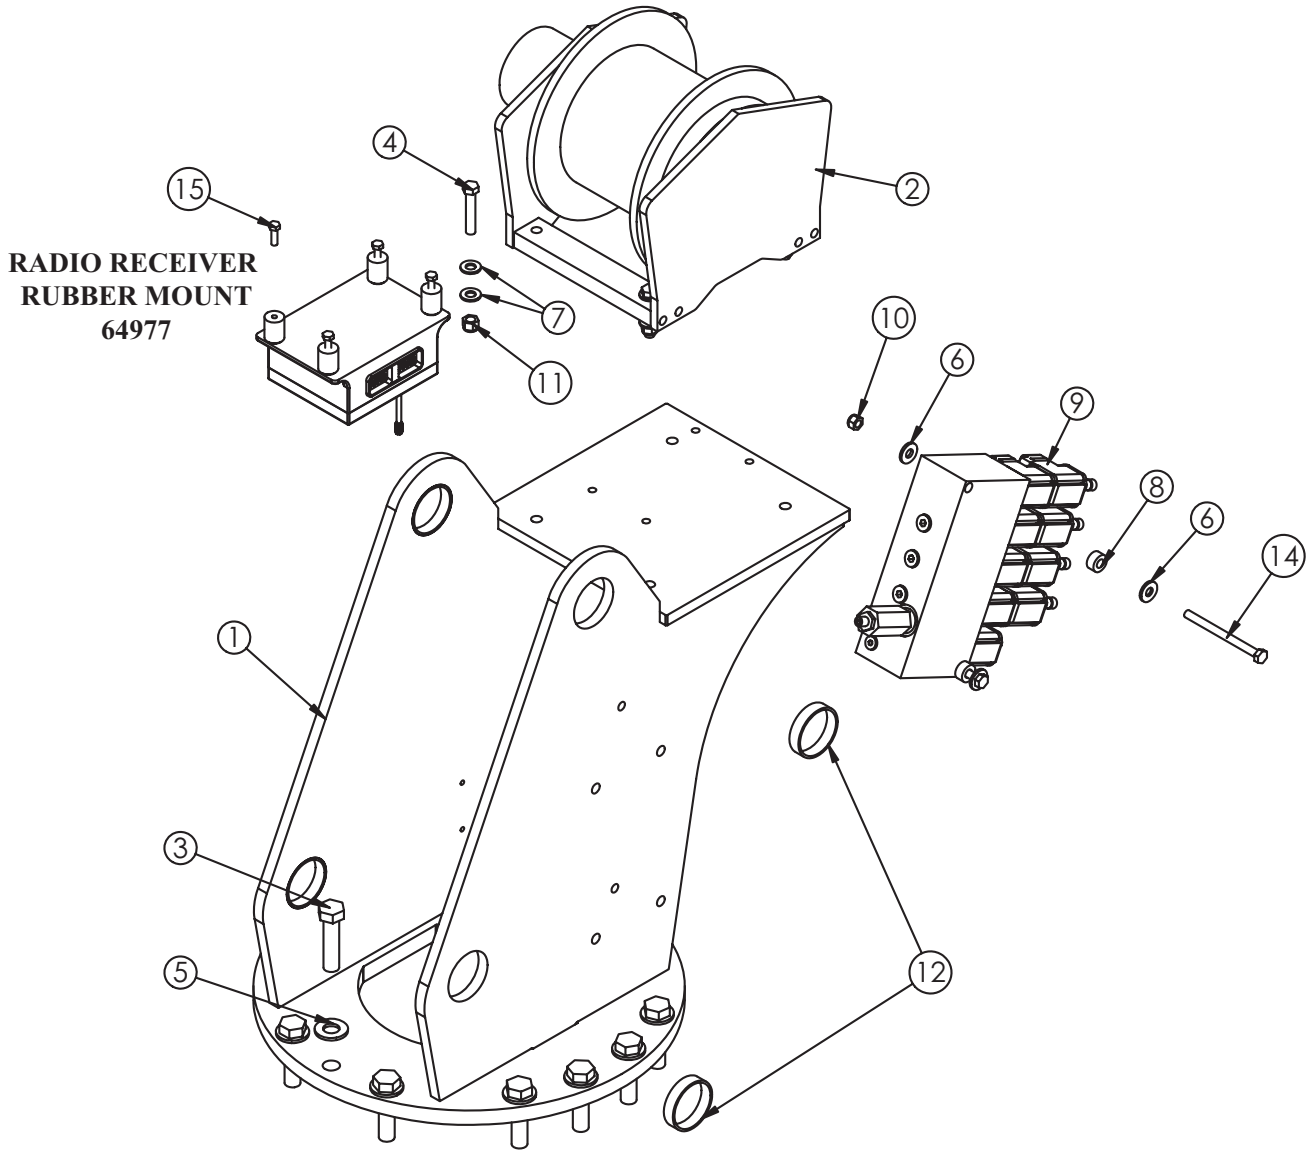


## PN 72819

ITEM	PART	DESCRIPTION	QTY.
1	72830	MAST 5521 V2	1
2	21528	WINCH 2500 5520 CRANE	1
3	66838	CAP SCR 0.63-11X2.50 HHGR8 W/RED PATCH	14
4	C1006	CAP SCR 0.38-16X2.00 HHGR8	4
5	C5902	WASHER 0.63 SAE FLAT YELLOW GR8	14
6	0343	WASHER 0.31 USS FLAT ZINC	5
7	C6353	WASHER 0.38 SAE FLAT YELLOW GR8	8
8	27813	COLLAR 0.38X0.75X0.38 UHMW	2
9	44530	VB 4 SECT W/PROP STER8GPM DEUTSCH	1
10	0342	NUT 0.31-18 HHGR5 NYLOC	2
11	56673	NUT 0.38-16 HHGR8 NYLOC	4
12	57594	BUSHING COMPOSITE MRP 2.00X.50	4
14	0491	CAP SCR 0.31-18X4.00 HHGR5	2
15	47425	CAP SCR 6MMX20MM HH 8.8(GR5)	4

# Main Boom Assembly - PN 72833

**NOTE: INCLINOMETER MOUNTS  
INSIDE THE BOOM. VIEW SHOWS  
POSITION OF INCLINOMETER**

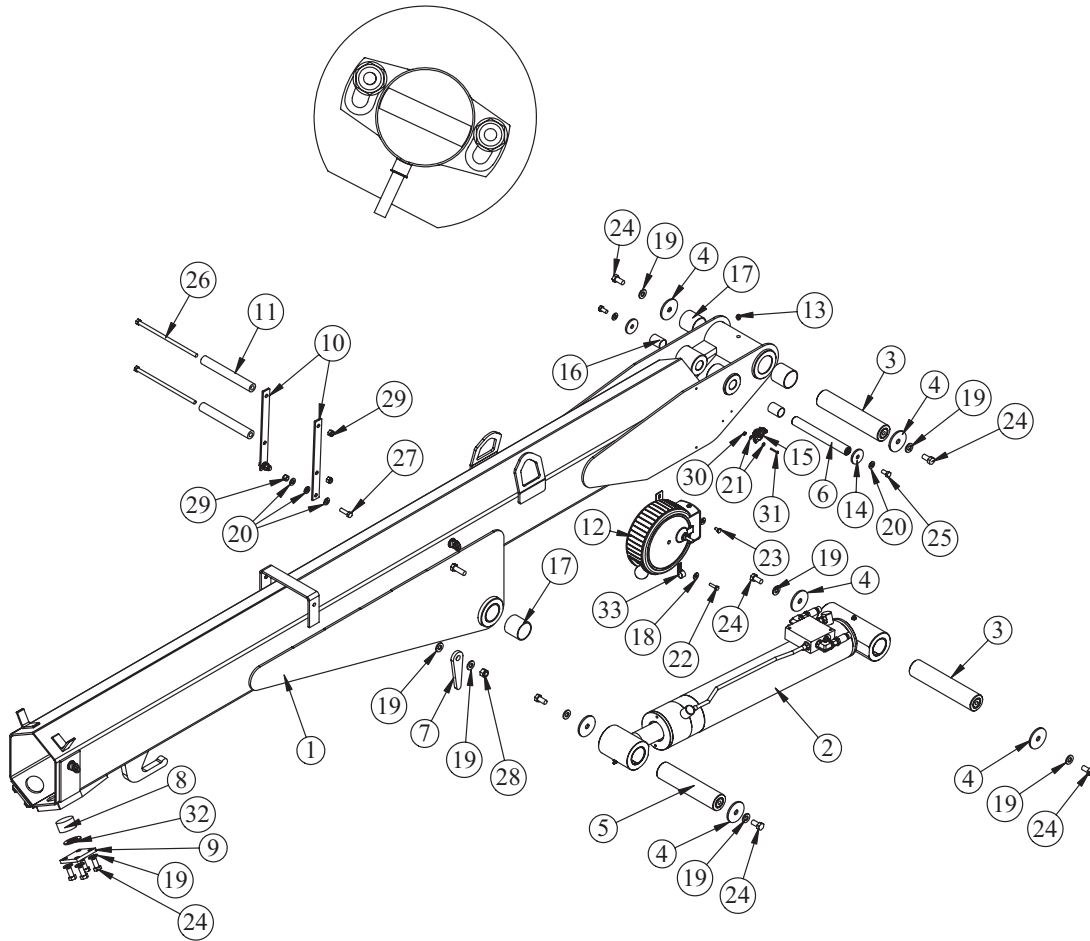


## PN 72833


ITEM	PART	DESCRIPTION	QTY.	ITEM	PART	DESCRIPTION	QTY.
1	57287	INNER BOOM 5521	1	15	53493	INCLINOMETER 60 DEG	1
2	78434	CYLINDER ASM 4.00X22.50	1	16	0068	BUSHING BPC16DXR24 1.00X1.50	2
3	26213CR	PIN 2.00X9.63 D&T	2	17	4381	BUSHING BPC32DXR32 2.00X2.00	4
4	9142	PIN CAP 0.56X2.50X0.19 YZ	6	18	0340	WASHER 0.25 USS FLAT	2
5	9711CR	PIN 2.00X8.88 D&T	1	19	D0790	WASHER 0.50 SAE FLAT YELLOW GR8	18
6	9712CR	PIN 1.00X8.38 SR/D&T	1	20	C6353	WASHER 0.38 SAE FLAT YELLOW GR8	8
7	D1194	PLATE ANGLE INDICATOR	2	21	18765	WASHER #6 SAE FLAT	4
8	9363	WEAR PAD 1.12X2.00 RND NYLATRON	2	22	0480	CAP SCR 0.25-20X1.00 HHGR5	1
9	9545	PLATE WEAR PAD SUPPORT	2	23	0478	CAP SCR 0.25-20X0.50 HHGR5	1
10	69470	BRKT ROPE GUIDE 4421	2	24	10172	CAP SCR 0.50-13X1.00 HHGR8	14
11	27720	SPACER ROPE GUIDE 6620 UHMW	2	25	9843	CAP SCR 0.38-16X0.75 HHGR8	2
12	72602	CORD REEL ASM 15/21 FT CRANE	1	26	12168	CAP SCR 0.38-16X9.00 HHGR5	2
13	c1592	ZERK 1/8 NPT STRAIGHT	1	27	0335	CAP SCR 0.38-16X1.25 HHGR5	2
14	9320	PIN CAP 0.44X1.75X0.19 YZ	2	28	C6106	NUT 0.50-13 HHGR5 NYLOC	2
				29	0347	NUT 0.38-16 HHGR5 NYLOC	4
				30	D0076	NUT #6-32 HH NYLOC SS	2
				31	18618	SCREW #6-32X1.00 PHMS PH	2
				32	0425	MACHY WASHER 1.25ID 10GA	2
				33	C0078	CLAMP 0.38 BLK VINYL	1

# Extension Boom Assembly (2 Hyd) - PN 58290

PN 58290

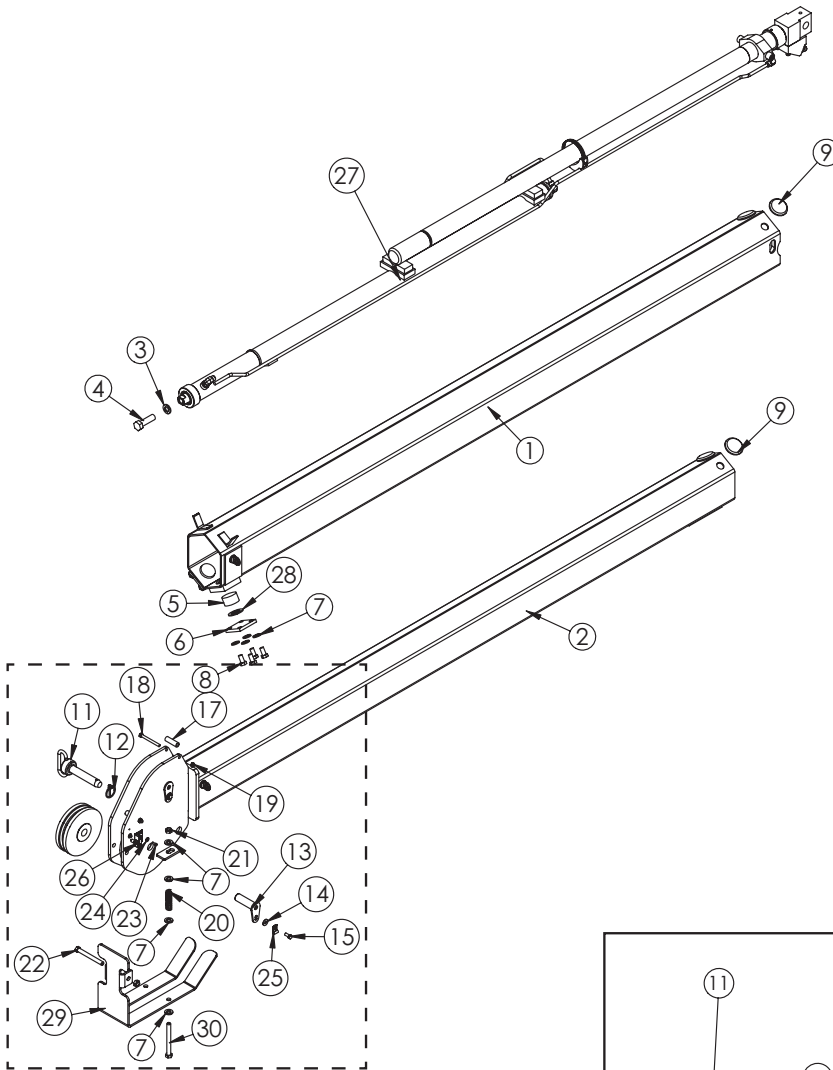



ITEM	PART	DESCRIPTION	QTY.
1	57307	EXT BOOM 1ST 5521	1
2	51117	EXT BOOM 6620 2ND CRADLE A2B	1
3	C6219	WASHER 0.75 SAE FLAT YELLOW GR8	1
4	4974	CAP SCR 0.75-10X2.50 HHGR8 ZY	1
5	9363	WEAR PAD 1.12X2.00 RND NYLATRON	2
6	9545	PLATE WEAR PAD SUPPORT	2
7	D0790	WASHER 0.50 FLAT GR8	16
8	10172	CAP SCR 0.50-13X1.00 HHGR8 ZY	8
9	6252	WEAR PAD 0.34X2.50 RND NYLATRON	4
10	11545	SHEAVE 6620 6.75 DIA .31R/1.94 THK	2
11	12824	PIN HITCH 1.00X4.50	1
12	5753	PIN 0.19X1.56 LYNCH	1
13	9706ZP	PIN TEAR DROP 1.00X3.25	2
14	0343	WASHER 0.31 USS FLAT ZINC	2
15	0420	CAP SCR 0.31-18X0.75 HHGR5	1
16	0484	CAP SCR 0.31-18 X 0.50 HHGR5	1
17	27719	SPACER BOOM TIP 6620 UHMW	2
18	12178	CAP SCR 0.31-18X3.25 HHGR5	2
19	0342	NUT 0.31-18 HH NYLOC	2
20	27710	SPRING ANTI 2 BLOCK CRADLE A2B	2
21	C6106	NUT 0.50-13 HHGR5 NYLOC	3
22	0507	CAP SCR 0.50-13X4.50 HHGR5	1
23	31132	SCREW #10-24X0.50 SH SS	2
24	D0178	WASHER #10 SAE FLAT ZINC	2
25	31279	CLAMP 0.31 BLK VINYL	1
26	35105	SWITCH LIMIT E1117-B9111-6C	1
27	49316	CYLINDER EXT ASM 6620 2.0/2.0	1
28	0425	MACHY WASHER 1.25ID 10GA	2
29	51903	PLATE CRADDLE 6620/6628	1
30	C1000	CAP SCR 0.50-13X5.00 HHGR5	2

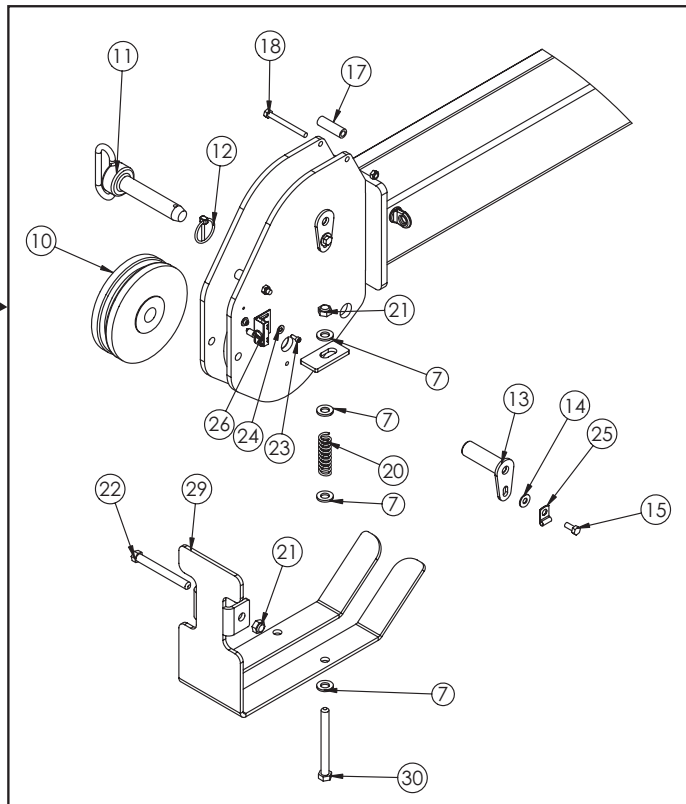

# Extension Boom Assembly (1 Hyd/1 Manual) - PN 59146


## PN 59146

ITEM	PART	DESCRIPTION	QTY.
1	57925	EXT BOOM 1ST 5521 1H1M	1
2	59147	EXT BOOM 6620 2ND CRADLE A2B	1
3	9363	WEAR PAD 1.12X2.00 RND NYLATRON	2
4	9545PC	PLATE WEAR PAD SUPPORT	2
5	D0790	WASHER 0.50 FLAT GR8	20
6	10172	CAP SCR 0.50-13X1.00 HHGR8 ZY	8
7	9991	WEAR PAD 0.19X2.50 RND NYLATRON	4
8	11545	SHEAVE 6620 6.75 DIA .31R/1.94 THK	2
9	12824	PIN HITCH 1.00X4.50	1
10	5753	PIN 0.19X1.56 LYNCH	2
11	9706ZP	PIN TEAR DROP 1.00X3.25	2
12	0343	WASHER 0.31 USS FLAT ZINC	2
13	0420	CAP SCR 0.31-18X0.75 HHGR5	1
14	0484	CAP SCR 0.31-18 X 0.50 HHGR5	1
15	27719	SPACER BOOM TIP 6620 UHMW	2
16	12178	CAP SCR 0.31-18X3.25 HHGR5	2
17	0342	NUT 0.31-18 HH NYLOC	2
18	27710	SPRING ANTI 2 BLOCK SUMMIT	2
19	C6106	NUT 0.50-13 HHGR5 NYLOC	3
20	0507	CAP SCR 0.50-13X4.50 HHGR5	1
21	31132	SCREW #10-24X0.50 SH SS	2
22	D0178	WASHER #10 SAE FLAT ZINC	2
23	31279	CLAMP 0.31 BLK VINYL	1
24	35105	SWITCH LIMIT E1117-B9111-6C	1
25	0425	MACHY WASHER 1.25ID 10GA	2
26	51903PC	PLATE CRADDLE 6620/6628	1
27	C1000	CAP SCR 0.50-13X5.00 HHGR5	2
28	57936	CYLINDER ASM 5521 MANUAL	1
29	9004	CAP SCR 0.50-13X1.75 HHGR8	4
30	57937	PIN HITCH 0.75X8.00	1

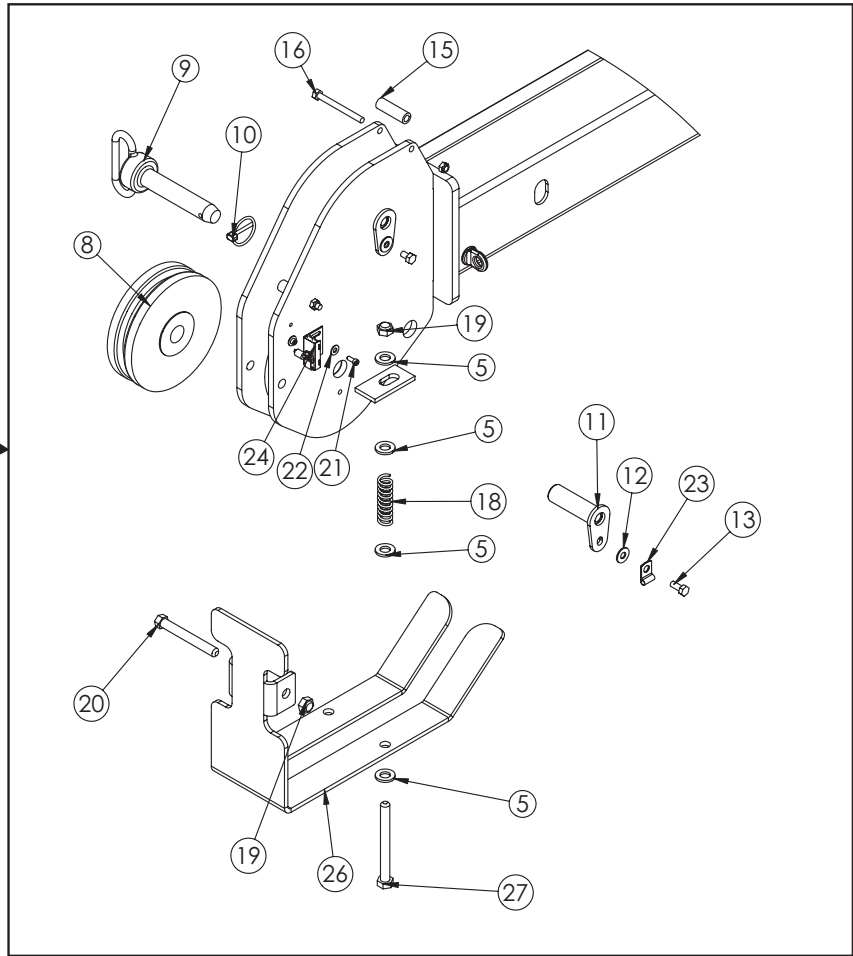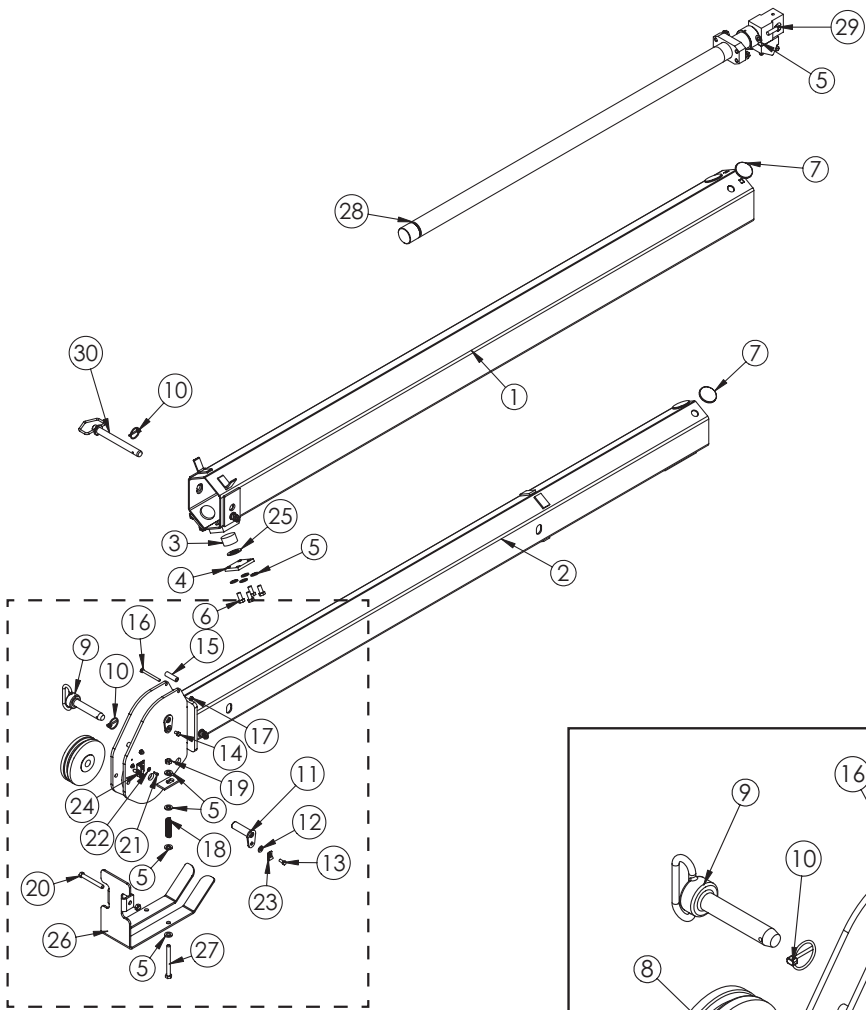




# Main Cylinder Assembly - PN 78434

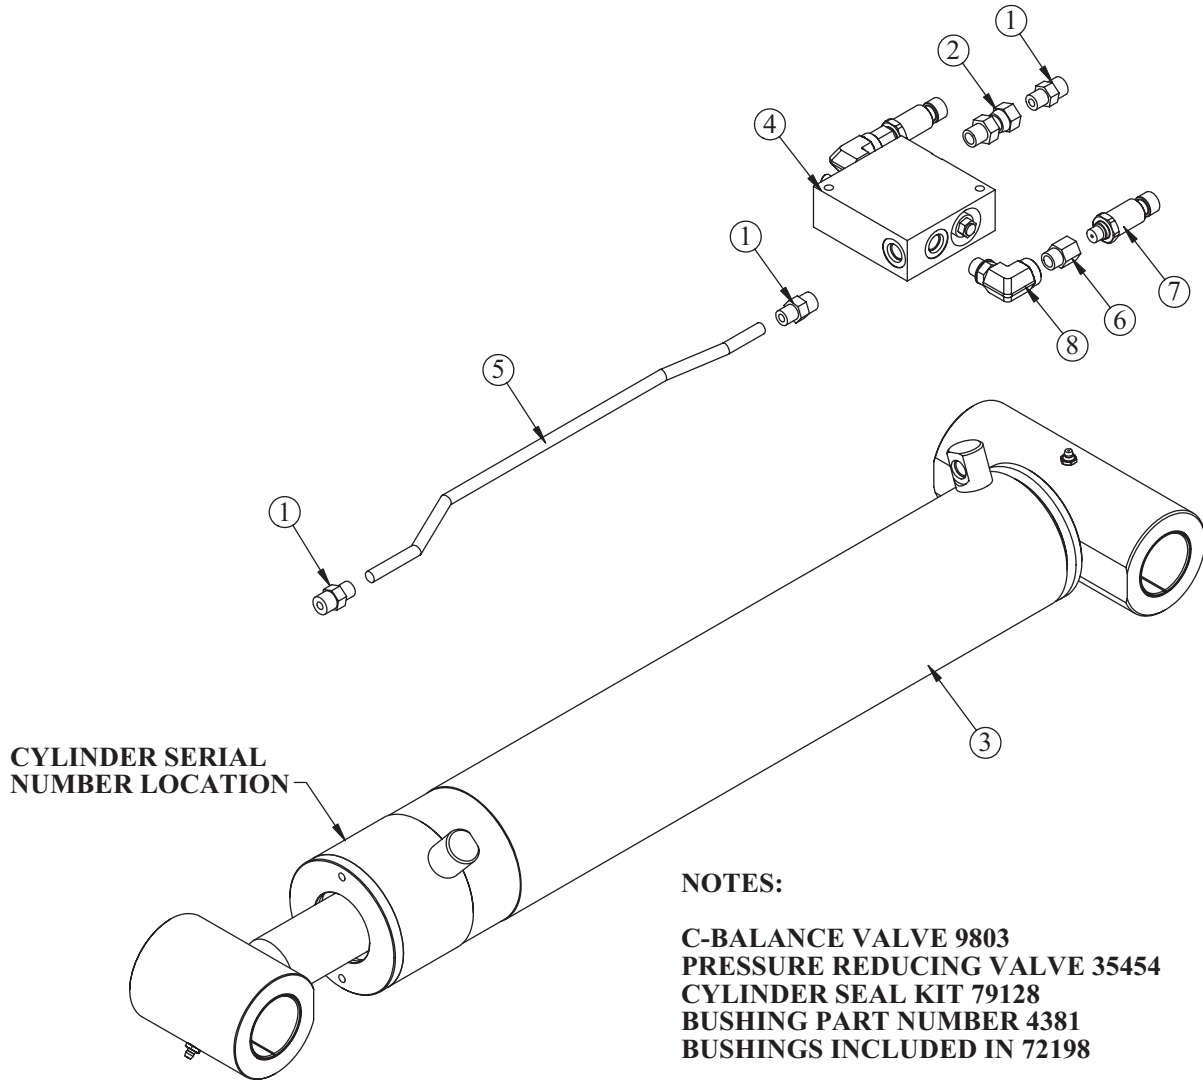

## PN 78434

ITEM	PART	DESCRIPTION	QTY.
1	0279	FTG 6-6 MFS-MORB STRAIGHT	3
2	33743	FTG 6-6 FFSS-MORB STRAIGHT	1
3	72198	CYLINDER 4.00X22.50	1
4	13080	MANIFOLD SINGLE T11A 3500 PSI	1
5	71460	TUBE ASM 0.38 X 16.72 12630 MAIN CYL	1
6	15111	FTG 6-4 MORB-FORB STRAIGHT REDUCER	2
7	28485	TRANSDUCER PRESSURE 5000 PSI	2
8	3861	FTG 6-6 MAORB-FORB 90	2


# Extension Cylinder Assembly (2 Hyd) - PN 49316

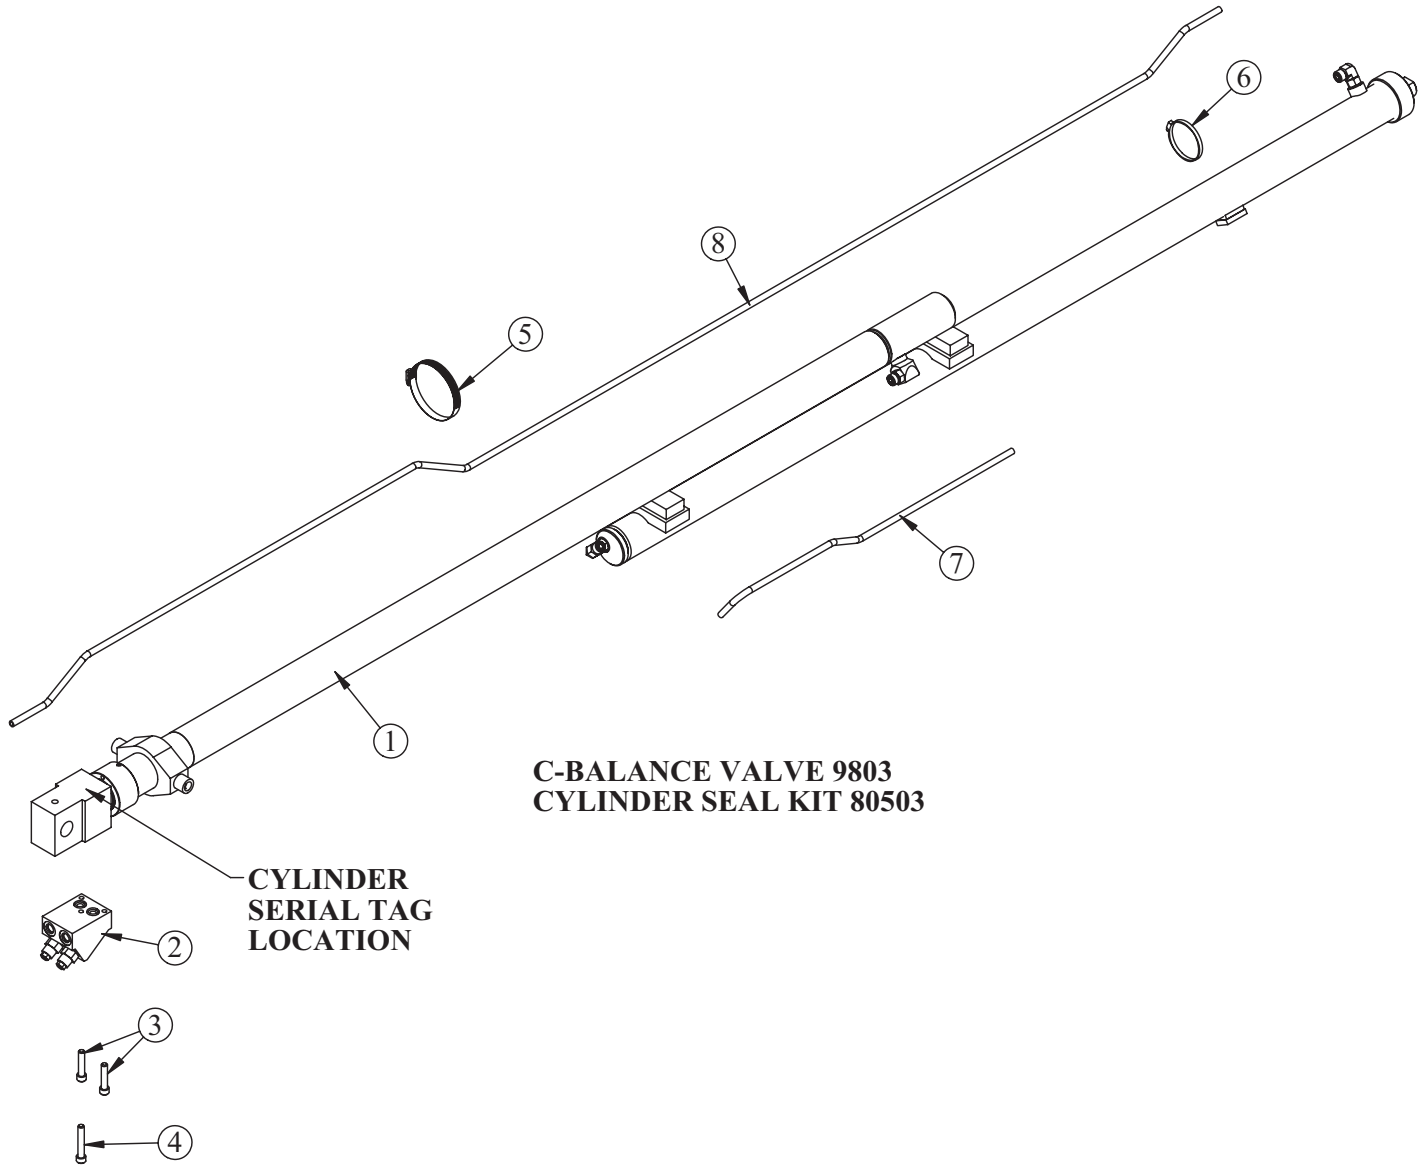

## PN 49316


ITEM	PART	DESCRIPTION	QTY.
1	37548	CYLINDER EXT 2 STAGE 2.0/2.0 PTD 60	1
2	14115	MANIFOLD ASM 6620 EXT CBBB-LJN-XVN	1
3	11882	CAP SCR 0.38-16X1.75 SH ZC	2
4	14601	CAP SCR 0.38-16X2.25 SH ZC	1
5	24729	HOSE CLAMP #52 3.00 - 3.75	1
6	D0655	HOSE CLAMP #36 WRM GEAR	1
7	87827	TUBE ASM 0.38X23.25 EXT CYL 7621/12621 YZ	1
8	88393	TUBE ASM 0.38X102.13 EXT CYL 7621/12621 YZ	1

# Extension Cylinder Assembly (1 Hyd/1 Manual) - PN 57936

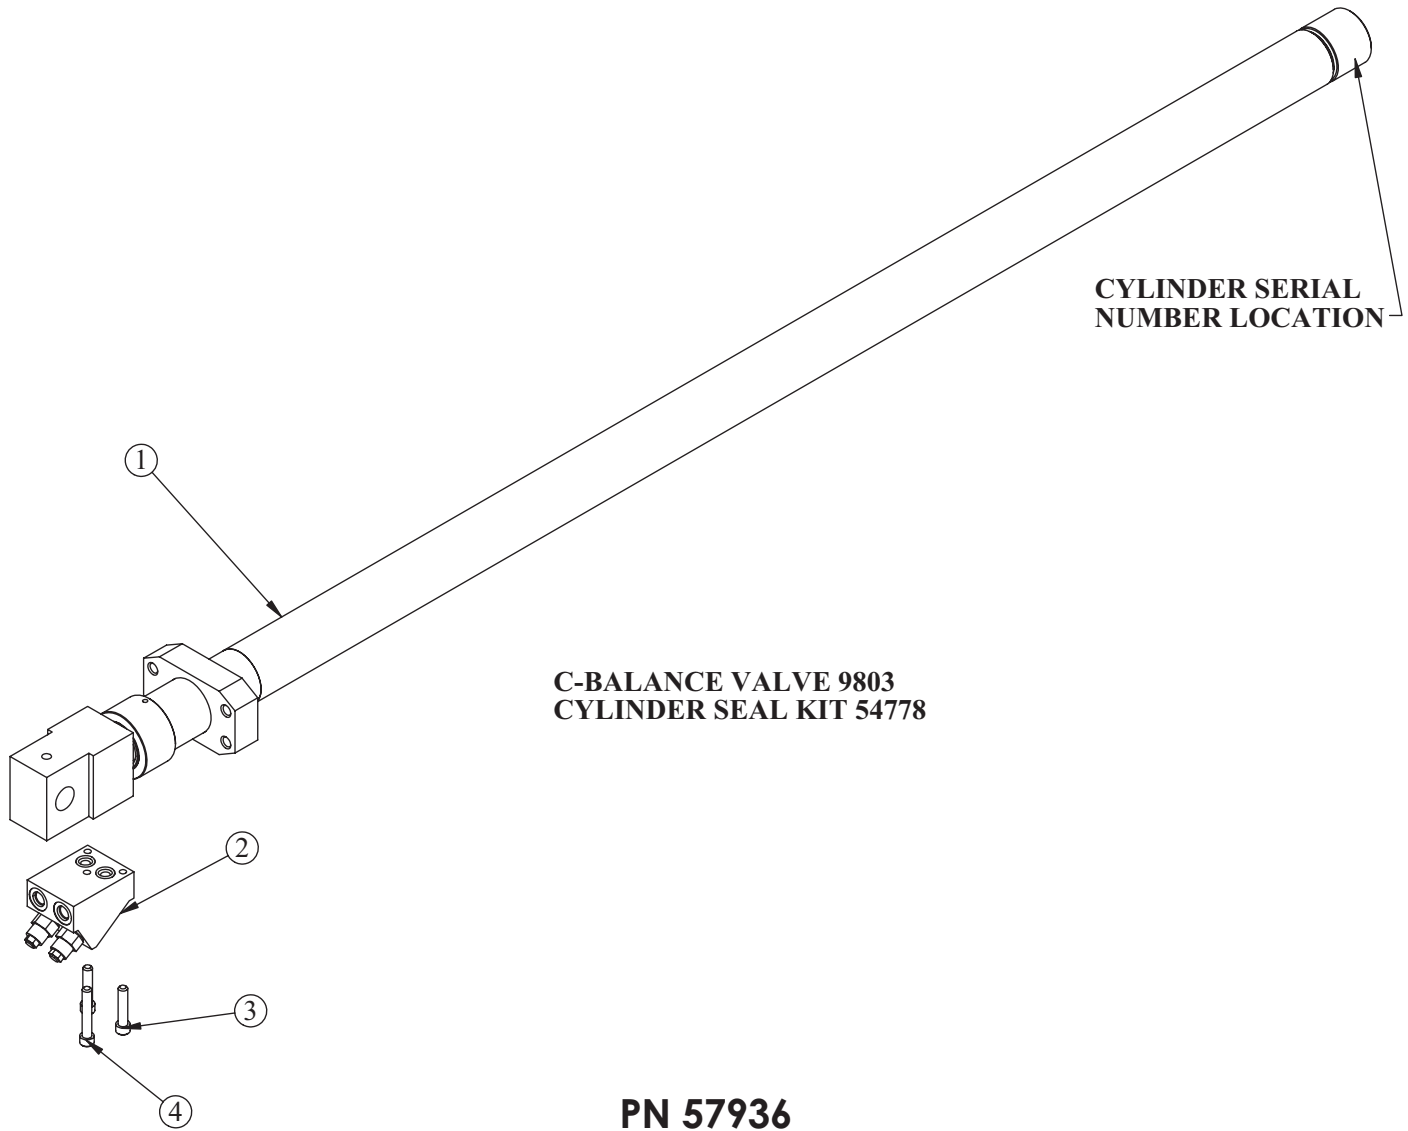

ITEM	PART	DESCRIPTION	QTY.
1	57932	CYLINDER 2.00X60.00 5521 MANUAL	1
2	14115	MANIFOLD ASM 6620 EXT CBBB-LJN-XVN	1
3	11882	CAP SCR 0.38-16X1.75 SH ZC	2
4	14601	CAP SCR 0.38-16X2.25 SH ZC	1


# Cable & Hook Assembly - PN 57597

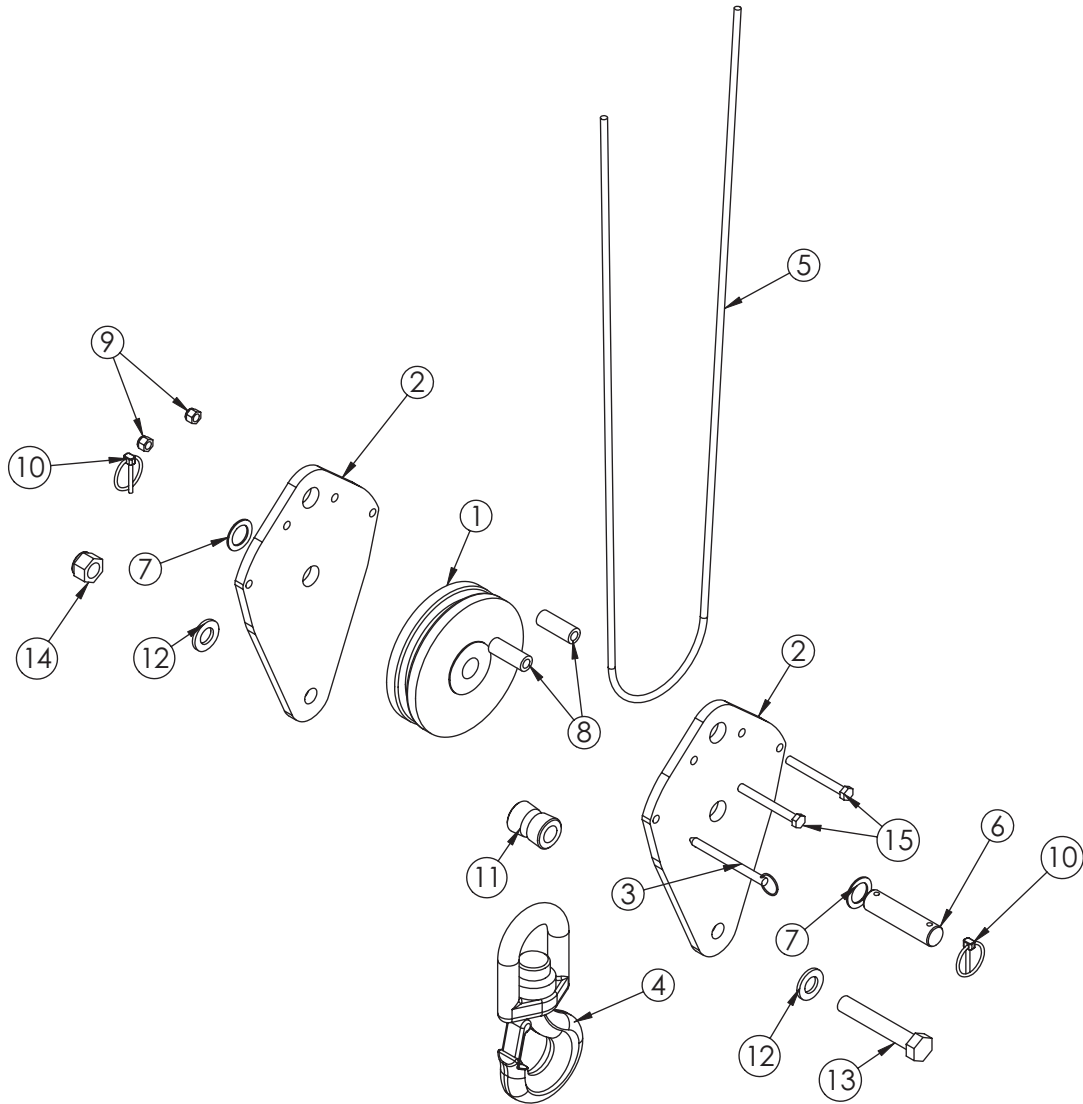

## PN 57597

ITEM	PART	DESCRIPTION	QTY.
1	11545	SHEAVE 6620 6.75 DIA .31R/1.94 THK	1
2	57596PC	PLATE SNATCH BLOCK 5521	2
3	13436	PIN .38X4.00 QUICK RELEASE	1
4	25831	HOOK 5 TON SWIVEL CROSBY 1028623	1
5	9610	WIRE ROPE 0.31 6X19 IWRC-XIP 90FT	1
6	39874ZP	PIN 1.00X4.06 COTTER	1
7	0867	MACHY WASHER 1.00ID 14GA	2
8	44643PC	COLLAR 0.44X0.75X2.00	2
9	0347	NUT 0.38-16 HHGR5 NYLOC	2
10	5753	PIN 0.19X1.56 LYNCH	2
11	39844	BUSHING V HOOK	1
12	C6219	WASHER 0.75 SAE FLAT YELLOW GR8	2
13	5841	CAP SCR 0.75-10X4.50 HHGR8	1
14	C0538	NUT 0.75-10 HHGR8 NYLOC	1
15	0531	CAP SCR 0.38-16X3.50 HHGR5	2

# Power Unit Assembly - PN 57939

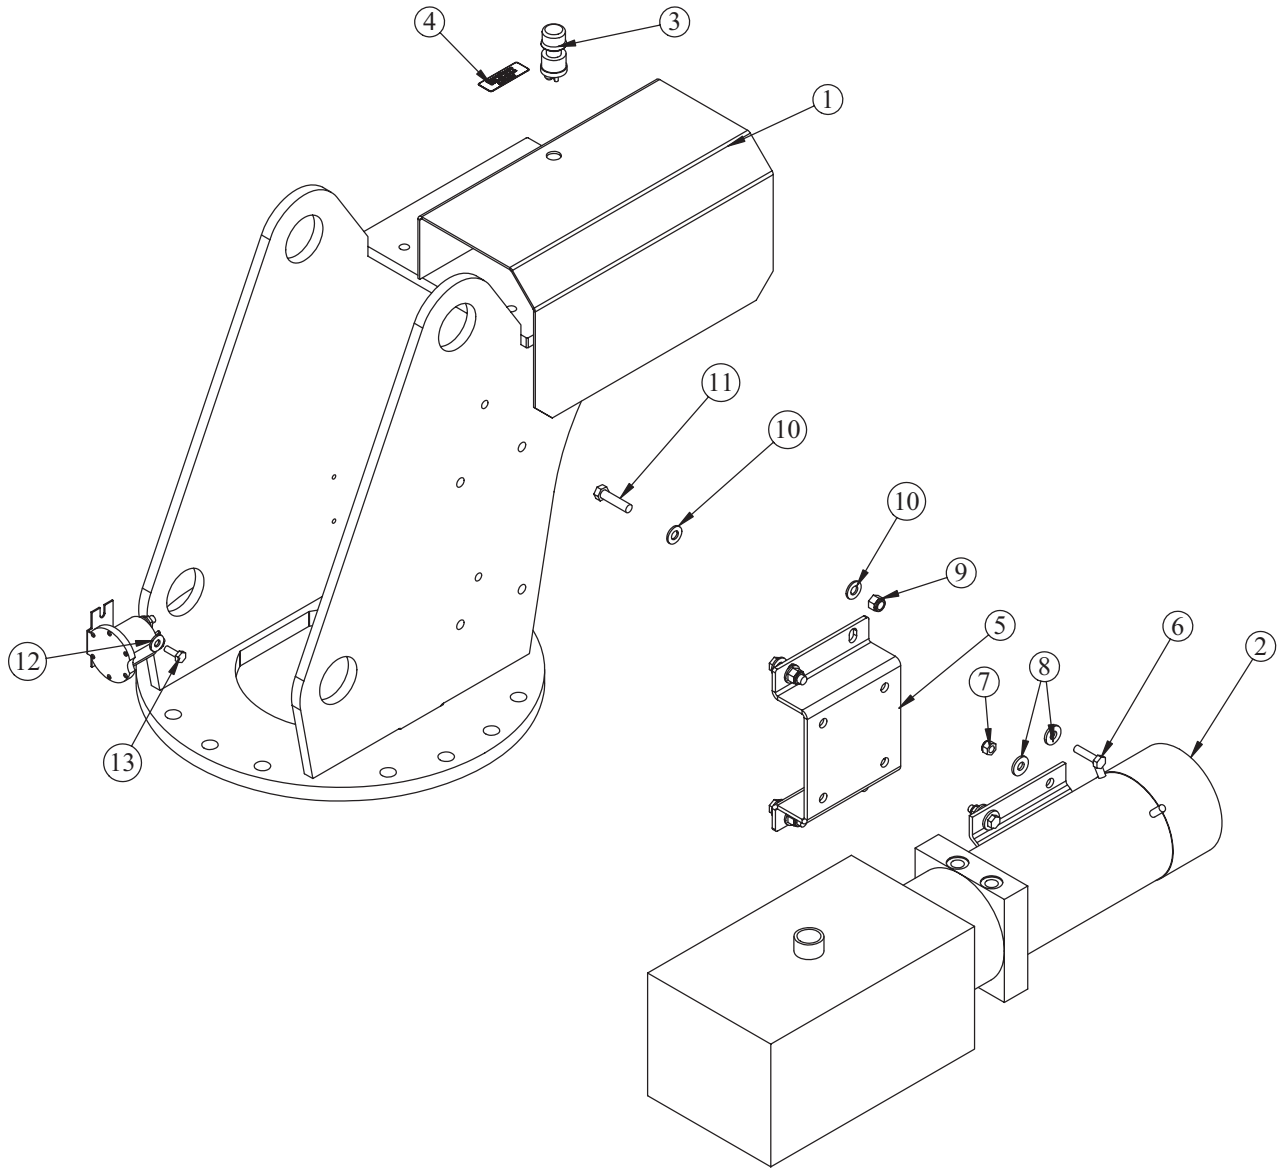

## PN 57939

ITEM	PART	DESCRIPTION	QTY.
1	19997	COVER POWER UNIT 5520	1
2	16994	POWER UNIT 12V 5520 HORIZ	1
3	17771	SWITCH PUSH BUTTON 9216-03	1
4	18472	DECAL MANUAL OPERATION 5520	1
5	59136	BRACKET POWER UNIT 5521	1
6	0485	CAP SCR 0.31-18X1.25 HHGR5	4
7	0342	NUT 0.31-18 HHGR5 NYLOC	4
8	0343	WASHER 0.31 USS FLAT	8
9	56673	NUT 0.38-16 HHGR8 NYLOC	4
10	C6353	WASHER 0.38 SAE FLAT YELLOW GR8	8
11	16962	CAP SCR 0.38-16X1.50 HHGR8	4
12	0340	WASHER 0.25 USS FLAT	2
13	0479	CAP SCR 0.25-20X0.75 HHGR5	2

### NOTES:

**SOLENOID 12V 24956**

**This page intentionally left blank.**

# Chapter 4 - Replacement Parts

---

Part Number	Description	Qty
C6069	Rotation Motor	1
25375	Relief Valve	1
35376	Seal Kit - Relief Valve	1
25381	Proportional Valve	1
25377	Solenoid Valve - Tandem G04571	3
25378	Solenoid Valve - Open G04591	1
25379	Seal Kit - Solenoid Valve	1
55126	Coil	8
13080	Manifold ASM - Main Lift Cylinder	1
9803	C-Balance Valve	2
11991	Plug - C-Balalance Valve	1
14115	Manifold ASM - Extension Cylinder	1
79128	Seal Kit - Main Lift Cyl	1
80503	Seal Kit - Extension Cyl	1
28485	Pressure Transducer (CDT Radio Systems)	2
53493	Inclineometer	1
37980	Hydraulic Pressure Gauge	1
12172	FTG 8-8 MFS-MFS Swivel Straight	1
12171	FTG 6-6 MFS-MFS Swivel Straight	1
11545	Sheave	3
9610	Wire Rope	1
12824	Pin Hitch 1.00 x 4.50	1
13436	Quick Release Pin .38 x 4.00	1
35105	Limit Switch	1
72602	Cord Reel	1
18468	12v Solenoid - 12v Hydraulic System	1
36435	200A Fuse	1
17771	Push Button Switch	1
44030	Start Solenoid Power Unit Motor	1
56648	O-Ring Power Unit Reservior	1
44025	Power Unit Fill Cap	1
25831	Hook	1



Subject to Change without Notification.  
© 2018 Stellar Industries, Inc.